

Installation manual  
(Original instructions)

EN

**Panasonic**<sup>®</sup>

N420975A - Rev.00 - 04/2025

**Aquarea Vent**

Series P-VEN\*\*VE5

---

*First of all, we would like to thank you for having chosen one of our units.*

*As you will realise, you have made a winning choice by purchasing a product that represents the state of the art in domestic air-conditioning technology.*

*Thanks to the product you have purchased and by following the suggestions in this manual, you will benefit from optimal environmental conditions with the lowest possible energy investment.*

## Compliance

This unit complies with European directives:

- Low Voltage Directive 2014/35/EU by transposition of the following technical standards: EN 60335-1:2012 + EN 60335-2-80:2003
- EMC Directive 2014/30/EU, by transposition of technical standards: EN 55014-1:2021 + EN 55014-2:2021
- + EN IEC 61000-3-2:2019+A1:2021 + EN 61000-3-3:2013+A2:2021
- RoHS Directive 2011/65/EU by transposition of the following technical standards: EN IEC 63000:2018
- European ErP Ecodesign Regulation No. 1254/2014

## Markings



# CONTENTS

Compliance . . . . .	2	5.4 Connections . . . . .	32
<b>1. General information . . . . .</b>	<b>4</b>	5.5 Functions . . . . .	33
1.1 About the manual . . . . .	4	<b>6. Start-up . . . . .</b>	<b>36</b>
1.2 General warnings . . . . .	5	6.1 Preliminary warnings . . . . .	36
1.3 Basic safety rules . . . . .	5	6.2 First start-up . . . . .	36
1.4 Disposal . . . . .	6	6.3 Plant delivery . . . . .	37
<b>2. Product introduction . . . . .</b>	<b>7</b>	6.4 Switching off for extended periods . . . . .	37
2.1 Identification . . . . .	7	<b>7. Maintenance . . . . .</b>	<b>38</b>
2.2 Destination of use . . . . .	7	7.1 Routine maintenance . . . . .	38
2.3 Description of the appliance . . . . .	7	<b>8. Faults and remedies . . . . .</b>	<b>41</b>
2.4 List of external components . . . . .	8	8.1 Preliminary warnings . . . . .	41
2.5 List of internal components . . . . .	8	8.2 Troubleshooting table . . . . .	41
2.6 Compatible accessories . . . . .	9	8.3 Alarm table and card flashes . . . . .	42
<b>3. Installation . . . . .</b>	<b>10</b>	<b>9. Technical information . . . . .</b>	<b>43</b>
3.1 Preliminary warnings . . . . .	10	9.1 Technical data . . . . .	43
3.2 Reception . . . . .	10	9.2 Performance curves . . . . .	45
3.3 Dimensions and weights with packaging . . . . .	10	9.3 Heat recovery . . . . .	49
3.4 Handling with packaging . . . . .	10	9.4 Operating limits . . . . .	57
3.5 Storage . . . . .	11	9.5 Dimensions . . . . .	58
3.6 Unpacking . . . . .	11	9.6 Ecodesign classification . . . . .	61
3.7 Handling without packaging . . . . .	12	<b>10. Accessories . . . . .</b>	<b>65</b>
3.8 Installation site . . . . .	12	10.1 Electrical resistance . . . . .	65
3.9 Minimum installation distances . . . . .	13	10.2 Valves for water coils . . . . .	68
3.10 Positioning . . . . .	13		
3.11 Condensate drain connection . . . . .	15		
3.12 Aeraulic connections . . . . .	16		
3.13 Electrical connections . . . . .	19		
<b>4. Wall control command Code PCZ-EEB749 . . . . .</b>	<b>22</b>		
4.1 Interface . . . . .	22		
4.2 Installation . . . . .	22		
4.3 Connection diagram . . . . .	24		
4.4 Connections . . . . .	25		
4.5 Functions . . . . .	26		
<b>5. Wall control command Code PCZ-EFB749 . . . . .</b>	<b>29</b>		
5.1 Interface . . . . .	29		
5.2 Installation . . . . .	29		
5.3 Connection diagram . . . . .	31		

# 1. GENERAL INFORMATION

## 1.1 About the manual

This manual was written to provide all the explanations for the correct management of the appliance.

- ⚠ This instruction manual is an integral part of the appliance and must therefore be kept in a safe place and must ALWAYS accompany the appliance even if it is passed on to another owner or user, or transferred to another plant. If it is damaged or lost, download a copy from the website.
- ⚠ Read this manual carefully before proceeding with any operation and follow the instructions in the individual chapters.
- ⚠ Specific warnings are given in each chapter of the document and should be read before starting operations.
- ⚠ The manufacturer accepts no liability for damage to persons or property resulting from failure to observe the regulations contained in this booklet.
- ⚠ This document is confidential under the terms of the law and may not be reproduced or passed on to third parties without the express authorisation of the Manufacturer.

### Editorial pictograms

The pictograms in the following chapter provide quick and unambiguous information necessary for the correct and safe use of the machine.

#### Related to safety

##### ⚠ High risk warning (bold text)

- The operation described above presents a risk of serious physical injury, fatality, major damage to the appliance and/or to the environment if not carried out in compliance with safety regulations.

##### ⚠ Low risk warning (plain text)

- The operation described above presents a risk of minor physical injury or minor damage to the appliance and/or to the environment if not carried out in compliance with safety regulations.

##### ⊘ Prohibition (normal text)

- Marks actions that are prohibited.

##### ⓘ Important information (bold text)

- This indicates important information that must be taken into account during the operations.

#### In the texts

##### Purpose of the actions

- ▶ Actions required
  - Expected responses following an action*

- Lists

#### In the figures

- 1 The numbers indicate the individual components.

A Capital letters indicate a combination of components and dimensions.

- ① The white numbers in black marks indicate a series of actions to be carried out in sequence.
- Ⓐ The black letter in white identifies an image when there are several images in the same figure.

### Pictograms on the product

Symbols are used in some parts of the appliance:

#### Related to safety



##### Read the instruction manual

- Read the instructions carefully before performing any operation on the appliance.



##### Instruction manual

- Read the information available in the technical documentation of the appliance.



##### Attention electrical hazard

- Warns relevant personnel of the presence of electricity and the risk of electric shock.

### Recipients

#### User

Non-expert person capable of operating the product in safe conditions for people, for the product itself and the environment, interpreting an elementary diagnostic of faults and abnormal operating conditions, carrying out simple adjustment, checking and maintenance operations.

#### Installer

Expert person qualified to position and connect (hydraulically, electrically, etc.) the unit to the plant; this person is responsible for handling and correct installation according to the instructions provided in this manual and the national standards currently in force.

#### Service

Expert and qualified person authorised directly by the Manufacturer to carry out all routine and supplementary maintenance operations, as well as every adjustment, check, repair and replacement of parts necessary during the life of the unit.

### Organisation of the manual

The manual is divided into sections each dedicated to one or more target groups.

#### General information

It addresses all recipients.

It contains general information and important warnings that should be known before installing and using the appliance.

**Product introduction**

Addressed to all recipients, contains general information on the product.

**Installation and Operation**

It is addressed exclusively to the installer.

Contains specific warnings and all information necessary for positioning, mounting, connecting the device and operation.

**Commissioning, maintenance and troubleshooting**

They are addressed exclusively to the Authorised Service Centre.

It contains specific warnings and useful information for the most common commissioning and routine maintenance.

**Technical information**

It addresses all recipients.

It contains detailed technical information about the appliance.

**1.2 General warnings**


- ⚠ Specific warnings are given in each chapter of the document and should be read before starting operations.
- ⚠ All personnel involved must be aware of the operations and dangers that may arise when beginning all unit installation operations.
- ⚠ Installation performed outside the warnings provided in this manual and use of the appliance outside the prescribed temperature limits will invalidate the warranty.
- ⚠ Any contractual or extra-contractual liability for damage caused to persons, animals or property, due to installation, adjustment and maintenance errors or improper use is excluded. All uses not expressly indicated in this manual are not permitted.
- ⚠ The installation of the appliances must be carried out by a qualified company which, on completion of the work, will issue a declaration of compliance to the person in charge of the plant in accordance with the regulations in force and the instructions provided in the instruction booklet accompanying the appliance.
- ⚠ First start-up and repair or maintenance operations must be carried out by the Authorised Service Centre or by qualified personnel following the provisions of this manual.
- ⚠ Do not modify or tamper with the appliance as this can lead to dangerous situations.
- ⚠ Use suitable personal protective clothing and equipment during installation and/or maintenance operations. The Manufacturer is not liable for the non-observance of the current safety and accident prevention regulations.
- ⚠ In case of liquid or oil leaks, isolate the main power supply of the system and close any water valves. Promptly contact the Authorised Service Centre or professionally qualified personnel, and refrain from personally intervening on the equipment.
- ⚠ When replacing components, use only original spare parts.
- ⚠ The Manufacturer reserves the right to make changes to its models at any time to improve its product, without prejudice to the essential characteristics described in this manual. The Manufacturer is not obliged to add such modifications to machines previously manufactured, already delivered, or under construction.
- ⚠ The appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or those lacking experience or necessary knowledge, provided they are under supervision or have been given instructions concerning the safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Cleaning and maintenance intended to be carried out by the user should not be done by children without supervision.

**1.3 Basic safety rules**

We would like to remind you that the use of products that use electricity and water involves observing certain basic safety precautions such as:

- ⊖ It is forbidden to touch the appliance with wet or damp body parts.
- ⊖ It is forbidden to carry out any operation before disconnecting the appliance from the power supply by setting the plant master switch to "OFF".
- ⊖ It is forbidden to modify the safety or adjustment devices without the authorisation and instructions of the appliance manufacturer.
- ⊖ It is forbidden to pull, unplug or twist the electrical cables coming out of the appliance, even if it is disconnected from the mains supply.
- ⊖ It is forbidden to introduce objects and substances through the openings provided for the intake and delivery of air.
- ⊖ It is forbidden to open the access doors to the internal parts of the appliance without first setting the plant master switch to "OFF".
- ⊖ It is forbidden to dispose of packaging material and leave it within reach of children as it can be a potential hazard.

## 1.4 Disposal

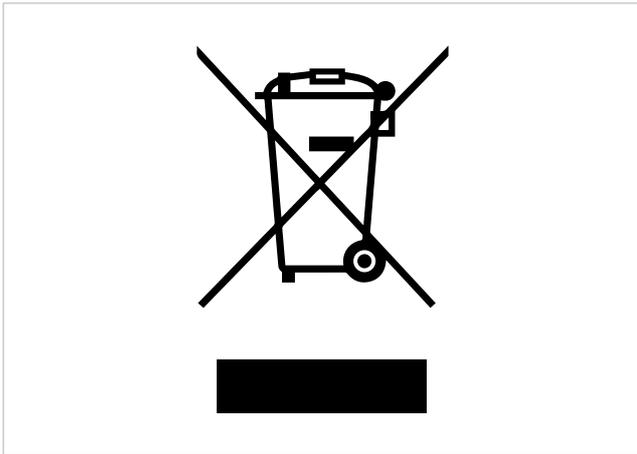

The symbol on the product or packaging indicates that the product should not be treated as normal household waste. Instead, it should be taken to an appropriate collection point for recycling of electrical, electronic, and battery equipment.

Proper disposal of this product avoids harm to humans and the environment and promotes the reuse of valuable raw materials.

For more detailed information about the recycling of this product, contact your local authority, your household waste disposal service, or the shop where you purchased the product.

Illegal disposal of the product by the user involves the application of the administrative sanctions provided for by the regulations in force.

This provision is only valid in the EU Member States.

⚠ Avoid disassembling the appliance yourself.


⚠ **Contact an Authorised Service Centre to disassemble the appliance.**

## 2. PRODUCT INTRODUCTION

### 2.1 Identification

The appliance can be identified by the rating plate:

1. Technical rating plate
2. Front panel

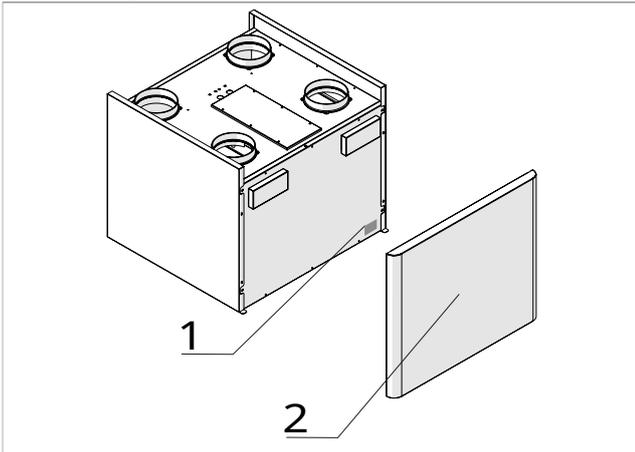

#### Technical rating plate

This shows the technical and performance specifications of the appliance.

⚠ Tampering with, removing or missing identification plates does not allow the product to be reliably identified by its serial number and therefore invalidates the warranty.

### 2.2 Destination of use

This appliance is a ventilation unit complete with heat recovery unit dedicated to changing air without wasting energy. The unit is particularly suitable for single family units, flats and in all cases where the nominal flow rates for air exchange do not exceed 500 m<sup>3</sup>/h.

The unit is designed for installation inside buildings protected from the weather in a vertical wall position with ducted air distribution.

### 2.3 Description of the appliance

**Structure:** self-supporting sheet metal frame, interior in high density EPS 30 kg/m<sup>3</sup> and polyethylene foam. Carpentry and internal plugging in thick galvanised sheet metal.

**Heat exchanger:** counterflow type: sensible polypropylene version, enthalpy version with breathable membranes.

**Fans:** Brushless DC fans regulated by inverters allow high levels of comfort and energy efficiency with constant flow function.

**Filters:** EPM1 filter on fresh air and extract air with low pressure drop. Easily removable for routine maintenance.

**Models:** 4 sizes with different flow rates are available.


**Configurations:** the unit is configurable in air flows according to the position of the room side and the outdoor side.

- A factory configuration
- B configuration modifiable on site

## 2.4 List of external components

1. Adjustable spacers
2. Fixing bracket
3. Supply air
4. Electrical connection passage
5. Extract air

6. Electrical panel
7. Fresh air inlet
8. Condensate drain
9. Exhaust air

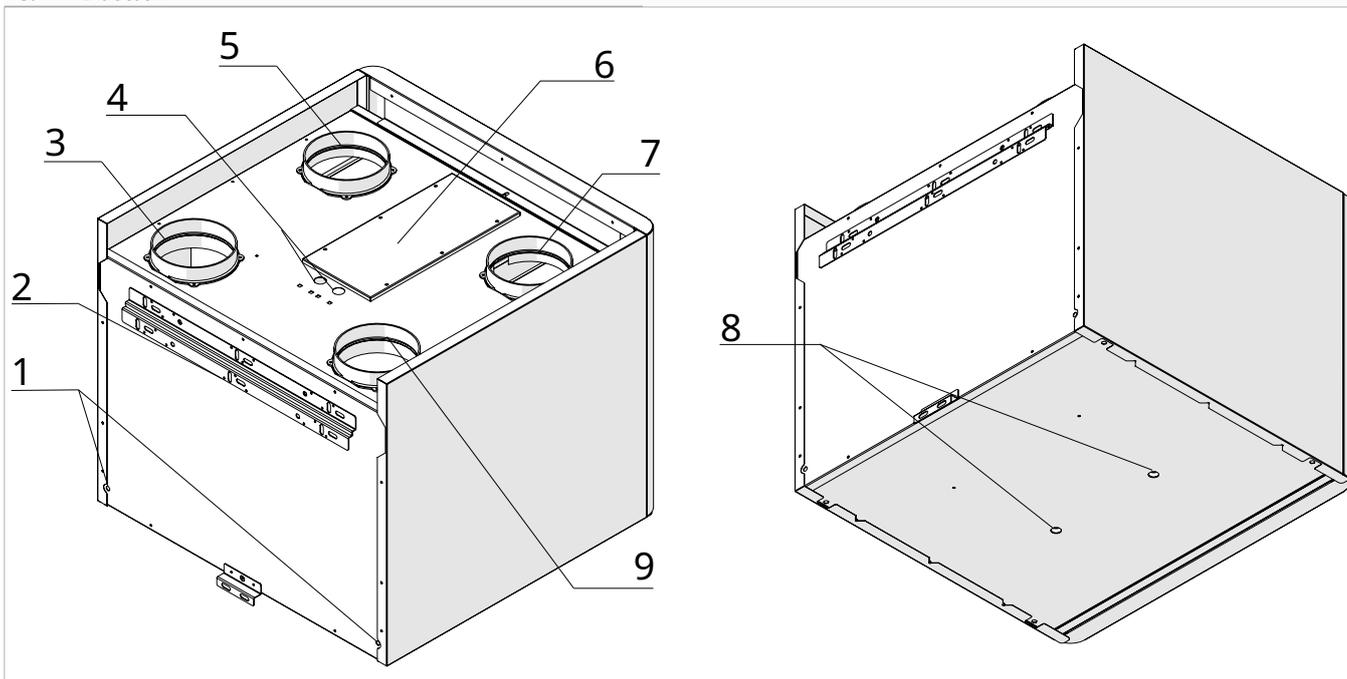


## 2.5 List of internal components




### Configuration A

1. Heat exchanger
2. Room air filter
3. Outdoor air filter

4. Bypass
5. Supply fan
6. Exhaust fan

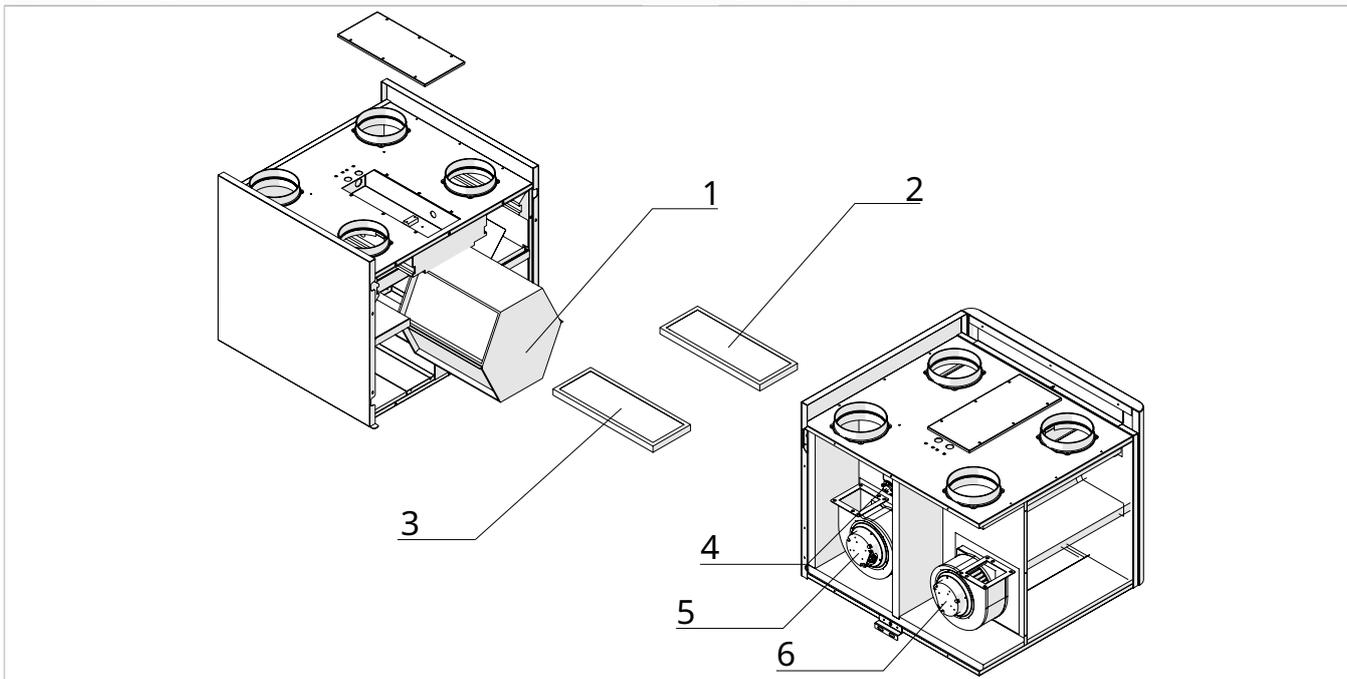

## 2.6 Compatible accessories

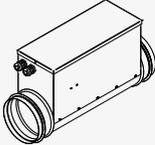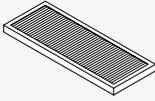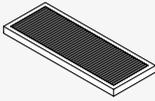Description	Code	
<b>Commands</b>		
	LED electronic control panel with touch interface, wall mounted complete with thermostat and room temperature and relative humidity probe. Cable connection. White colour	PCZ-EEB749
	LED electronic control panel with touch interface, wall-mounted complete with thermostat and room temperature and relative humidity probe with integrated Wi-Fi module. Cable connection. White colour	PCZ-EFB749
<b>Auxiliary electrical coils</b>		
	Electric post-heating coil DN 125 mm 0.5 kW	PAW-VEN-HTR05
	Electric post-heating coil DN 160 mm 1.0 kW	PAW-VEN-HTR10
<b>Spare filters</b>		
	Kit 2 ePM1 80% filters delivery fresh air supply and extraction for 20 V unit	PAW-VEN-FLT1
	Kit 2 ePM1 80% filters for domo 30 V unit	PAW-VEN-FLT5
	Kit 2 ePM1 80% filters for domo 40 V/ 50 V unit	PAW-VEN-FLT4
<b>Active carbon spare filters</b>		
	Kit 1 activated carbon filter for 20 V unit	PAW-VEN-ACFLT1
	Kit 1 activated carbon filter for domo 30 V unit	PAW-VEN-ACFLT5
	Kit 1 activated carbon filter for domo 40 V/ 50 V unit	PAW-VEN-ACFLT4

## 3. INSTALLATION

### 3.1 Preliminary warnings

- ⚠ **For detailed information on the products, refer to chapter "Technical information" p. 43.**
- ⚠ The installation must be carried out by the installer. There is a risk of water leakage, electric shock or fire if the installation is not performed correctly.
- ⚠ During installation, it is necessary to observe the precautions mentioned in this manual, and on the labels affixed to the inside of the appliances, as well as to take

every precaution suggested by common sense and the safety regulations in force at the place of installation.

- ⚠ Using only the supplied installation-specific components is recommended. Use of alternative components could lead to water leakage, electric shock or fire.
- ⚠ Failure to apply the indicated rules may cause malfunctions of the appliance and relieves the Manufacturer from any warranty and from any damage caused to persons, animals or property.

### 3.2 Reception

#### Preliminary warnings

- ⚠ Upon receipt of the package check that it is not damaged, otherwise accept the goods with reservation, producing photographic evidence of any damage.
- ⚠ In the event of damage, notify the shipper by registered mail with return receipt within 3 days of receipt. Presenting photographic documentation, similar information should also be sent by email to the Manufacturer.
- ⚠ No reports of damage will be taken into account later than 3 days after delivery.


#### Package description

The packaging is made of suitable material and carried out by experienced personnel.

The units are all checked and tested and are delivered complete and in perfect condition.

The appliance is shipped in standard packaging consisting of a cardboard box and a set of polystyrene foam protectors, placed on a wooden pallet and secured with straps.

### 3.3 Dimensions and weights with packaging

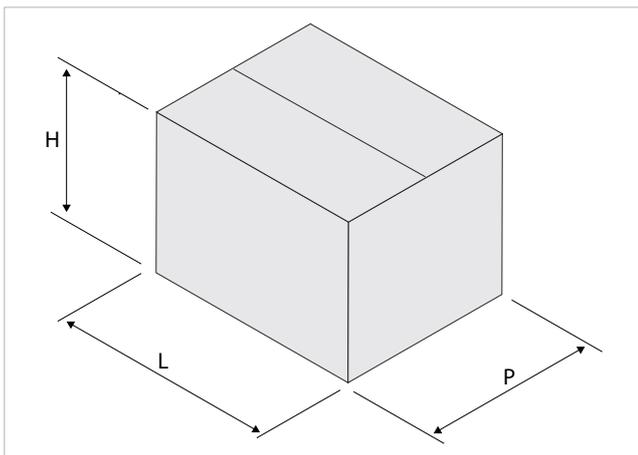

Models	u.m.	15V	30V	40V	45V
<b>Packaging dimensions (1)</b>					
Width	mm	520	670	800	800
Length	mm	660	820	820	820
Height	mm	640	730	730	730
Weight	kg	35,0	41,0	45,0	46,0
1. Excluding pallet					

### 3.4 Handling with packaging

#### Preliminary warnings

- ⚠ The unit may only be handled by qualified personnel adequately equipped and with equipment suitable for the weight and dimensions of the unit.

- ⚠ Before each handling operation, check the lifting capacity of the machinery used in accordance with the indications on the packaging.

- ⚠ When the load is lifted from the ground, stay clear of the immediate and surrounding area.


⚠ Check the information on the packaging for the amount of stackable packages.

⚠ In manual operations, the maximum weight per person required by current legislation must always be observed.

## Handling

### With pallet:

▶ use a forklift

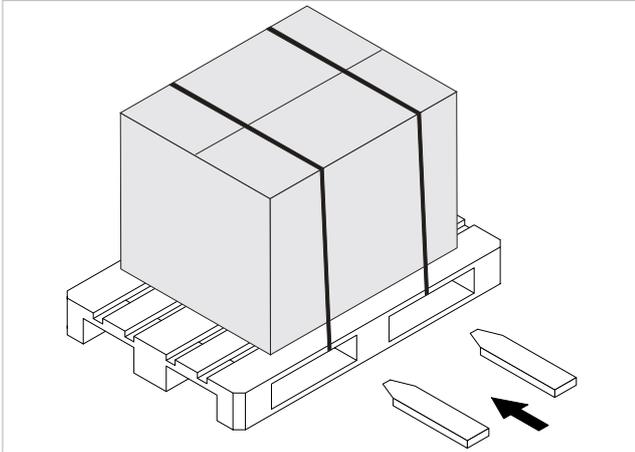

### Without pallet:

▶ use a forklift

## 3.5 Storage

### Preliminary warnings

⚠ Stored in accordance with the applicable national regulations.


⚠ Store in a closed environment protected from the weather, off the ground by means of sleepers or pallets with temperatures not below 0 °C, up to a maximum of 40 °C.

## 3.6 Unpacking

### Preliminary warnings

- ⚠ Check that the individual components are present.
- ⚠ Check that no components were damaged during transport.
- ⚠ Dispose of the packaging components following the applicable waste disposal regulations. Check for disposal arrangements with your local authority.
- ⚠ Handle with care.
- ⊖ The packing material (cardboard, staples, plastic bags, etc.) must not be dispersed or abandoned in the surrounding environment and must be kept out of reach of children due to risk of hazard.

### Removing the packaging

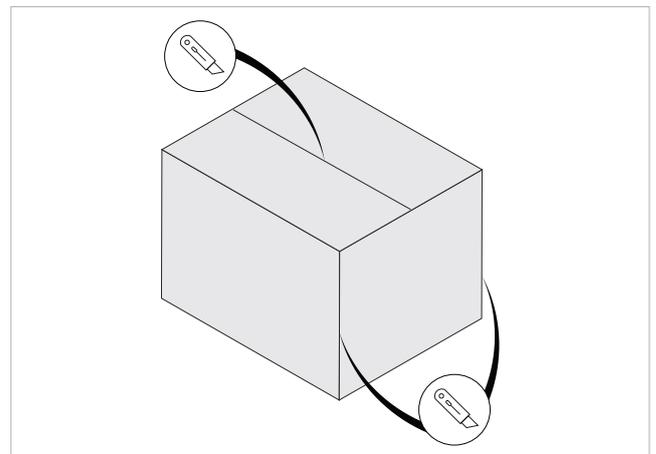

#### To remove the packaging:

- ▶ use a cutter
- ▶ open the cardboard packaging
- ⓘ To aid removal of the product, also cut the vertical edges.
- ▶ remove the accompanying components

- ▶ remove the polystyrene elements
- ▶ remove the appliance from the box

#### Accompanying material

They are included with the appliance, inside the packaging:

- Control panel user manual
- Installer manual

- Energy efficiency label
- Configuration B label
- Support bracket
- Drain connection with siphon
- Cable gland (2 pcs)
- ⚠ Check the presence of the individual components.

## 3.7 Handling without packaging

### Preliminary warnings

- ⚠ The unit must be handled using non-slip gloves.
- ⚠ The unit may only be handled by qualified personnel adequately equipped and with equipment suitable for the weight and dimensions of the unit.
- ⚠ Before each handling operation, check the lifting capacity of the machinery used in accordance with the indications on the packaging.
- ⚠ When the load is lifted from the ground, stay clear of the immediate and surrounding area.

- ⚠ Check the information on the packaging for the amount of stackable packages.
- ⚠ In manual operations, the maximum weight per person required by current legislation must always be observed.

### Movement methods

- ▶ use a fork lift, scaffolding or other suitable lifting system

## 3.8 Installation site

The location of the appliance must be determined by the plant engineer or a competent person and must take into account both purely technical requirements and any national/local legislation in force.

The appliance is intended to be installed indoors in a vertical position fixed to the wall.

- ⚠ The installation position must be chosen close to a wall connected to the outside.
- ⚠ The appliance is declared IPX0 protected, therefore not suitable for installation outdoors or in rooms with the presence of water (swimming pool, etc.).

### Preliminary warnings


- ⚠ Avoid installing the unit in the vicinity of:
  - obstacles or barriers that cause recirculation of the exhaust air
  - narrow places where the sound level of the appliance can be enhanced by reverberations or resonances
  - environments with the presence of flammable or explosive gases
  - very damp environments (laundries, greenhouses, bathrooms with high humidity, etc.) to prevent the formation of condensation on the external panels of the unit
  - environments with the presence of flammable or explosive gases or flammable fluids
  - solar radiation and proximity to heat sources
- ⚠ **Avoid installing the unit in the vicinity of the sea. Salty atmospheres cause corrosion and oxidation of the internal components, compromising the functioning of the unit.**
- ⚠ Avoid placing the unit within 1 metre of radio and video equipment.
- ⚠ Do not install above heat sources.

- ⚠ Ensure that:
  - the installation site of the unit must be chosen with the utmost care to guarantee adequate protection from shocks and consequent damage
  - the supporting surface is capable of supporting the weight of the appliance
  - the supporting surface does not affect load-bearing building elements, piping, or power lines
  - the functionality of load-bearing elements is not compromised
  - there are no obstacles to the free circulation of air through the holes (plants, leaves...)
  - the appliance must be installed in a position where it can be easily serviced
  - the safety distances between the units and other appliances or structures are scrupulously respected so that the air entering and leaving the fans is free to circulate
- ⚠ If the unit is installed incompletely or on an unsuitable surface, it could cause damage to persons or property if it becomes detached.
- ⚠ The appliance must not be in a position where the air flow is aimed directly at a person.
- ⚠ Provide the following:
  - a drain nearby for the outflow of condensation
  - a compliant power supply nearby

### 3.9 Minimum installation distances

The clearance zones for the installation and maintenance of the appliance are shown in the figure below. Established spaces are necessary to avoid barriers to airflow and allow for normal cleaning and maintenance.

⚠ Make sure that there is sufficient space to allow the panels to be removed for routine and supplementary maintenance operations.

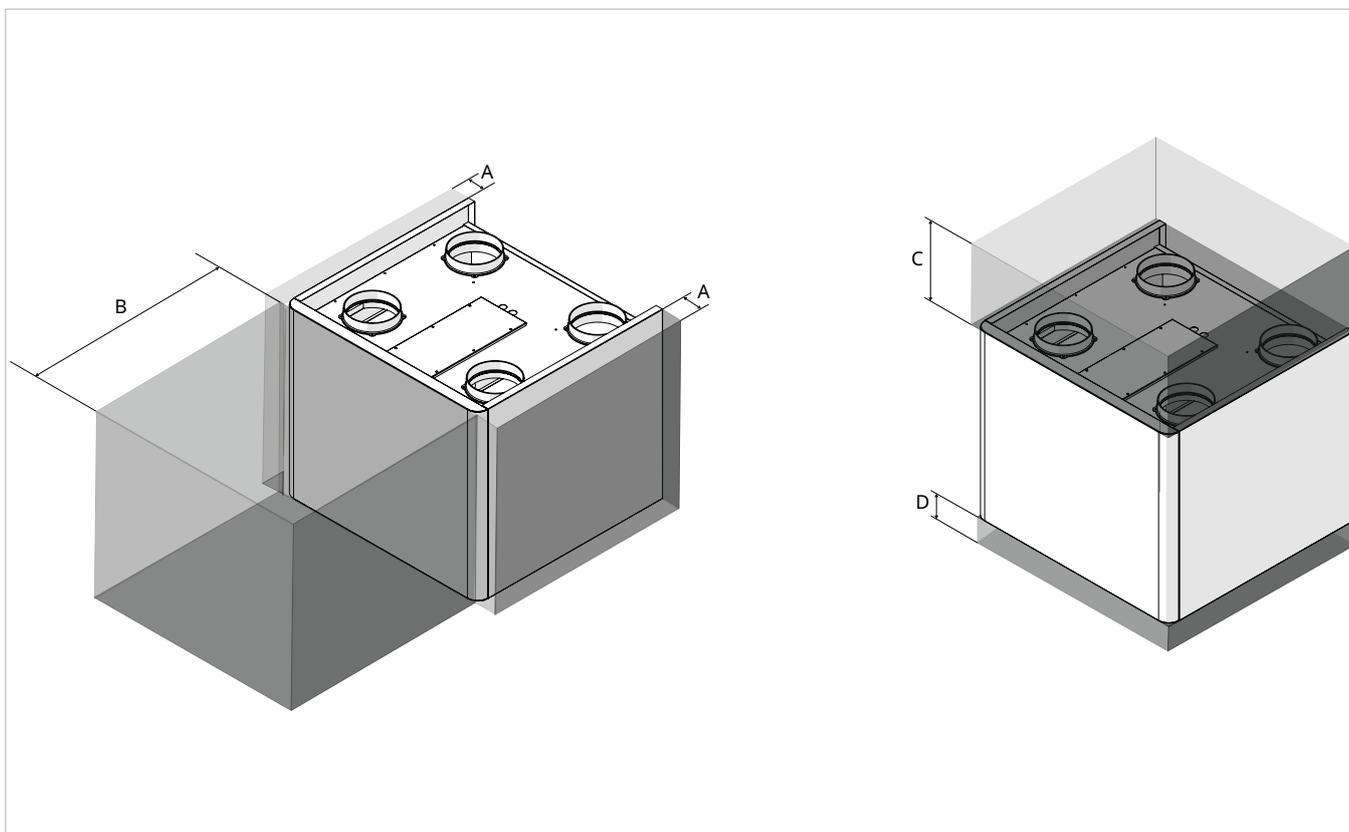

Models	u.m.	15V	30V	40V	45V
<b>Minimum distances</b>					
A	mm	50	50	50	50
B	mm	400	500	600	600
C	mm	300	300	300	300
D	mm	30	30	30	30

### 3.10 Positioning

#### Preliminary warnings

The unit must be installed on the wall.

⚠ Check that:

- the surface supports the weight of the appliance
- the surface does not affect piping or power lines
- the functionality of load-bearing elements is not compromised

#### Drilling the outside wall

The external wall must be prepared with holes for air ducting.

#### To drill the holes:

- ▶ mark the position of the hole
  - ▶ use a drill
  - ▶ drill a guide hole
  - ▶ use a core drill
  - ▶ make a hole through the wall
  - ▶ maintain a downward slope towards the outside
- ⚠ To avoid the release of large amounts of dust and debris into the room, you are advised to couple the core drill with a vacuum system.
- ⚠ Proceed with caution near the outside wall to avoid breaking the plaster around the hole.


⚠ Take precautions so that the removed material does not hit people and objects below.

1. Hanging bracket
2. Support bracket

#### Positioning the unit

To position the unit:

3. Spacers

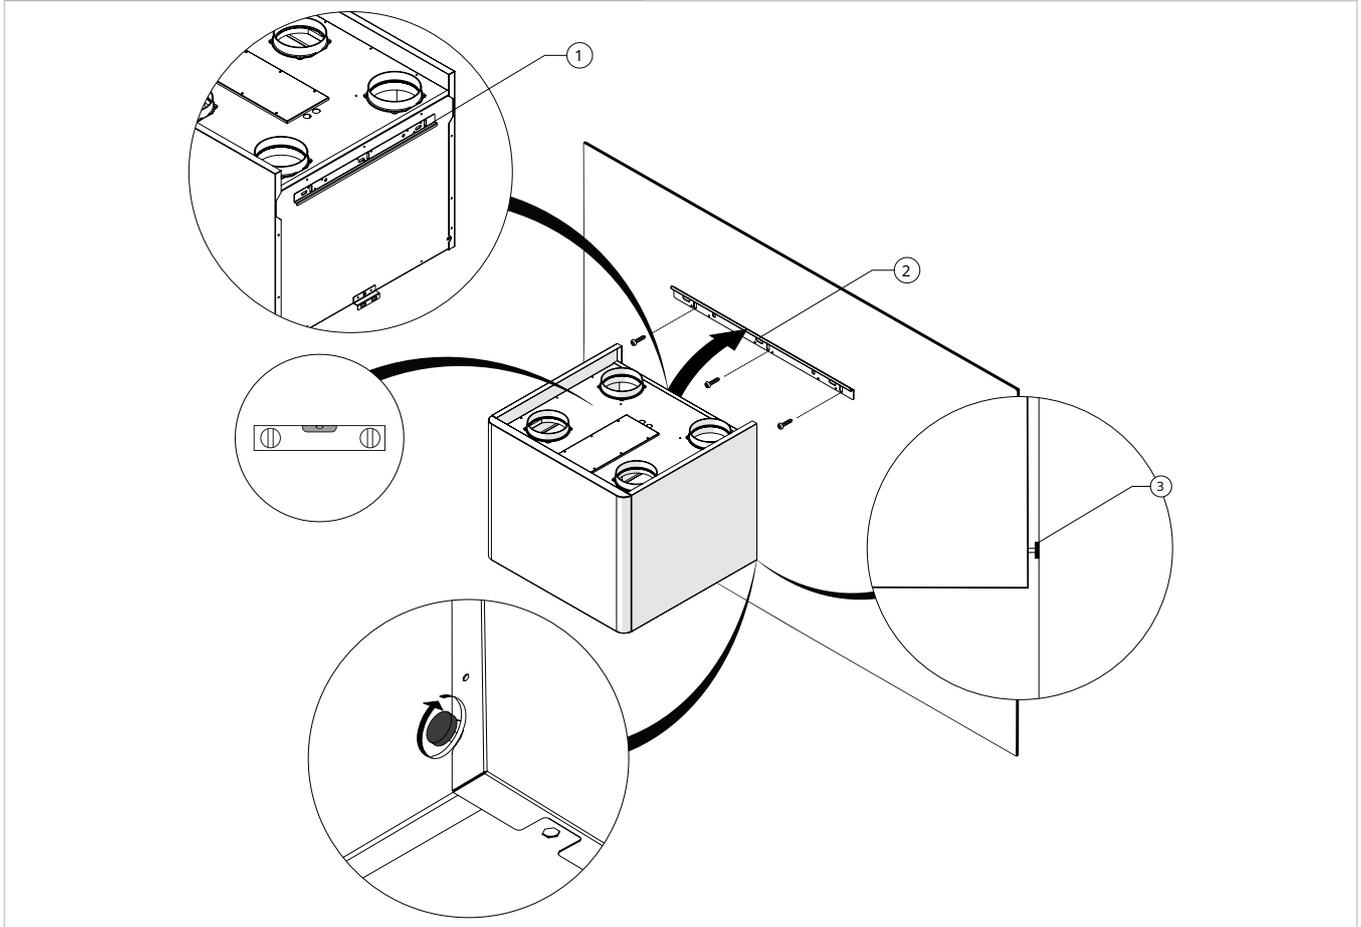

⚠ Check the correct orientation of the unit.

- ▶ use the support bracket as a template
- ▶ mark the position of the fixing holes
- ▶ use screws and expansion plugs suitable for the weight of the appliance and the material of the supporting wall
- ▶ fix the support bracket to the wall
- ▶ hang the appliance on the supporting bracket
- ▶ adjust the spacers

#### Check that:

- it is levelled
- the minimum installation distances are respected

### 3.11 Condensate drain connection


#### Preliminary warnings

- ⚠ This appliance is equipped with trays for collecting the condensate that is produced during operation. Condensate must be routed to a suitable place for drainage.
- ⚠ The appliance is equipped with two condensate drainage connections. One of the two must be used depending on the chosen configuration.
- ⚠ If the drainage line runs into a container (tank or other) it must be ensured that the container itself is hermetically sealed and most importantly it must be ensured that the drainage pipe is not immersed in water.
- ⚠ The hole for the condensate pipe must always have an downwards slope.
- ⚠ When connecting the condensate drain, take care not to crush the rubber pipe.

#### Attachment position


The size and position of the condensate drain attachments are shown below.

1. Configuration A condensate drain connection
2. Configuration B condensate drain connection


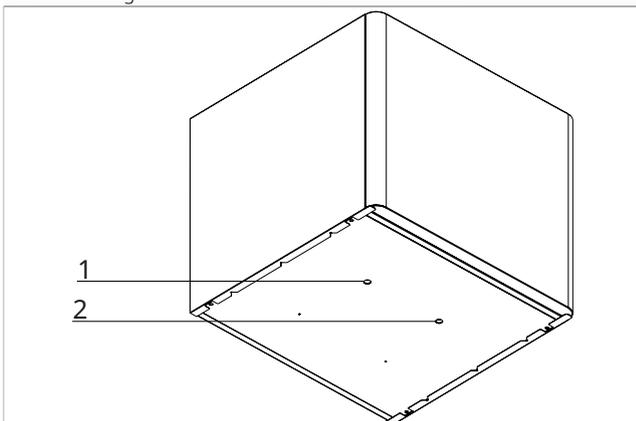


- ⚠ The unused connection must be plugged.

#### Connections

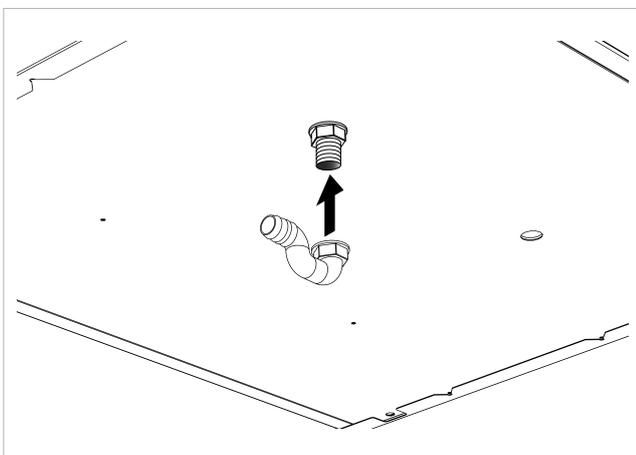

1. Drain connection with siphon
2. Condensate drain pipe
3. Hose clamp

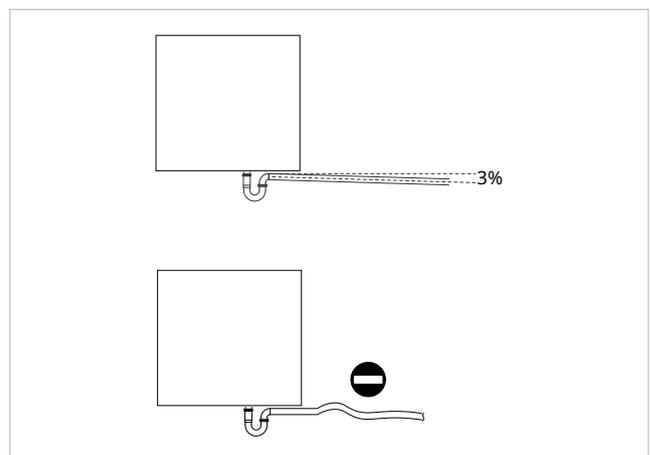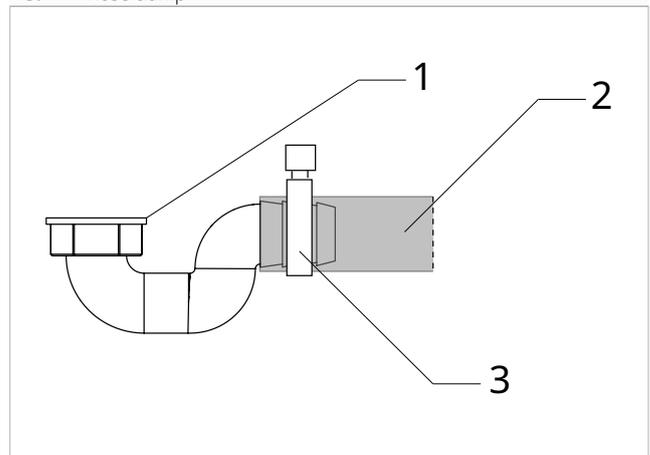

#### Depending on the chosen configuration:

- ▶ connect the drain pipe to the drain connection with siphon
- ▶ direct the drainage pipe to a suitable place for draining
- ▶ maintain a minimum slope of 3% towards the drain location
- ▶ insulate junction points
- ⚠ **It is mandatory to install an adequate siphon on the condensate drainage pipe to prevent the negative pressure generated by the fans from obstructing the proper flow of condensate, which could lead to spillage inside the premises.**
- ⚠ Use plastic drainage pipes.
- ⚠ Avoid metal pipes.
- ⚠ Make sure all joints are sealed to prevent leakage of water.
- ⚠ Condensate drain pipes must be insulated for both indoor and outdoor sections to avoid condensation on the surface and/or frosting problems. The insulation must be inserted all the way to the condensate drain pipe connection on the unit.

### 3.12 Aeraulic connections

#### Preliminary warnings


- ⚠ The sizing of ducting and supply and extract grilles must be carried out by a professionally qualified person.
- ⚠ To prevent the transmission of any vibrations of the machine into the room, an anti-vibration joint should be placed between the fan outlets and the ducts.
- ⚠ The connecting pipes must be of a suitable diameter and supported so that their weight does not put strain on the appliance.

#### Airflow configurations

- A factory configuration
- B configuration modifiable on site


#### Configuration A

- RIP:** Extract air
- IMM:** Supply air
- EXP:** Exhaust air
- PAE:** Fresh air inlet

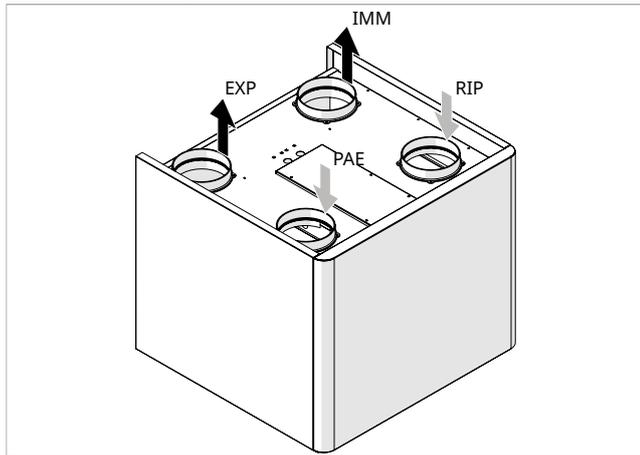

#### Configuration B


- RIP:** Extract air
- IMM:** Supply air
- EXP:** Exhaust air
- PAE:** Fresh air inlet

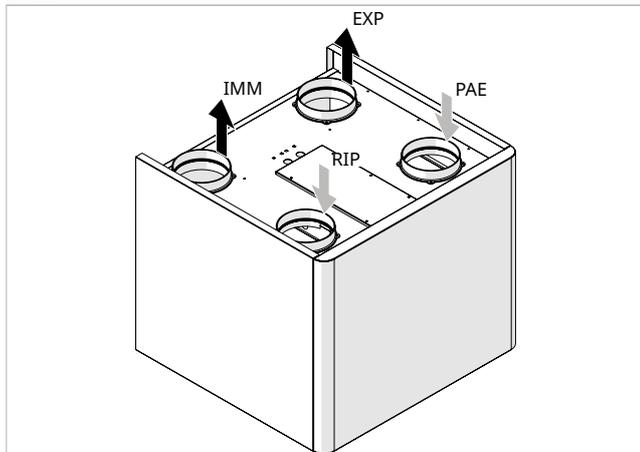


#### Changing the airflow configuration from A to B

To modify the configuration, switch microswitch E from Off to On. The unit will automatically reverse the fan outputs,


the probe properties, and the respective anti-freeze and bypass control logics.

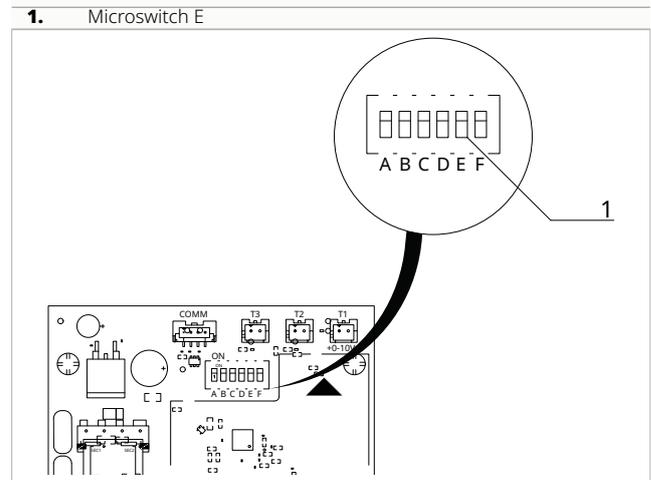

## Configuration B label

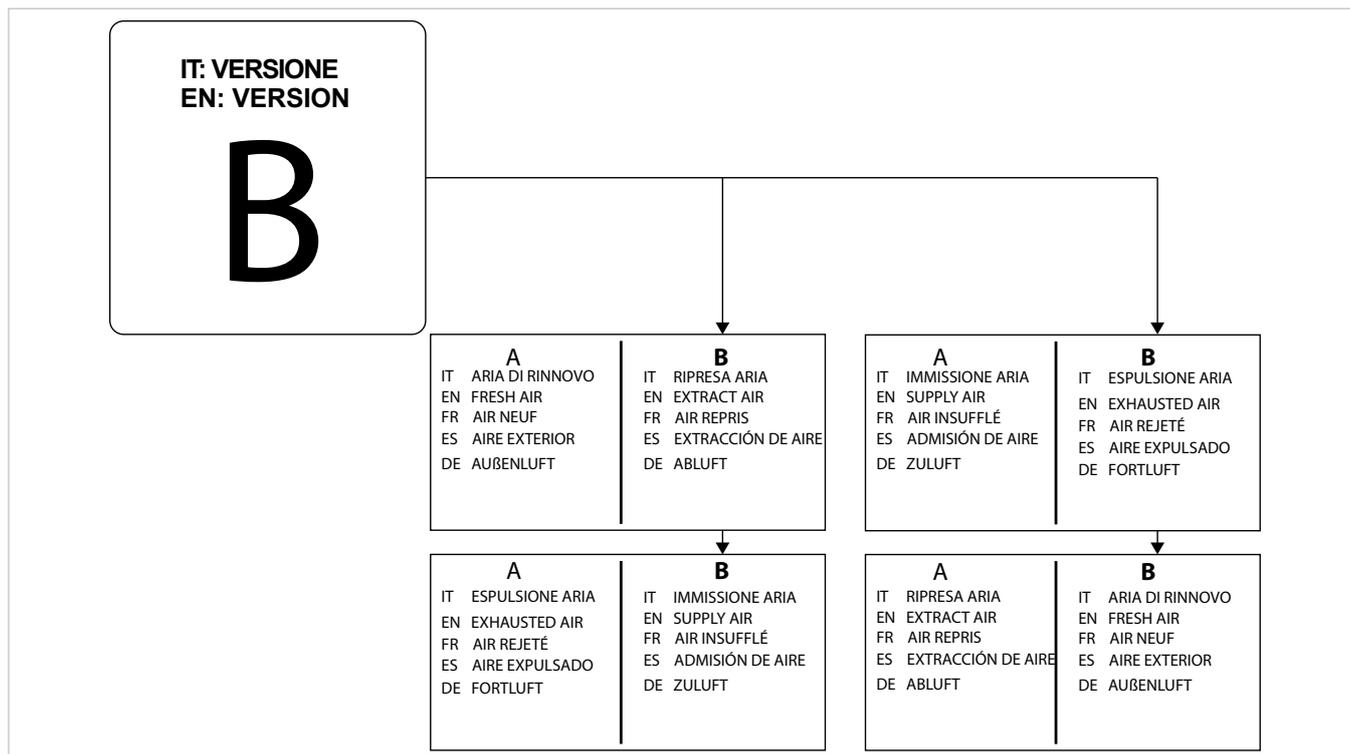


To indicate that the machine configuration has been changed, the supplied label must be applied. The presence of the label indicates that you must refer to column B in the airflow labels.

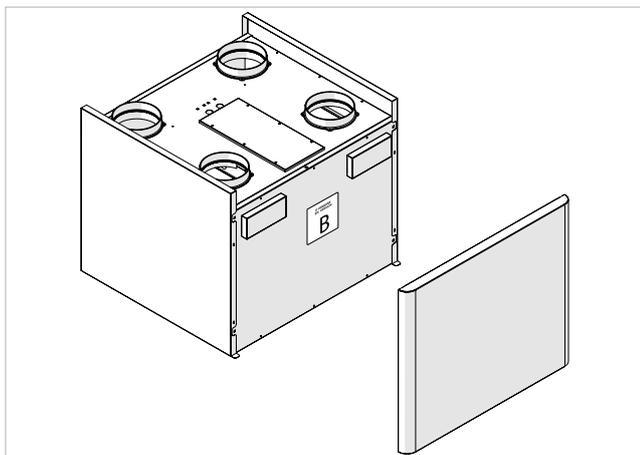**Label application:**

► apply the label to the lower panel


## Connections

- A** Outdoor side  
**B** Room side

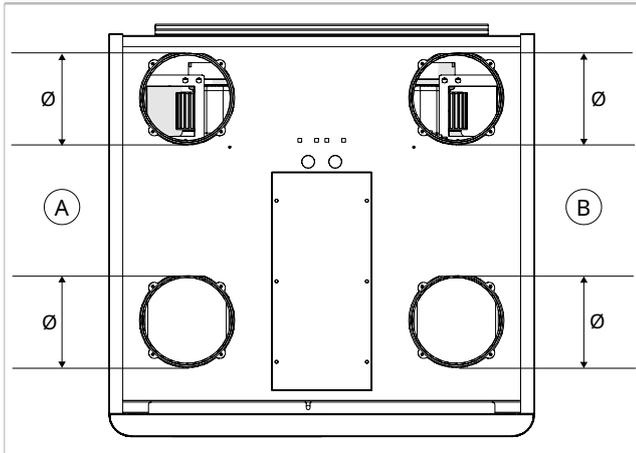

Models	u.m.	15V	30V	40V	45V
<b>Connections</b>					
Supply air connection Ø	mm	160	160	160	160

### Circular connections

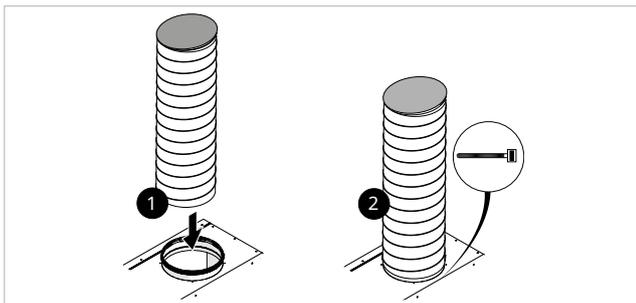

- ▶ position the ducts on the connections provided on the appliance
- ▶ use a metal clamp or duct fixing collar
- ▶ fix the ducts on the attachments
- ⚠ Use ducts lined with anti-condensation material of a suitable thickness.

### 3.13 Electrical connections

The appliance leaves the factory fully wired and only requires connection to the power supply, control and any accessories.

#### Preliminary warnings

- ⚠ All operations of an electrical nature must be carried out by suitably qualified personnel having the necessary legal knowledge and informed about the risks related to such operations.
- ⚠ All connections must be made in accordance with the relevant regulations in force in the country of installation.
- ⚠ Before carrying out any work, make sure that the power supply is switched off.
- ⚠ The unit should only be powered after the plumbing and electrical work has been completed.
- ⚠ References:
  - for electrical connections please refer to the wiring diagrams in this manual, especially for the part concerning the power terminal board
- ⚠ Check that:
  - the main supply characteristics are adequate for the power consumption of the appliance, also taking into account any other machinery in parallel operation
  - the power supply voltage and frequency correspond to those specified on the nameplate of the appliance
  - the cables are suitable for installation in accordance with the IEC standards in force
  - the power supply is adequately protected against overloads and/or short circuits
  - the disconnection device is positioned in an easily accessible place to enable intervention in the event of an emergency
- ⚠ It is mandatory:
  - to connect the appliance to an effective grounding system
  - for units with three-phase power supply, check the correct phase connection
  - provide an all-pole switch with a contact opening distance of at least 3 mm that allows complete disconnection under overvoltage category III conditions
  - Install a ground fault circuit interrupter (GFCI). Failure to install this device could result in electric shock
- ⚠ Ensure that a connection to earth is made. Do not ground the appliance to distribution pipes, surge arresters or the ground of telephony systems. If not performed correctly, grounding can cause an electric shock. Momentary high voltage surges caused by lightning or other causes could damage the heat pump.
- ⚠ Use a dedicated power supply circuit. Never use a power supply to which another appliance is also connected due to risk of overheating, electric shock or fire.
- ⚠ For the electrical connection, use a cable of sufficient length to cover the entire distance without any connection. Do not use extension cables. Do not apply other loads on the power supply.
- ⚠ After connecting the interconnection and power supply cables, ensure that the cables are arranged so that they

do not exert excessive forces on the covers or electrical panels. Install the covers on the cables. Incomplete connections of the covers can lead to overheating of the terminals, electric shock or fire.

- ⚠ Any replacement of the power cable must only be carried out by qualified personnel and in accordance with current national regulations.
- ⚠ The manufacturer is not liable for any damage caused by the lack of earthing or failure to comply with the specifications in the respective diagrams.
- ⚠ The appliance is equipped with a noise filter as required by current regulations. Use selective residual current circuit breakers to compensate for the micro leakage to earth of this device.
- ⊖ Using gas and water pipes to ground the appliance is prohibited.

#### Power line dimensioning

Use the tables below for the sizing of the power supply line and its protection device.


These are not average draw or transient peaks, but values to be considered for the correct sizing of the plant and the request of the contractual power (excluding loads due to the normal operation of the building).


- ⚠ Maximum power is reached only in exceptional cases. Therefore, the indicated trip current is suggested to guarantee a balance between machine absorption and incidence in the general system.
- ⚠ The indicated minimum cable cross-section area must be verified according to the actual conditions of the installation: length of the cable, characteristics of the electrical supply, etc.
- ⚠ For units equipped with electrical heating elements, the draw values of the units must be added to those of the heating elements shown in the following tables.

#### Access to the electrical panel

- ⚠ Access to the electrical panel is only permitted to qualified personnel.
- ⚠ Before carrying out any work, ensure that the power supply is switched off.

1. Electrical connections passthrough

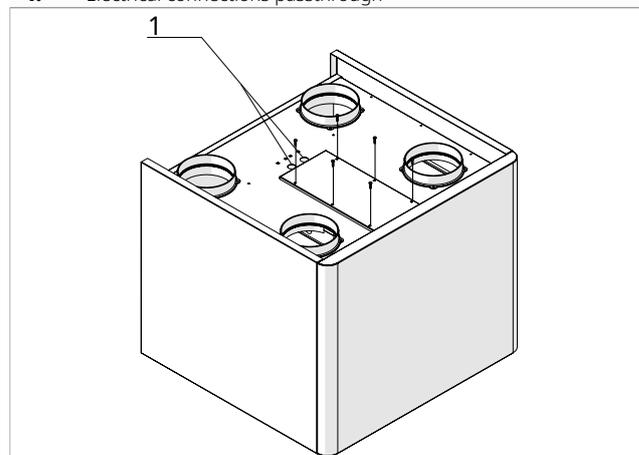

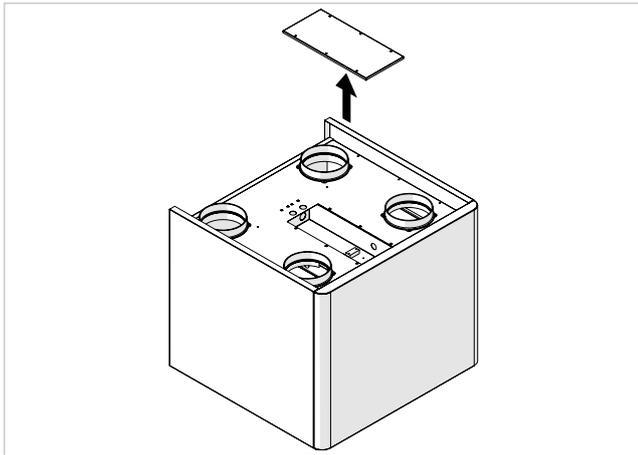

**To access the connections:**

- ▶ undo the fixing screws
- ▶ remove the electrical panel closing panel

**Connections**


Before connecting the unit to the mains power supply, make sure that the isolator is open. The power supply of the single-phase unit must be connected to the appropriate terminals, subjected to the action of the isolating switch.

- ⚠ Use properly sized cables to avoid voltage drops or overheating.

**Cable glands**

- ⚠ It's necessary to insert the cable glands in the passage holes of the electrical connections to ensure complete sealing, prevent water infiltration, and protect the electrical panel from moisture-related damage that could compromise the unit's operation.

**1. Cable gland**

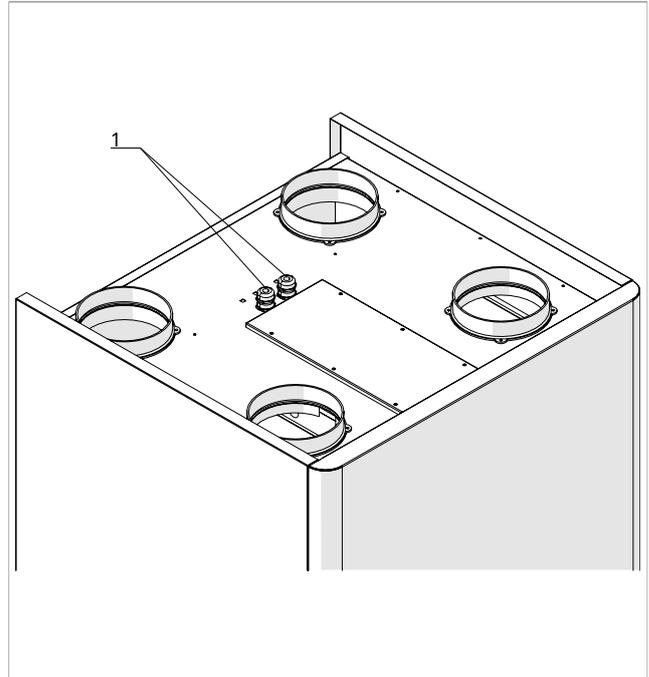


**To insert the cable gland:**

- ▶ locate the hole for the passage of the electrical connections
- ▶ remove the sealing grommet
- ▶ insert the cable gland
- ▶ screw the inner nut onto the cable gland from inside the unit
- ▶ carry out the electrical connections (see paragraph "Electrical connections" *p. 19*)
- ▶ tighten the outer nut of the cable gland to secure the cable
- ⚠ Ensure all wire glands are securely and effectively tightened.

### Connection diagram


- 1. 230/1/50 power supply
- 2. Isolator
- 3. Power cable

- 4. Unit
- 5. Remote control
- 6. Wired controller communication cable

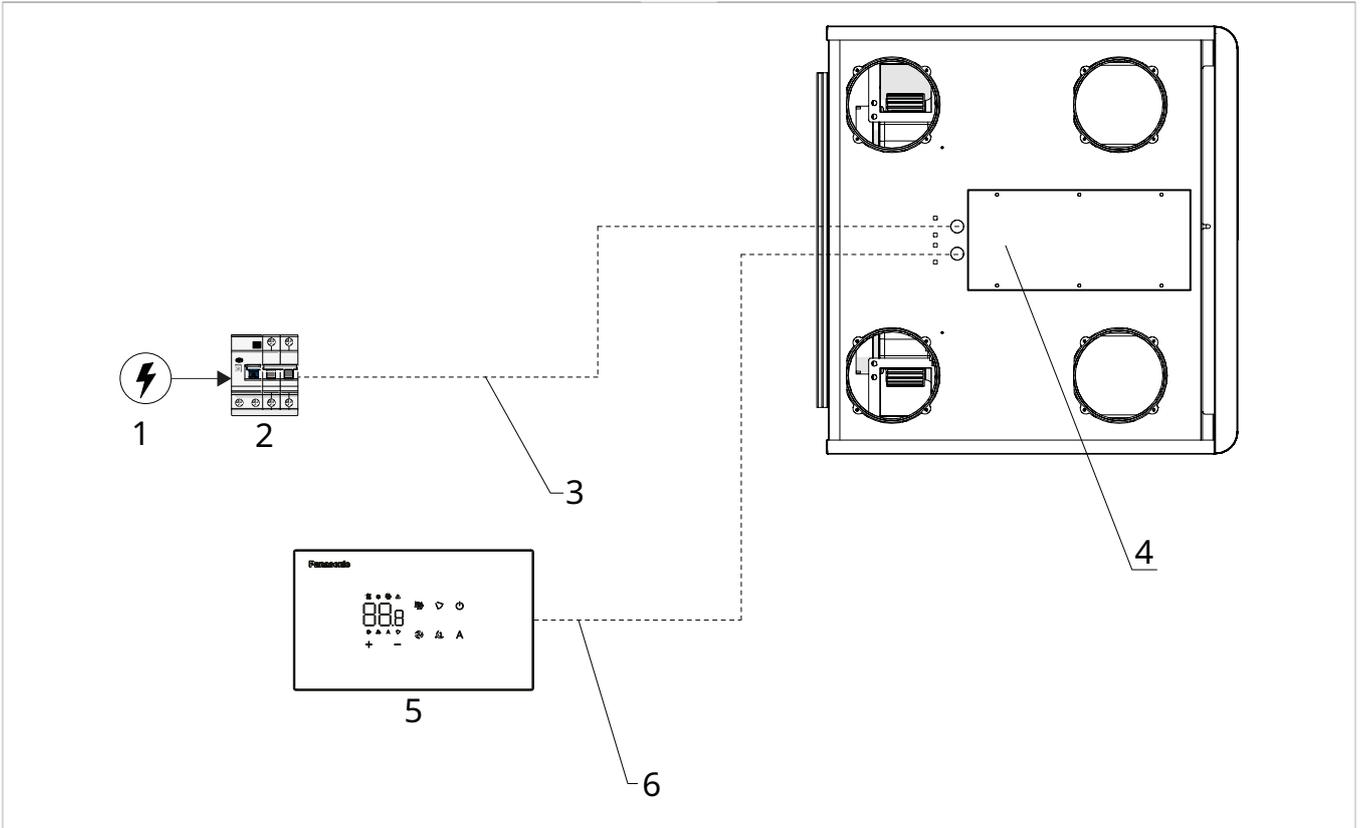


### On-board electrical panel

#### Connection terminal board

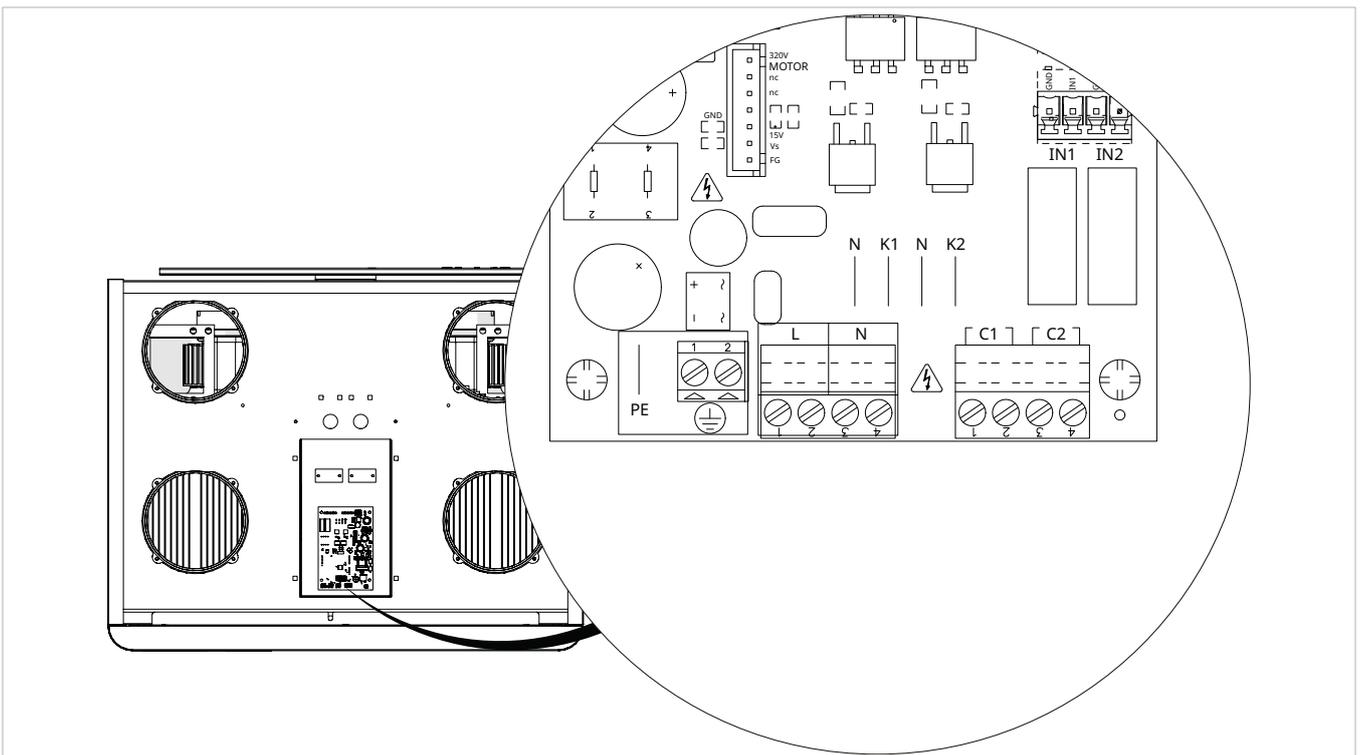

## 4. WALL CONTROL COMMAND CODE PCZ-EEB749

### 4.1 Interface

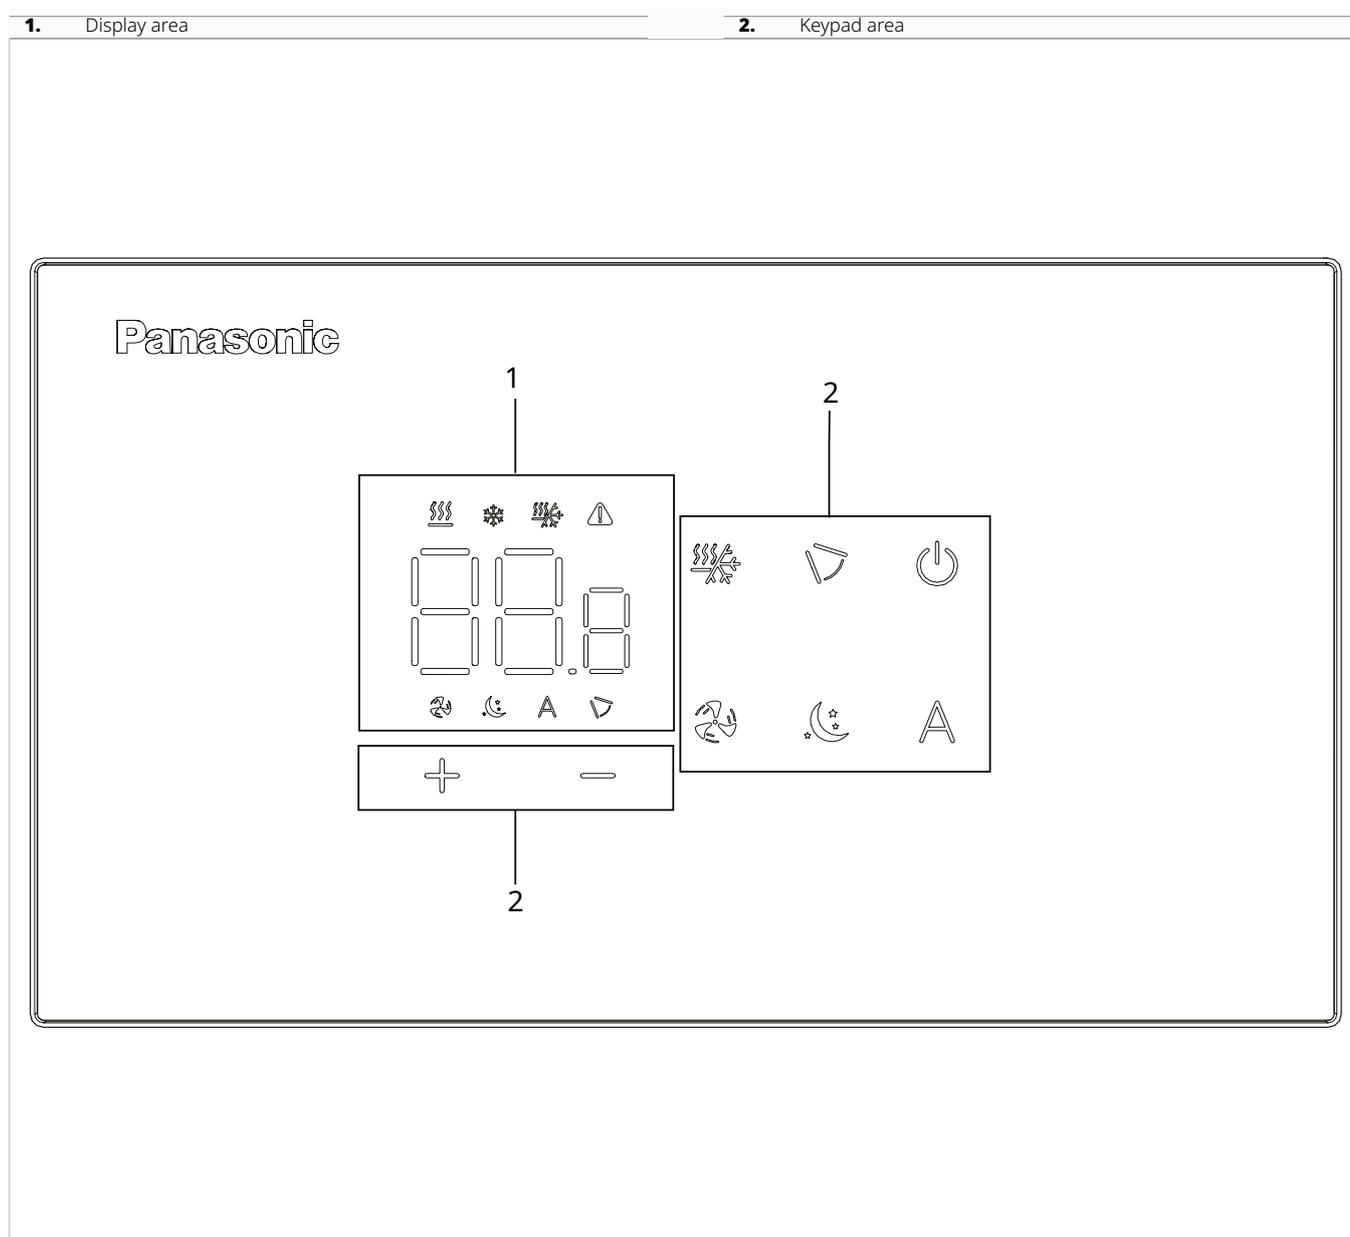

### 4.2 Installation

#### Description


the wall control panel is an electronic LED thermostat with touch interface, with the ability to control multiple appliances equipped with the same electronic board. It features a temperature and humidity sensor.

#### Mounting

- ⚠ The wall control panel must be installed inside an electrical box.
- ⚠ Before proceeding with the installation of the wall control command, the wall must be prepared to accommodate the electrical box.

**⚠ Make sure that:**


- the wall supports the weight of the appliance
- the section of wall does not contain pipes or electrical lines
- the functionality of load-bearing elements is not compromised

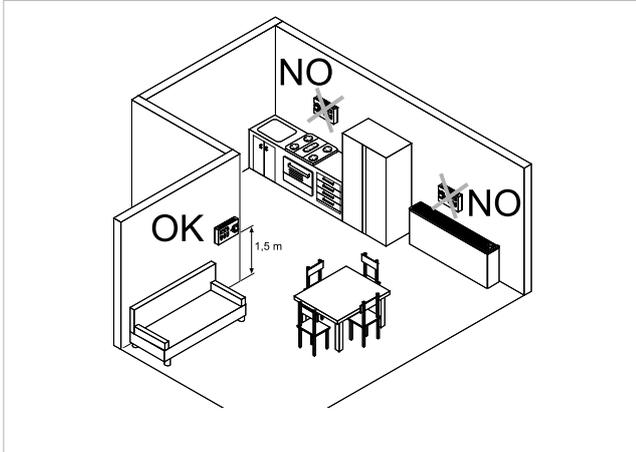

The wall control must be installed:

- on the outside walls
- at a height of approx. 1.5 m above the floor
- ⚠ If the control is located in an area used by people with reduced physical capabilities, refer to local regulations.
- away from doors and windows
- away from heat sources such as radiators, fan coils, cookers, direct sunlight
- ⚠ The wall control is supplied already assembled in the package.


1. Control base
2. Wall control command

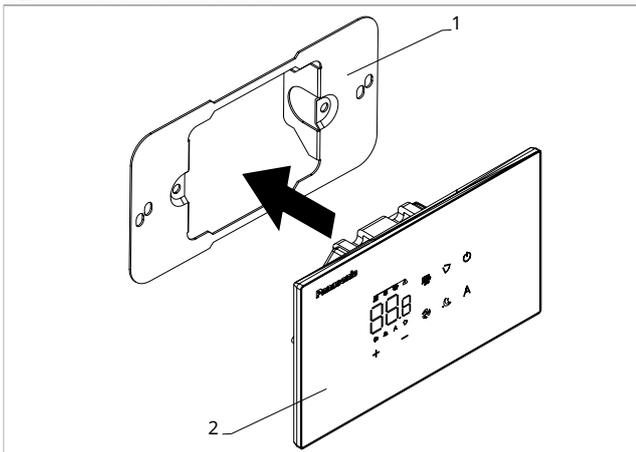

**Before mounting on the wall:**

- ▶ Separate the control base from the control panel


1. Fixing screws
2. Control base
3. Holes for fixing to the electrical box
4. Electrical box

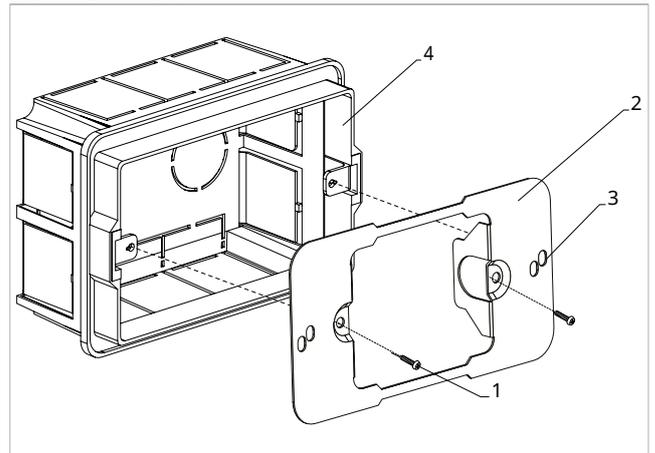

**For wall mounting of the control panel:**


- ▶ secure the control base to the electrical box with screws
- ▶ Make the connections
- ⚠ Before making the connections, check that the terminal block of the command is on the right side.
- ⚠ Several holes are present on the base of the control. The holes used depend on the model of the electrical box.

1. Electrical box
2. Control base
3. Wall control command

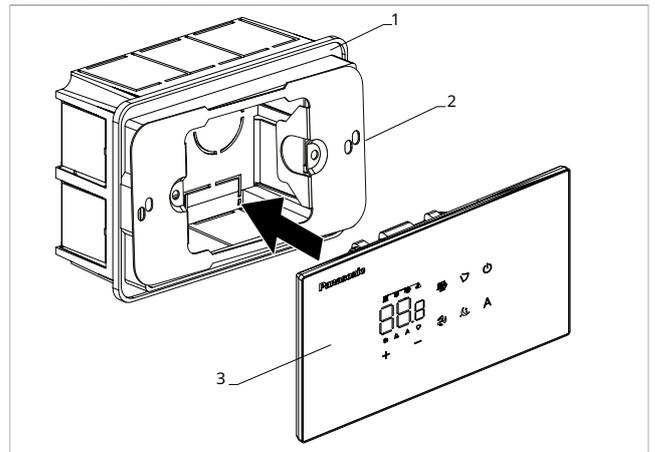

- ▶ close the control panel
- ⚠ Be careful not to crush the wires when closing the control.


### 4.3 Connection diagram

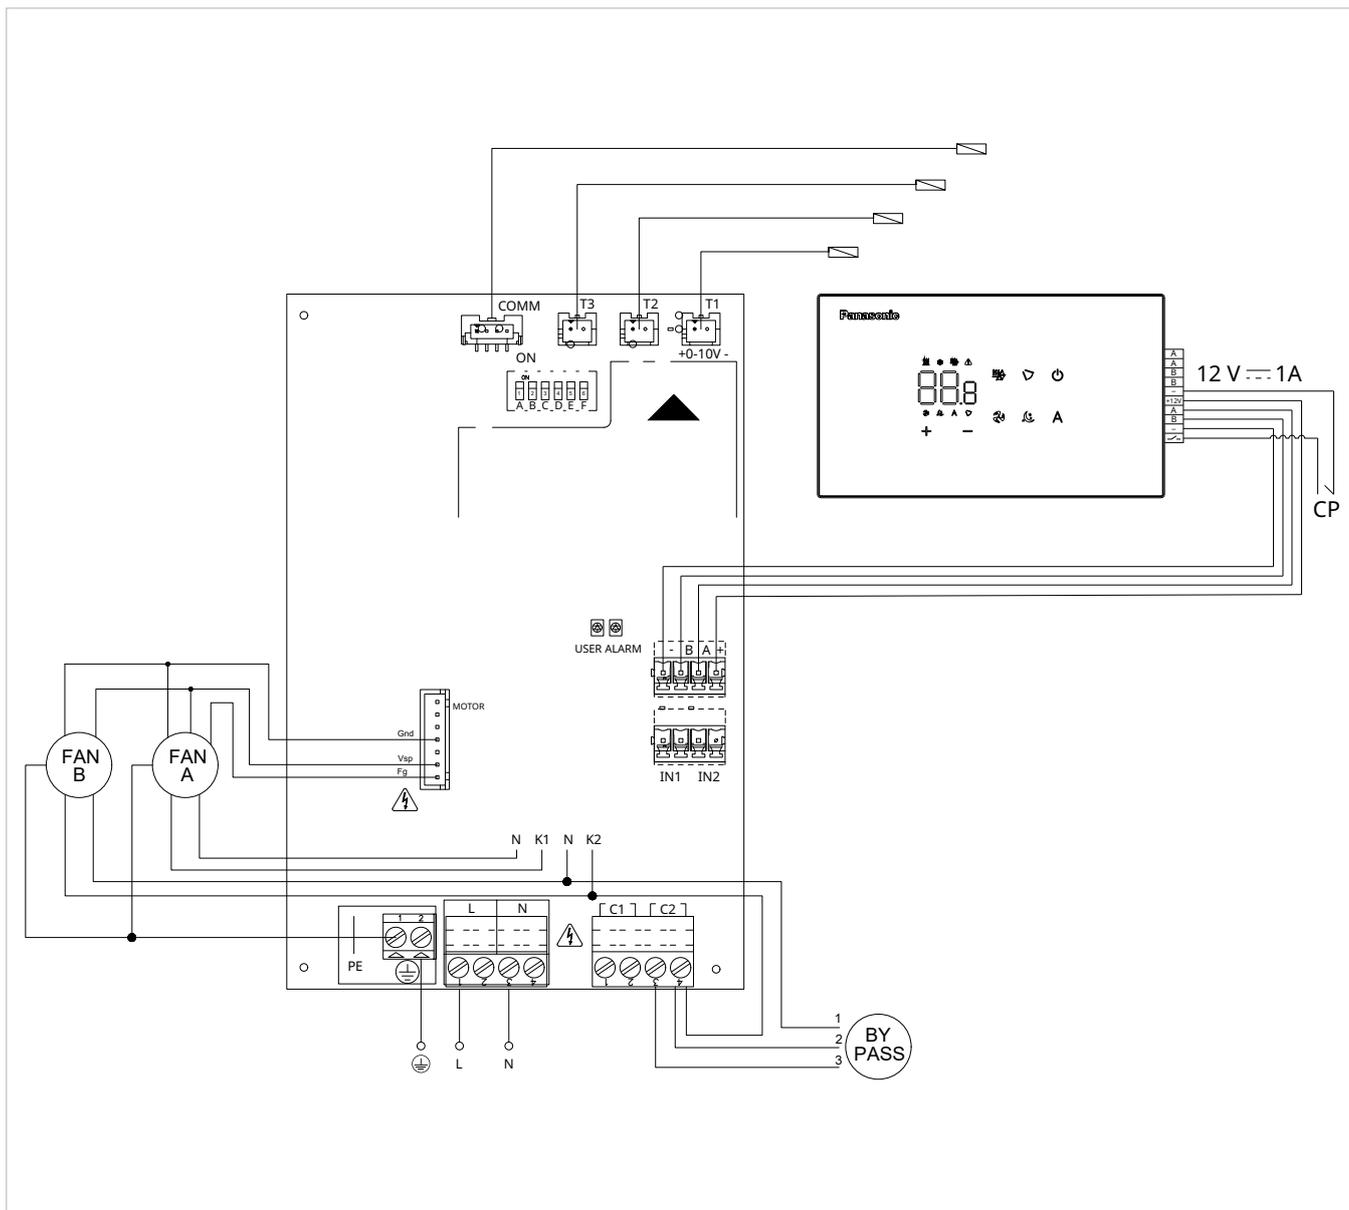

## 4.4 Connections


### Preliminary warnings

#### 1. Terminals

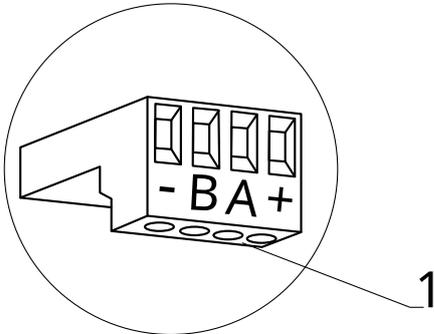

#### The terminals accept:

- rigid or flexible cables with a cross-section from 0.2 to 1 mm<sup>2</sup>
- rigid or flexible cables with a cross-section of 0.5 mm<sup>2</sup> if connecting two conductors in the same terminal
- rigid or flexible cables with a maximum cross-section of 0.75 mm<sup>2</sup> if equipped with a plastic collar ferrule

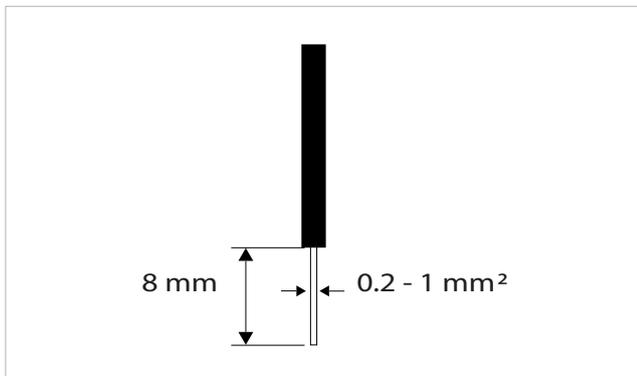

#### To connect the cables:


- ▶ strip 8 mm
- ▶ in the case of a rigid cable, insert it easily
- ▶ in the case of a flexible cable, use needle-nose pliers to assist
- ▶ push the cables in completely
- ▶ verify correct attachment by pulling them slightly

### Remote control


⚠ The wall control panel must be ordered separately.

#### Position of the terminal blocks:

#### 1. Terminal block (Panel rear view)

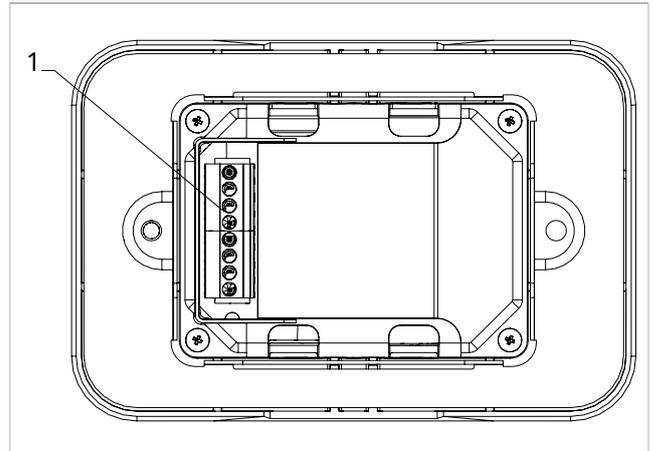

#### 1. Terminals

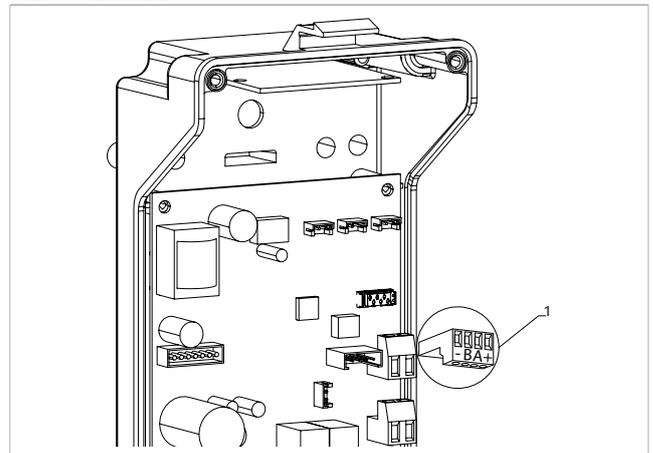

#### To make connections between the wall control panel and the board:

- ▶ connect the power cables to the + - terminals
- ▶ connect the ModBus serial connection cables to terminals A and B

### CP presence contact

Through this contact it is possible to connect an external device which inhibits the operation of the appliance, such as:

- window open contact
- remote on/off
- remote season change

#### Operation

*The contact is normally open. (NO)*

- ▶ when the CP contact, connected to a clean, non-live contact, is closed, the device goes into stand-by

*CP is displayed on the screen.*

- ▶ when a button is pressed, the symbol ⚠ flashes on the display

- ⊖ It is forbidden to connect the CP input in parallel with other electronic boards. Use separate contacts.

### RS485 serial connection

The wall remote control can be connected via an RS485 line.

The appliance must be equipped with an electronic board suitable for remote control.

For the connection:

- ▶ follow the connection diagram
- ▶ connect following the A and B indications

- ⚠ Use a shielded two-core cable suitable for serial RS485 connection with a minimum cross-section of 0.35 mm<sup>2</sup>.
- ⚠ Keep the bipolar cable at least 50 mm away from the power supply cables.
- ⚠ Route in such a way as to minimise the length of deviations.
- ⚠ Terminate the line with a 120 Ω resistor.
- ⊖ Star connections are prohibited.

## 4.5 Functions

### Basic menu

#### To access the basic menu

- ▶ From display off, hold the button  for 10 seconds  
*The device turns on and  appears*
- ▶ Hold until the indication  appears
- ▶ Release the button   
*The symbol  appears*

#### To navigate within the menu

- ▶ Use the icons  

#### To select menu items and confirm changes

- ▶ Press the icon   
*Confirming the change moves to the next item.*

#### To exit the menu

- ▶ press the icon  for 10 seconds
- ▶ or wait 30 seconds for automatic shutdown

- ⚠ After a period of 30 seconds from the last action, the display turns off and the changes made are automatically saved.

### Menu items

**ot:** AIR sensor offset (air sensor adjustment)

**ur:** Value read by the U.R. sensor

**ut:** RH sensor offset

**uS:** Humidity setpoint

**uI:** Humidity hysteresis

**Aq:** IAQ enabling

**AI:** Value read by IAQ sensor

**AS:** IAQ setpoint

**Hi:** IAQ proportional band

**CF:** Scale

**ub:** Buzzer volume

**uu:** Not used

**uP:** Not used

### Set AIR sensor offset

#### To set the air sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.5.  
The setting range is from a minimum of -12.0 °C to a maximum of 12.0 °C.*

### Set RH sensor offset

- ⚠ Only change after finding actual deviations compared to a real measurement made with professional equipment.

#### To set the RH sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.  
The setting range goes from a minimum of -9 °C to a maximum of 9 °C.*

### Set humidity setpoint

#### To set the humidity setpoint

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to 50%.  
The setting range varies from 20.0% to 90.0%.*

### Set humidity hysteresis

#### To set the humidity hysteresis

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to 5.  
The setting range is from a minimum of 1 to a maximum of 30.*

## Enable and select IAQ

### To set the IAQ parameter detection mode

- ▶ select
  - ▶ Press to change settings
  - ▶ press to navigate within the menu
  - ▶ Press to confirm
- By default it is set to . select to use the sensors built into the control panel to detect temperature, humidity, and IAQ. select to use the remote sensor to detect temperature, humidity, and IAQ. select to disable IAQ parameter reading; in this case, the T1 sensor on the electronic board is used as the room temperature reference.

## Set the IAQ setpoint

### To set the IAQ setpoint

- ▶ select
  - ▶ Press to change settings
  - ▶ Increase or decrease the value with the icons
  - ▶ Press to confirm
- By default it is set to 3.0. The setting range goes from a minimum of 0.0 to a maximum of 5.0.

## Set the IAQ proportional band

### To set the IAQ proportional band

- ▶ select
  - ▶ Press to change settings
  - ▶ Increase or decrease the value with the icons
  - ▶ Press to confirm
- By default it is set to 1.0. The setting range goes from a minimum of 0.0 to a maximum of 5.0.

## Scale

### To change the temperature unit

- ▶ select
  - ▶ Press to change settings
  - ▶ Select °C or °F
  - ▶ Press to confirm
- By default, the temperature unit is °C.

## Adjust volume

### To change the control volume


- ▶ select
  - ▶ Press to change settings
  - ▶ Increase or decrease the value with the icons
  - ▶ Press to confirm
- By default, the volume is set to 5.

⚠ The volume changes after confirming the modification.

## Error indication

The onboard card is equipped with LEDs which allow you to understand the operating status.

### 1. LED

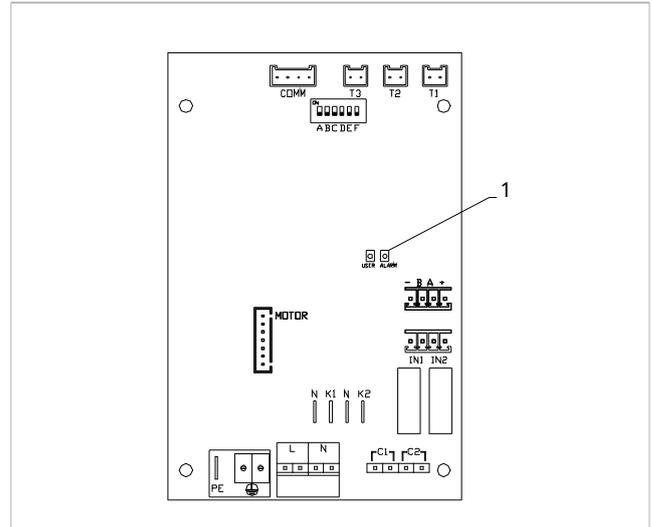

⚠ With the flashing LED, errors are indicated.

⚠ With the LED on, it indicates that there are no errors.

### LED indications

- ▶ Flashing LED  
Errors reported for display.
- ▶ LED off  
Wall controller off
- ▶ LED on  
Wall controller on and no alarms present.
- ▶ LED 2 flashes / pause  
Alarm: Internal fan motor failure or disconnected.
- ▶ LED 3 flashes / pause  
T2 temperature sensor alarm: water sensor disconnected or faulty.
- ▶ LED 6 flashes / pause  
Alarm: Communication error with wall control panel.

## Display alarms on the wall control panel

⚠ In case of an alarm, the appliance still maintains some active functions.

⚠ To indicate alarms on the control panel for wall control, the fixed symbol is displayed.

⚠ **To access the settings menu, you first need to access the basic menu. See paragraph "Basic menu" p. 26.**

### To view errors on the wall control panel

- ▶ access the basic menu
  - ▶ press appears
  - ▶ press appears
  - ▶ press to access the menu
- Subsequently, the number assigned to the fan coil appears and then the error is displayed.

### Displayed alarms

- ▶ E2 Internal fan motor fault or disconnected  
No device operation can be activated.
- ▶ E3 H2/T2 water temperature sensor disconnected or faulty  
No device operation can be activated.

- ▶ E6 Unsuitable water temperature with automatic season function setting  
*The fan coil performs heating and cooling functions incorrectly. No operation of the device is possible.*
- ▶ E8 Communication error  
*Communication error between the wall control panel and the fan coil.*
- ▶ h2o Unsuitable water temperature  
*In heating mode, the water temperature is below 30 °C.  
In cooling mode, the water temperature is above 20 °C.*


⚠ The E8 error is displayed without performing the error viewing procedure on the wall control panel.

## 5. WALL CONTROL COMMAND CODE PCZ-EFB749

### 5.1 Interface

1. Display area

2. Keypad area

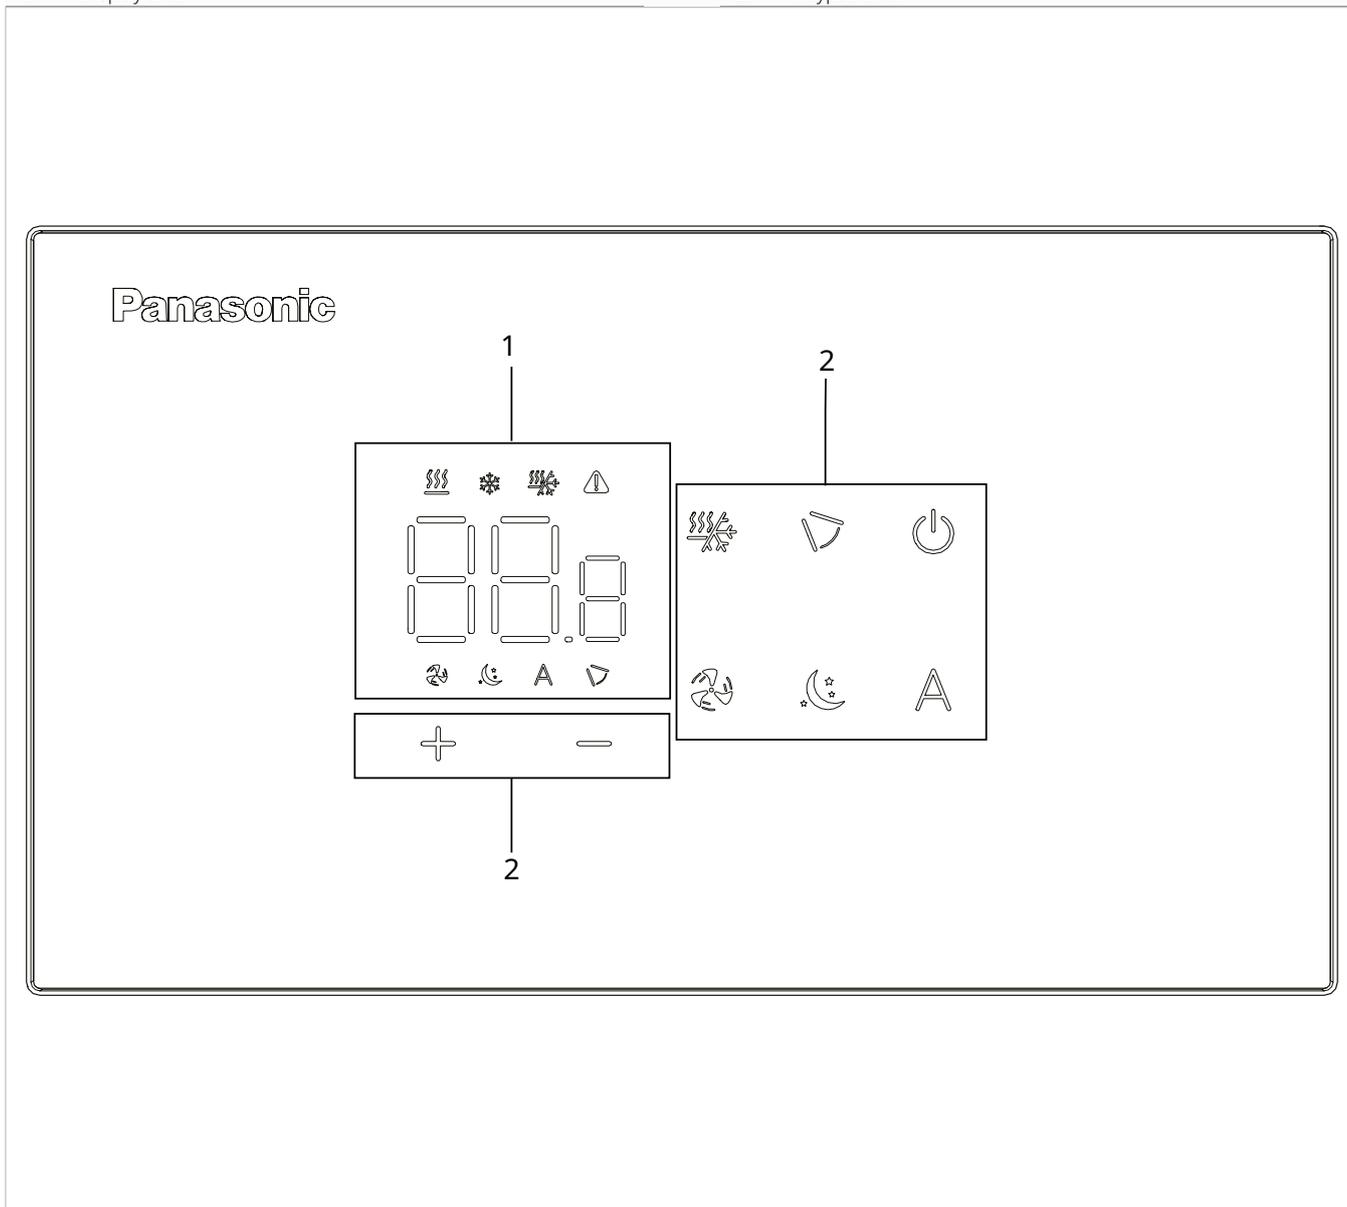

### 5.2 Installation


#### Description

the wall control panel is an electronic LED thermostat with touch interface, with the ability to control multiple appliances equipped with the same electronic board. It features a temperature and humidity sensor.

⚠ This control panel can be managed remotely through the Aquarea Home App.

**Mounting**


- ⚠ The wall control panel must be installed inside an electrical box.
- ⚠ Before proceeding with the installation of the wall control command, the wall must be prepared to accommodate the electrical box.
- ⚠ Make sure that:
  - the wall supports the weight of the appliance
  - the section of wall does not contain pipes or electrical lines
  - the functionality of load-bearing elements is not compromised

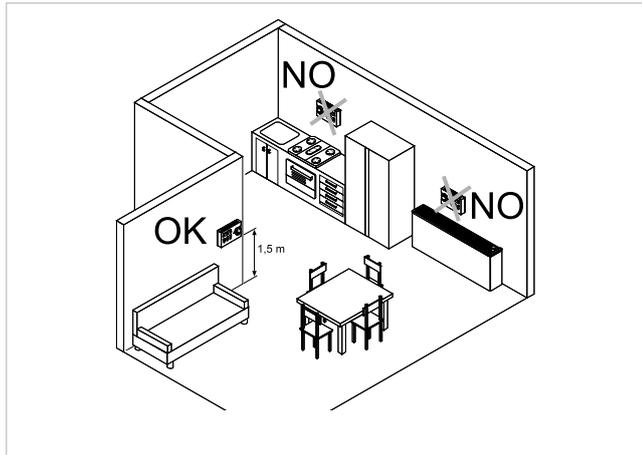

The wall control must be installed:

- on the outside walls
- at a height of approx. 1.5 m above the floor
- ⚠ If the control is located in an area used by people with reduced physical capabilities, refer to local regulations.
- away from doors and windows
- away from heat sources such as radiators, fan coils, cookers, direct sunlight
- ⚠ The wall control is supplied already assembled in the package.


- 1. Control base
- 2. Wall control command

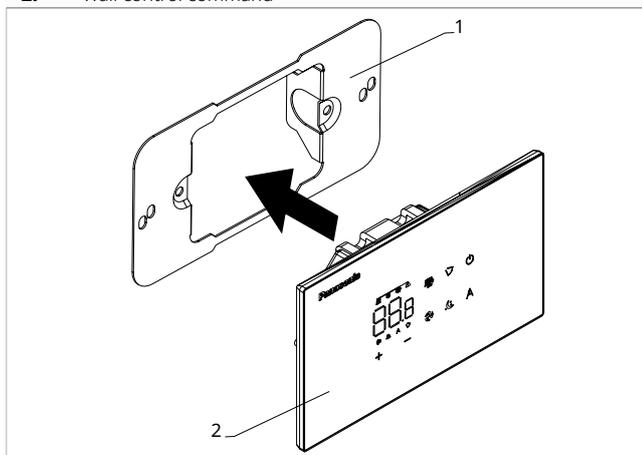

**Before mounting on the wall:**

- ▶ Separate the control base from the control panel


- 1. Fixing screws
- 2. Control base
- 3. Holes for fixing to the electrical box
- 4. Electrical box

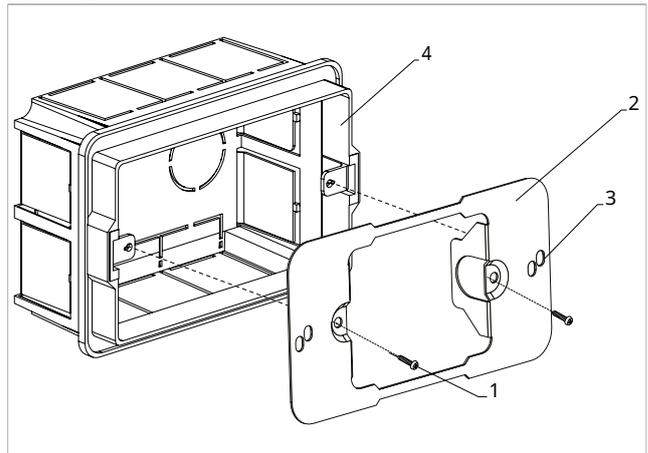

**For wall mounting of the control panel:**


- ▶ secure the control base to the electrical box with screws
- ▶ Make the connections
- ⚠ Before making the connections, check that the terminal block of the command is on the right side.
- ⚠ Several holes are present on the base of the control. The holes used depend on the model of the electrical box.

- 1. Electrical box
- 2. Control base
- 3. Wall control command

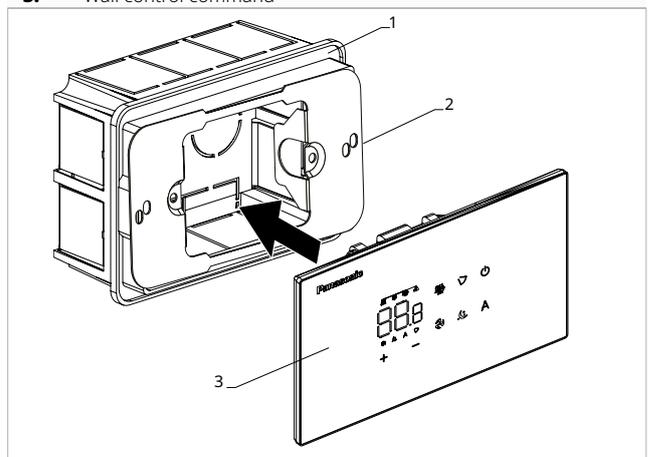

- ▶ close the control panel
- ⚠ Be careful not to crush the wires when closing the control.


### 5.3 Connection diagram

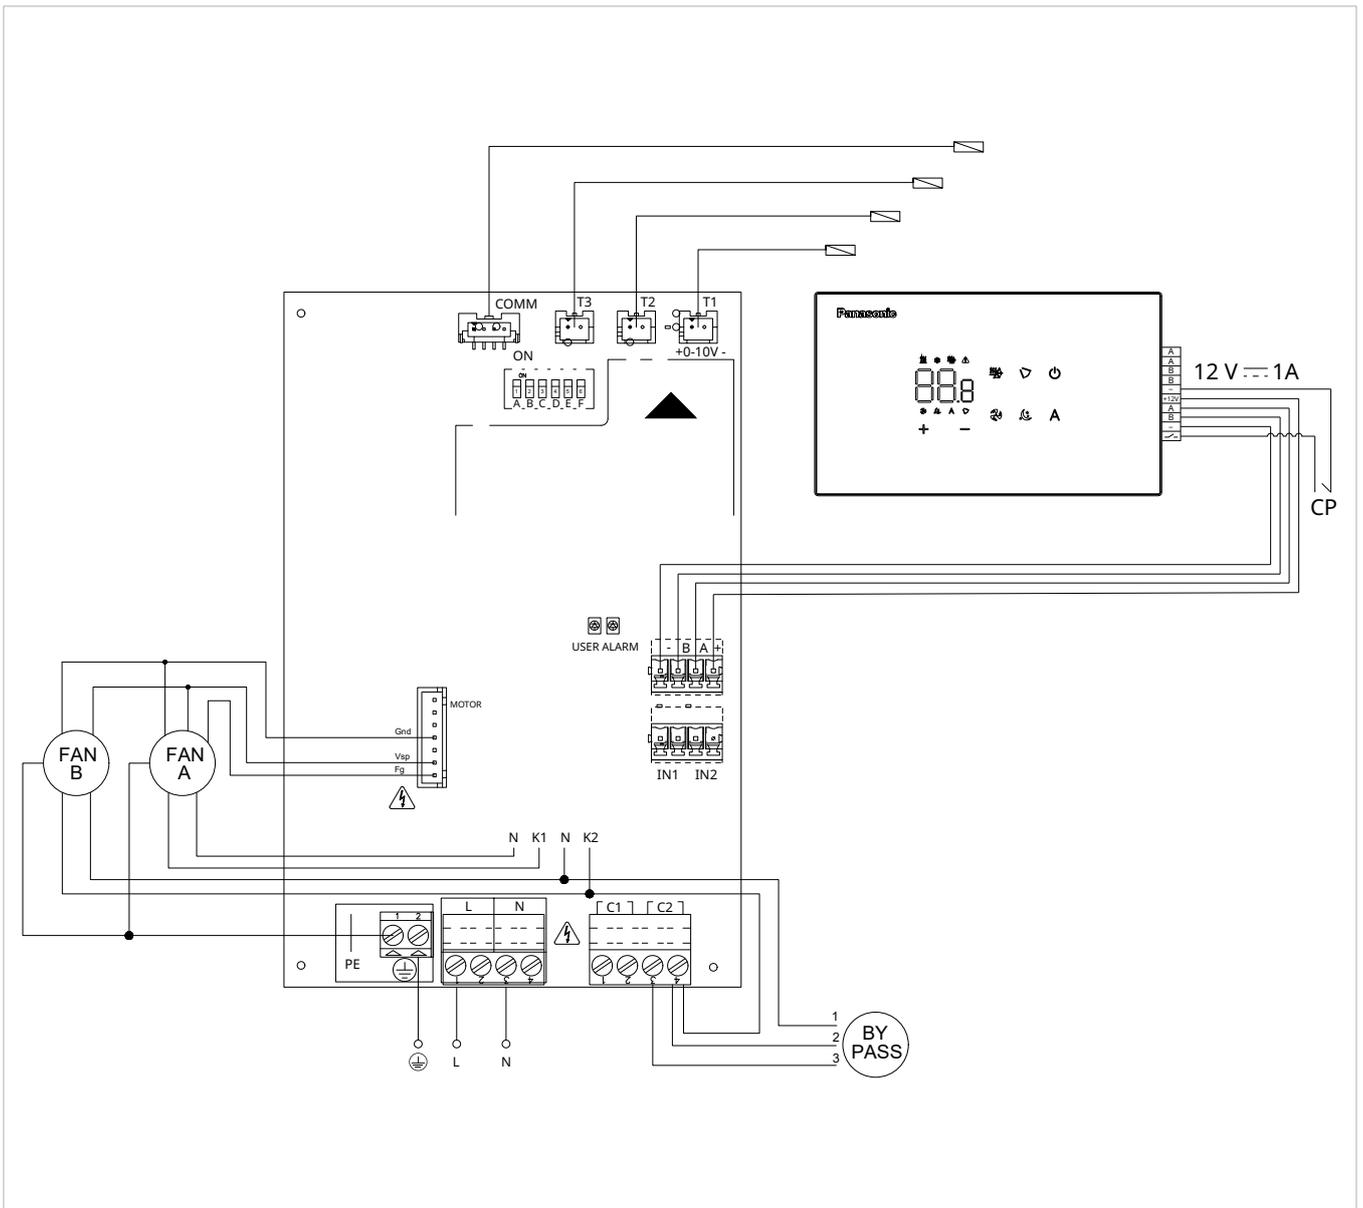

## 5.4 Connections


### Preliminary warnings

#### 1. Terminals

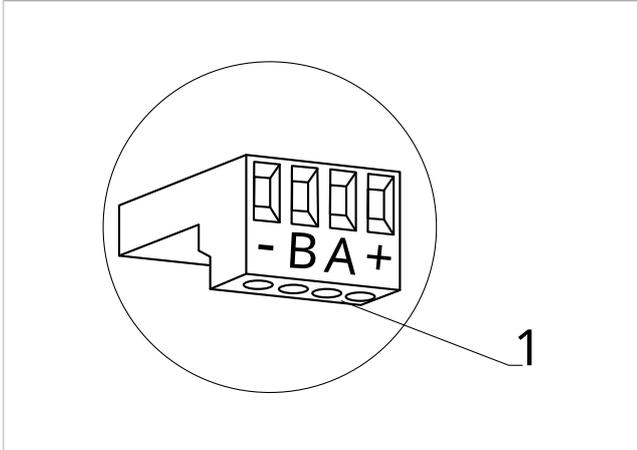

#### The terminals accept:

- rigid or flexible cables with a cross-section from 0.2 to 1 mm<sup>2</sup>
- rigid or flexible cables with a cross-section of 0.5 mm<sup>2</sup> if connecting two conductors in the same terminal
- rigid or flexible cables with a maximum cross-section of 0.75 mm<sup>2</sup> if equipped with a plastic collar ferrule

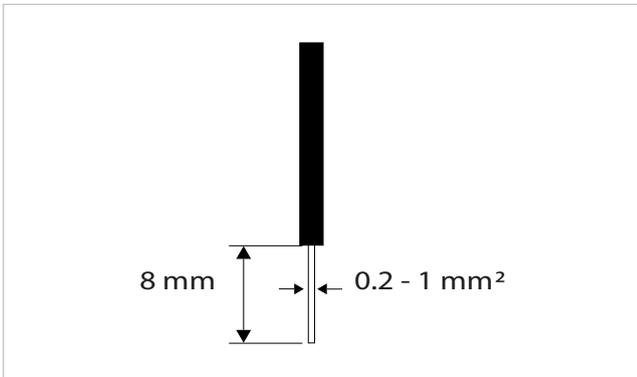

#### To connect the cables:


- ▶ strip 8 mm
- ▶ in the case of a rigid cable, insert it easily
- ▶ in the case of a flexible cable, use needle-nose pliers to assist
- ▶ push the cables in completely
- ▶ verify correct attachment by pulling them slightly

### Remote control


⚠ The wall control panel must be ordered separately.

#### Position of the terminal blocks:

#### 1. Terminal block (Panel rear view)

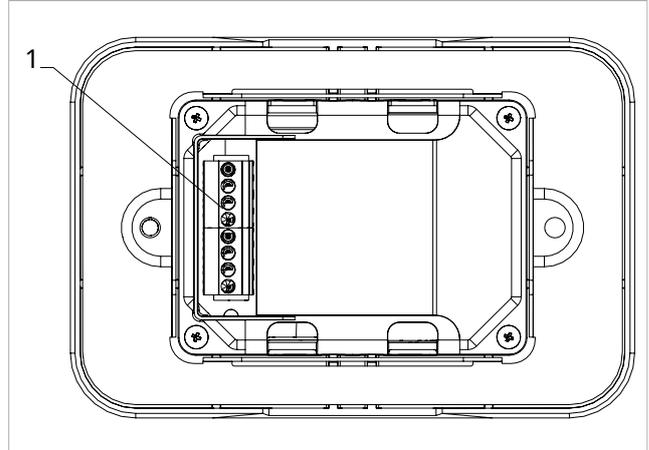

#### 1. Terminals

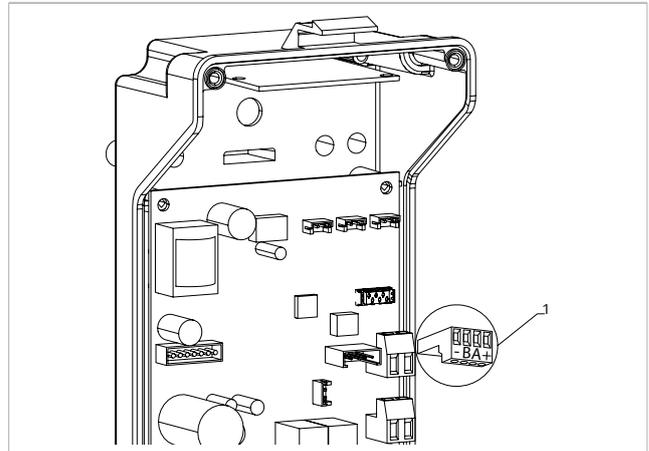

#### To make connections between the wall control panel and the board:

- ▶ connect the power cables to the + - terminals
- ▶ connect the ModBus serial connection cables to terminals A and B

### CP presence contact

Through this contact it is possible to connect an external device which inhibits the operation of the appliance, such as:

- window open contact
- remote on/off
- remote season change

#### Operation

*The contact is normally open. (NO)*

- ▶ when the CP contact, connected to a clean, non-live contact, is closed, the device goes into stand-by

*CP is displayed on the screen.*

- ▶ when a button is pressed, the symbol ⚠ flashes on the display

⚡ It is forbidden to connect the CP input in parallel with other electronic boards. Use separate contacts.

## RS485 serial connection

The wall remote control can be connected via an RS485 line.

The appliance must be equipped with an electronic board suitable for remote control.

For the connection:

- ▶ follow the connection diagram
- ▶ connect following the A and B indications

- ⚠ Use a shielded two-core cable suitable for serial RS485 connection with a minimum cross-section of 0.35 mm<sup>2</sup>.
- ⚠ Keep the bipolar cable at least 50 mm away from the power supply cables.
- ⚠ Route in such a way as to minimise the length of deviations.
- ⚠ Terminate the line with a 120 Ω resistor.
- ⊖ Star connections are prohibited.

## 5.5 Functions

### Basic menu

#### To access the basic menu

- ▶ From display off, hold the button  for 10 seconds  
*The device turns on and  appears*
- ▶ Hold until the indication  appears
- ▶ Release the button   
*The symbol  appears*

#### To navigate within the menu

- ▶ Use the icons  

#### To select menu items and confirm changes

- ▶ Press the icon   
*Confirming the change moves to the next item.*

#### To exit the menu

- ▶ press the icon  for 10 seconds
- ▶ or wait 30 seconds for automatic shutdown

- ⚠ After a period of 30 seconds from the last action, the display turns off and the changes made are automatically saved.

### Menu items

**ot:** AIR sensor offset (air sensor adjustment)

**ur:** Value read by the U.R. sensor

**ut:** RH sensor offset

**uS:** Humidity setpoint

**uI:** Humidity hysteresis

**Aq:** IAQ enabling

**AI:** Value read by IAQ sensor

**AS:** IAQ setpoint

**Hi:** IAQ proportional band

**CF:** Scale

**ub:** Buzzer volume

**uu:** Reset Wi-Fi

**up:** Wi-Fi activation

### Set AIR sensor offset

#### To set the air sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.5.  
The setting range is from a minimum of -12.0 °C to a maximum of 12.0 °C.*

### Set RH sensor offset

- ⚠ Only change after finding actual deviations compared to a real measurement made with professional equipment.

#### To set the RH sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.  
The setting range goes from a minimum of -9 °C to a maximum of 9 °C.*

### Set humidity setpoint

#### To set the humidity setpoint

- ▶ select
- ▶ Press to change settings
- ▶ Increase or decrease the value with the icons
- ▶ Press to confirm  
By default it is set to 50%.  
The setting range varies from 20.0% to 90.0%.

### Set humidity hysteresis

#### To set the humidity hysteresis

- ▶ select
- ▶ Press to change settings
- ▶ Increase or decrease the value with the icons
- ▶ Press to confirm  
By default it is set to 5.  
The setting range is from a minimum of 1 to a maximum of 30.

### Enable and select IAQ

#### To set the IAQ parameter detection mode

- ▶ select
- ▶ Press to change settings
- ▶ press to navigate within the menu
- ▶ Press to confirm  
By default it is set to .  
select to use the sensors built into the control panel to detect temperature, humidity, and IAQ.  
select to use the remote sensor to detect temperature, humidity, and IAQ.  
select to disable IAQ parameter reading; in this case, the T1 sensor on the electronic board is used as the room temperature reference.

### Set the IAQ setpoint

#### To set the IAQ setpoint

- ▶ select
- ▶ Press to change settings
- ▶ Increase or decrease the value with the icons
- ▶ Press to confirm  
By default it is set to 3.0.  
The setting range goes from a minimum of 0.0 to a maximum of 5.0.

### Set the IAQ proportional band

#### To set the IAQ proportional band

- ▶ select
- ▶ Press to change settings
- ▶ Increase or decrease the value with the icons
- ▶ Press to confirm  
By default it is set to 1.0.  
The setting range goes from a minimum of 0.0 to a maximum of 5.0.

### Scale

#### To change the temperature unit

- ▶ select
- ▶ Press to change settings
- ▶ Select °C or °F
- ▶ Press to confirm  
By default, the temperature unit is °C.

### Adjust volume

#### To change the control volume

- ▶ select
- ▶ Press to change settings
- ▶ Increase or decrease the value with the icons
- ▶ Press to confirm  
By default, the volume is set to 5.

⚠ The volume changes after confirming the modification.

### Reset Wi-Fi

#### To reset Wi-Fi credentials and restore the device to its original configuration

- ▶ select
- ▶ Press to change settings
- ▶ use the icons and sequentially  
Appears
- ▶ press
- ▶ appears to reset Wi-Fi credentials.
- ▶ Press to confirm  
The credentials have been reset.

### Activate Wi-Fi

#### To activate Wi-Fi


- ▶ select
- ▶ Press to change settings
- ▶ use the icons and sequentially  
Appears
- ▶ press
- ▶ appears to enable Wi-Fi pairing.
- ▶ Press to confirm

⚠ The device remains visible on the App for the first 15 minutes after turning on the appliance.

### Error indication

The onboard card is equipped with LEDs which allow you to understand the operating status.

#### 1. LED

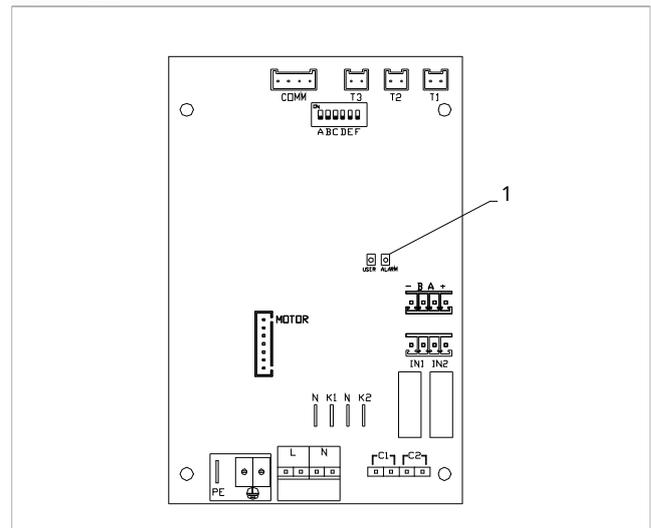

⚠ With the flashing LED, errors are indicated.

⚠ With the LED on, it indicates that there are no errors.

**LED indications**

- ▶ Flashing LED  
*Errors reported for display.*
- ▶ LED off  
*Wall controller off*
- ▶ LED on  
*Wall controller on and no alarms present.*
- ▶ LED 2 flashes / pause  
*Alarm: Internal fan motor failure or disconnected.*
- ▶ LED 3 flashes / pause  
*T2 temperature sensor alarm: water sensor disconnected or faulty.*
- ▶ LED 6 flashes / pause  
*Alarm: Communication error with wall control panel.*

**Display alarms on the wall control panel**

- ⚠ In case of an alarm, the appliance still maintains some active functions.
- ⚠ To indicate alarms on the control panel for wall control, the fixed symbol  is displayed.
- ⚠ **To access the settings menu, you first need to access the basic menu. See paragraph "Basic menu" p. 33.**

**To view errors on the wall control panel**

- ▶ access the basic menu
- ▶ press   
 appears
- ▶ press   
 appears
- ▶ press  to access the menu  
*Subsequently, the number assigned to the fan coil appears and then the error is displayed.*

**Displayed alarms**

- ▶ E2 Internal fan motor fault or disconnected  
*No device operation can be activated.*
  - ▶ E3 H2/T2 water temperature sensor disconnected or faulty  
*No device operation can be activated.*
  - ▶ E6 Unsuitable water temperature with automatic season function setting  
*The fan coil performs heating and cooling functions incorrectly. No operation of the device is possible.*
  - ▶ E8 Communication error  
*Communication error between the wall control panel and the fan coil.*
  - ▶ h2o Unsuitable water temperature  
*In heating mode, the water temperature is below 30 °C.  
In cooling mode, the water temperature is above 20 °C.*
- ⚠ The E8 error is displayed without performing the error viewing procedure on the wall control panel.

## 6. START-UP

### 6.1 Preliminary warnings

- ⚠ **This section is dedicated to the Authorised Service Centre. The specifications of the Authorised Service Centre are described in chapter "Recipients" p. 4.**
- ⚠ **Initial commissioning must be carried out by the Authorised Service Centre.**
- ⚠ **For detailed information on accessories, refer to the relevant instruction sheets.**

See chapter "Compatible accessories" p. 9

- ⚠ The customer must be present when the appliance is tested and informed of the contents of the manual and procedures. After commissioning, the manual and the warranty certificate must be handed over to the customer.
- ⚠ Before start-up, all works (electrical, hydraulic and air-flow connections) must have been completed.

### 6.2 First start-up

#### Preliminary Checks

Before commissioning, check that:

#### Operational checks

- all safety conditions have been met
- the unit has been properly secured to the supporting surface or wall
- the minimum technical spaces have been observed

#### Airflows

- the airflow connections have been made according to the instructions in the manual
- all airflow connections are correctly secured
- the ducting is correctly supported
- the ducting does not have any bottlenecks
- the ducting is thermally insulated

#### Electrical checks


- the cross-section of the power supply cables is adequate for the absorption of the appliance and the length of the connection made
- grounding is correctly performed
- the electrical connections have been established correctly
- all control wires are connected and that all electrical connections are secure

#### Settings

#### Microswitches

There are microswitches on the board for the various operating configurations of the unit. It is essential to set the microswitches correctly; the table shows the various operating modes.

1.	Microswitch A
2.	Microswitch B
3.	Microswitch C
4.	Microswitch D
5.	Microswitch E
6.	Microswitch F

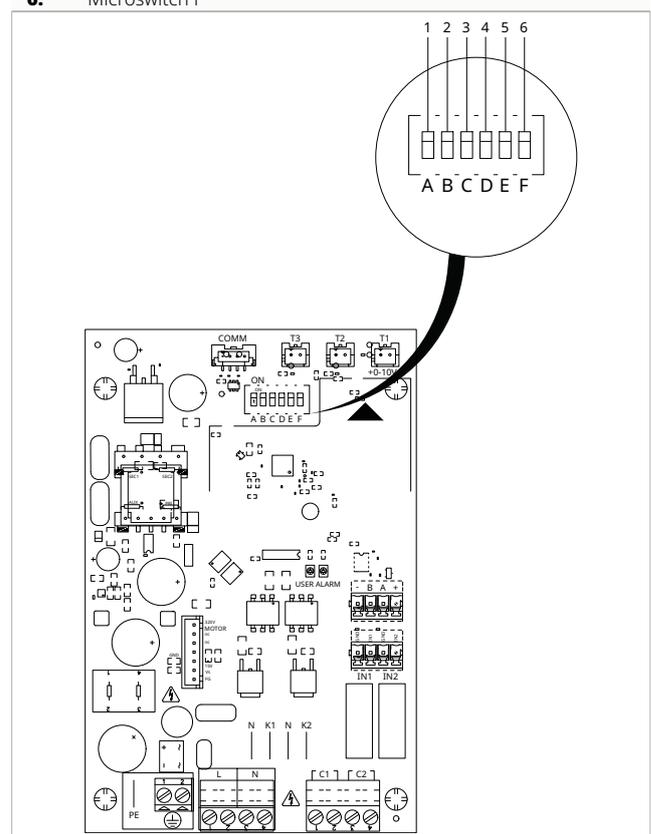

MICROSWITCH FUNCTIONS		
Microswitch A	ON	OFF
	Preheating coil activation contact CHILLER	Postheating coil activation contact CHILLER
Microswitch B	ON	OFF
	Enabling of unit with modulating coil control	Disabling of unit with modulating coil control
Microswitches C - D	ON OFF	OFF ON
	Room humidity control	Room air quality control
	ON ON	OFF OFF
	Humidity and room air quality control active. The maximum value of the two calculated values is used	Moisture and ambient air quality controls deactivated
Microswitch E	ON	OFF
	Configuration B	Configuration A (standard)
Microswitch F	ON	OFF
	RTU	ASCII (standard)

- ⚠ Microswitch A Management of pre-heating and post-heating batteries. Verify the connections.
- ⚠ Microswitch B The unit model is set to OFF by default. Do not change the setting to prevent the unit from malfunctioning.
- ⚠ Microswitches C - D The combination of these microswitches decides the operation of the humidity and air quality sensors.
- ⚠ Microswitch E The unit model is factory-set to OFF. If set to ON, please verify the connections and the application of label B.

### 6.3 Plant delivery

Once all the checks and controls on the correct operation of the plant have been completed, the installer must explain the following to the user:

- ⚠ Microswitch F The unit model is factory-set to OFF. If set to ON, the control panel will cease to respond.
- ⓘ **In case of installation of the electric heating battery accessory, refer to the section "Accessories" p. 65 for the setting of the microswitches.**

#### Start-up

After all checks have been carried out, the unit can be put into operation.

#### To activate the appliance:

- ▶ refer to the chapter in the user manual

#### Checks with the machine switched on

After starting up, check that

#### Operational checks:

- verify the different modes of operation
- verify that the appliance stops and then restarts
- switch the appliance off and on again and check that it restarts correctly
- the appliance operates within the recommended operating conditions (see technical specifications table)
- check that the air flow rates are correct
- verify that the unit's configuration complies with the site requirements

#### Hydraulic Checks

- check for proper condensate drainage

#### Electrical Checks

- the current absorbed is less than the maximum indicated in the technical data table
- the supply voltage value is within the set limits and does not fall below the nominal value -10 % during operation

### 6.4 Switching off for extended periods

If the appliance is not used for a long period of time, the following steps must be taken:

- ▶ deactivating the device
- ▶ isolate the power supply
- ⚠ To restart the appliance after it has been out of use for a long period, call in the Authorised Service Centre.

## 7. MAINTENANCE

### 7.1 Routine maintenance

#### Annual operations

The once-a-year maintenance plan includes the following operations and checks and must be carried out by the Authorised Service Centre or by qualified personnel.

#### Electrical circuit

Check:

- electrical supply voltage
- the electrical absorption
- tightening connections
- that there is no damage or excessive wear to electrical cables
- that the gaskets and sealing materials have not deteriorated to such an extent that they are no longer suitable for the purpose of preventing the development of flammable atmospheres inside
- the correct fixing of cable glands
- safety devices

#### Mechanical checks

Check:

- tightening of the screws, fans and electrical box, of the unit's external panelling
  - the state of the structure
- ⚠ Bad fixings result in abnormal noise and vibration.  
⚠ If oxidised parts are present, treat them with suitable paints to eliminate or reduce oxidation.

#### Hydraulic controls

Check:

- the regular drainage of condensate
- cleaning the condensate collection trays
- cleaning the exhaust ducts

#### Airflow controls

Check:

- the regular flow of air
- cleaning of any intake grilles
- cleaning the ducting


#### Cleaning

- cleaning of aesthetic cover
- cleaning or filter replacement
- cleaning the heat exchanger

## Cleaning or filter replacement

1. Front panel  
2. Filter access hatch

3. Filter

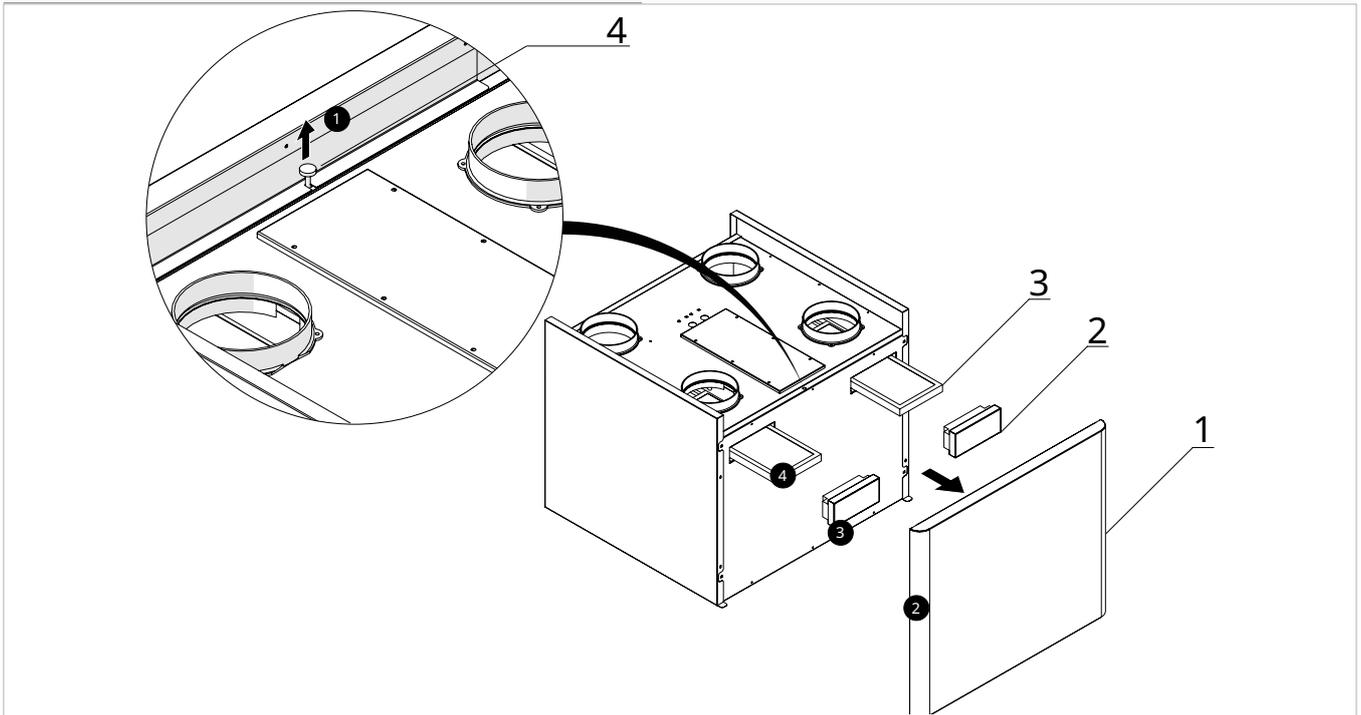

### To remove:

- ▶ isolate the power supply to the unit
- ▶ remove the adjustable spacer
- ▶ remove the front panel
- ▶ remove the filter access hatch
- ▶ take out the filter

⚠ Pay attention to sharp surfaces

- ⓘ **If the condition of the filters is acceptable, they can be cleaned using a vacuum cleaner or a low-pressure compressor.**
- ⓘ **If it is impossible to clean them, the filters must be replaced.**

### To reposition:


- ▶ perform in reverse order

## Cleaning the heat exchanger

### Cleaning the heat exchanger

- 1. Front cover
- 2. Front panel

- 3. Heat exchanger
- 4. Adjustable spacers

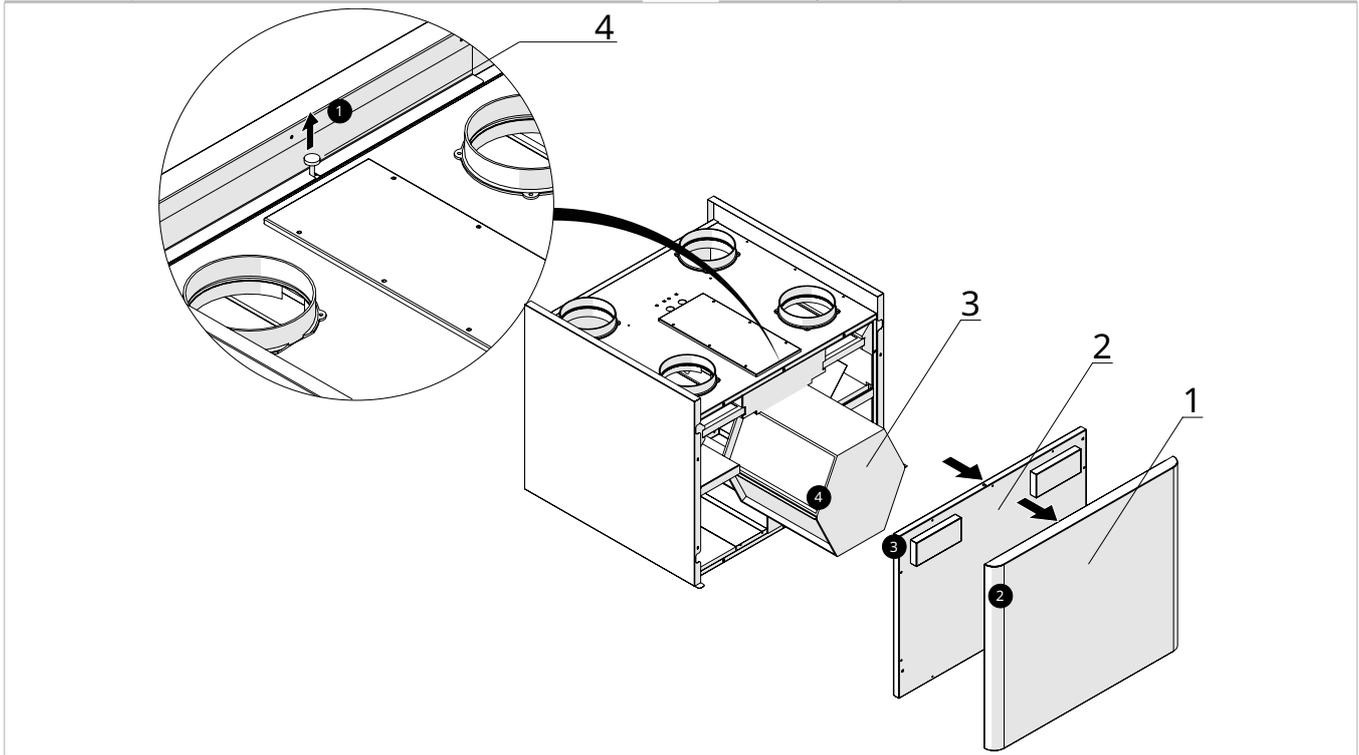

- ▶ isolate the power supply to the unit
- ▶ disconnect the condensate drain pipe
- ▶ remove the adjustable spacer
- ▶ remove the front cover
- ▶ remove the screws from the front panel
- ▶ remove the front panel from the unit
- ▶ extract the heat exchanger
- ▶ gently proceed with cleaning using a vacuum cleaner or a low-pressure compressor
- ⚠ Never touch the fins of the heat exchanger, handle only the closed sides.
- ⓘ **There is a special clamp/green strap for removing the heat exchanger.**
- ⓘ **To prevent dirt from entering the heat exchanger, clean in the opposite direction to the air flow.**

**To reposition:**

- ▶ perform in reverse order

## 8. FAULTS AND REMEDIES

### 8.1 Preliminary warnings

**If one of the following faults is found:**

- ventilation does not activate
- the appliance makes excessive noise
- there is dew formation on the front panel

**Follow the instructions below:**

- ▶ immediately isolate the power supply
- ▶ contact an Authorised Service Centre or professionally qualified personnel
- ⚠ The intervention must be carried out by a qualified installer or an Authorised Service Centre.
- ⊘ Personal intervention is prohibited.

### 8.2 Troubleshooting table

DESCRIPTION OF FAULT	CAUSE	REMEDY
The fans are not active	The power supply is not switched on	Check the fan power supply
	The fan speed regulation device does not work	Check fan speed regulation device
	Incorrect electrical connections	Check electrical connections.
	Fans in thermal protection	Check that the fan has not overheated and switched to thermal protection
Insufficient air flow or pressure	Clogged filters	Clean filters
	Insufficient rotation speed	Increase rotation speed
	Ducting or exchanger clogged	Clean ducting or heat exchanger
Insufficient heat exchanger efficiency	Exchanger fins clogged	Clean exchanger surfaces
Excessive vibration and noise	Incorrect installation of the unit	Check unit brackets and fastenings
	Incorrect ducting installation	Check brackets and duct fixings
	Fan impeller imbalance	Check fan impeller condition
Water leaks from unit	Clogged condensate drain	Clean condensate drain
	Siphon not installed correctly	Check the correct installation of the siphon
Difficult start-up	Supply voltage too low	Check that the supply voltage is not below 10% of the rated voltage

### 8.3 Alarm table and card flashes

DESCRIPTION OF ALARM	CAUSE	REMEDY	CARD FLASHES
Recovery ambient probe / External air alarm - T1	Sensor breakage or failure to read	Check probe connection or replace sensor	1 flash - off 3 seconds
Fan alarm	Fan connector faulty or feedback signal absent	Check the connection of the fan connector to the board	2 flashes - off 3 seconds
		Replace fan control cable Filters alarm counter reached Replace filters and reset	
Filters alarm	counter reached	Replace filters and reset	
Expulsion / intake probe alarm - T2	Sensor breakage or failure to read	Check probe connection or replace sensor	3 flashes - off 3 seconds
Outdoor air / extracted air probe alarm - T3	Sensor breakage or failure to read	Check probe connection or replace sensor	5 flashes - off 3 seconds
Remote display connection alarm	Remote display connection error	Check electrical connections.	LED off
		Check that A and B are not reversed	
		Check the correct insertion of the display connection board on the main board	
Remote display communication alarm	No communication between display and board for at least 300 seconds	Check the filter status and press and hold the On - Off button to reset the signalling	6 flashes - off 3 seconds
		Check that A and B are not reversed	
		Check the correct insertion of the display connection board on the main board	

## 9. TECHNICAL INFORMATION

### 9.1 Technical data

Models	u.m.	15V	30V	40V	45V
<b>VMC airflow performance</b>					
Air flow (nominal/maximum)	m <sup>3</sup> /h	112 / 170	210 / 300	266 / 380	315 / 450
Static pressure (nominal/maximum)	Pa	50 / 100	50 / 100	50 / 100	50 / 100
<b>Heat recovery performance (A 7; A 20) (1)</b>					
Sensible recovery efficiency	%	86,0	86,0	87,0	86,0
<b>Room side fan</b>					
Type		Centrifugal - directly coupled electronic motor			
Number	No.	1	1	1	1
<b>Outdoor side fan</b>					
Type		Centrifugal - directly coupled electronic motor			
Number	No.	1	1	1	1
<b>Heat exchanger</b>					
Type		Countercurrent plates - polypropylene material			
Number	No.	1	1	1	1
<b>Fresh air filter</b>					
Type		Pleated flat filter			
Number	No.	1	1	1	1
Efficiency		ePM1 80%	ePM1 70%	ePM1 70%	ePM1 70%
<b>Extract air filter</b>					
Type		Pleated flat filter			
Number	No.	1	1	1	1
Efficiency		ePM1 80%	ePM1 70%	ePM1 70%	ePM1 70%
<b>Room side sound levels (UNI EN 3741; 3744) (2)</b>					
Sound power transmitted to the Lw structure	dB (A)	48,0	49,0	51,0	54,0
Sound power radiated in the Lw channel	dB (A)	55,0	56,0	59,0	62,0
Average sound pressure at 1 m Lp	dB(A)	41,0	42,0	45,0	48,0
Average sound pressure at 3 m Lp	dB(A)	34,0	35,0	38,0	41,0
<b>Electrical characteristics</b>					
Power supply	V / ph / Hz	230 / 1 / 50			
Maximum total absorbed power	W	110,00	180,00	350,00	420,00
Maximum total absorbed current	A	0,70	1,60	1,60	2,50
Protection rating	IP	X2			
1. Efficiency according to UNI EN 13141-7 Outdoor temperature 7 °C - Outdoor humidity 72 % - Indoor temperature 20 °C - Indoor humidity 28 %.					
2. Data refers to the UNI EN 3741 and UNI EN 3744 standards					

Models	u.m.	15V	30V	40V	45V
<b>Product dimensions</b>					
Width	mm	630	787	787	787
Depth	mm	475	619	749	749
Height	mm	570	670	670	670
Weight	kg	32,0	38,0	42,0	43,0
<b>Connections</b>					
Room side air connection	mm	160	160	160	160
Outdoor side air connection	mm	160	160	160	160
Condensate drain connection	mm	20	20	1	20
1. Efficiency according to UNI EN 13141-7 Outdoor temperature 7 °C - Outdoor humidity 72 % - Indoor temperature 20 °C - Indoor humidity 28 %. 2. Data refers to the UNI EN 3741 and UNI EN 3744 standards					

## 9.2 Performance curves


### Size 15

#### Sensible version

<b>A</b>	Available pressure
<b>B</b>	Air flow
<b>1.</b>	Minimum ventilation speed 
<b>2.</b>	Rated ventilation speed 

<b>3.</b>	Maximum ventilation speed 
<b>PIN:</b>	Power input W
<b>SPI:</b>	Specific power input W/m <sup>3</sup> /h

A [Pa]

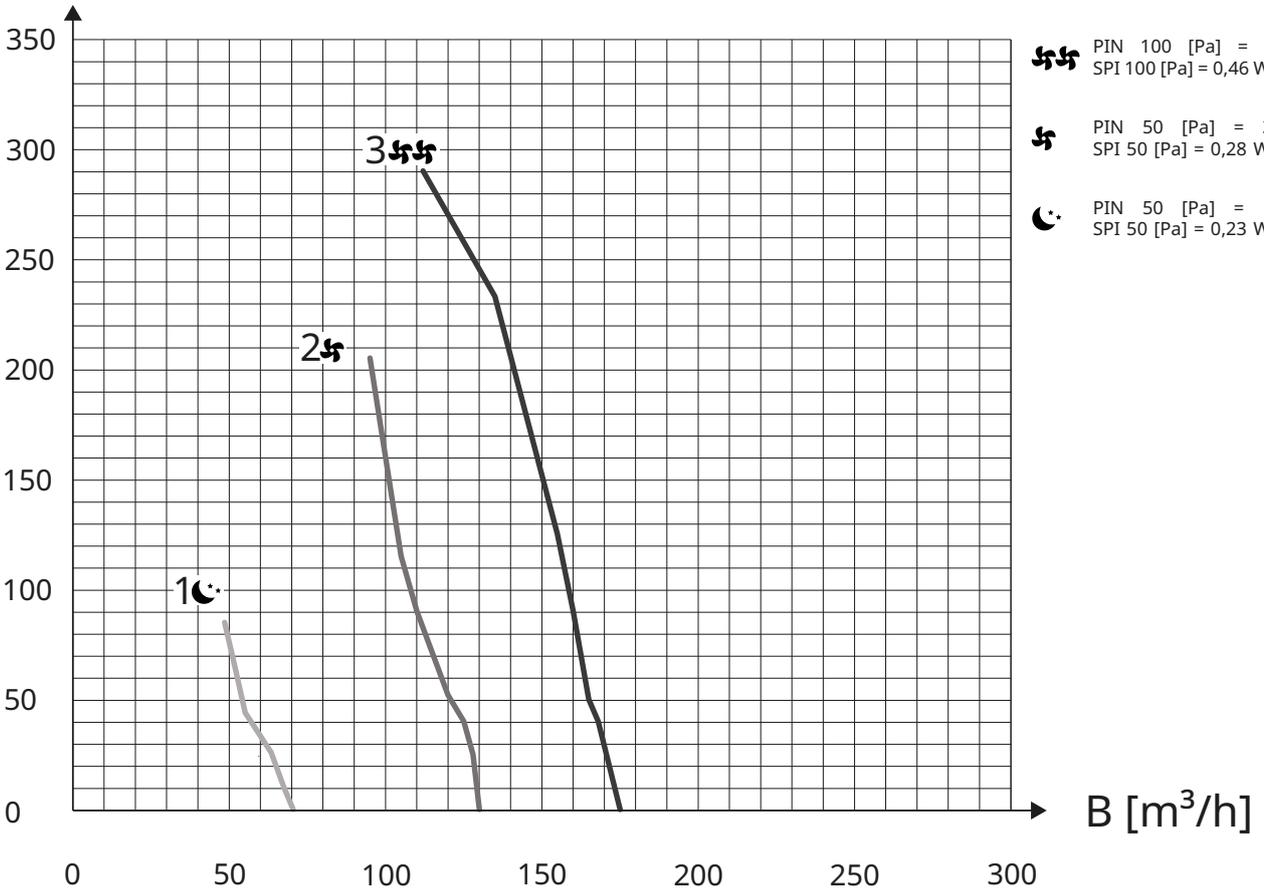


**Size 30**

**Sensible version**

<b>A</b>	Available pressure
<b>B</b>	Air flow
<b>1.</b>	Minimum ventilation speed
<b>2.</b>	Rated ventilation speed

<b>3.</b>	Maximum ventilation speed
<b>PIN:</b>	Power input W
<b>SPI:</b>	Specific power input W/m <sup>3</sup> /h

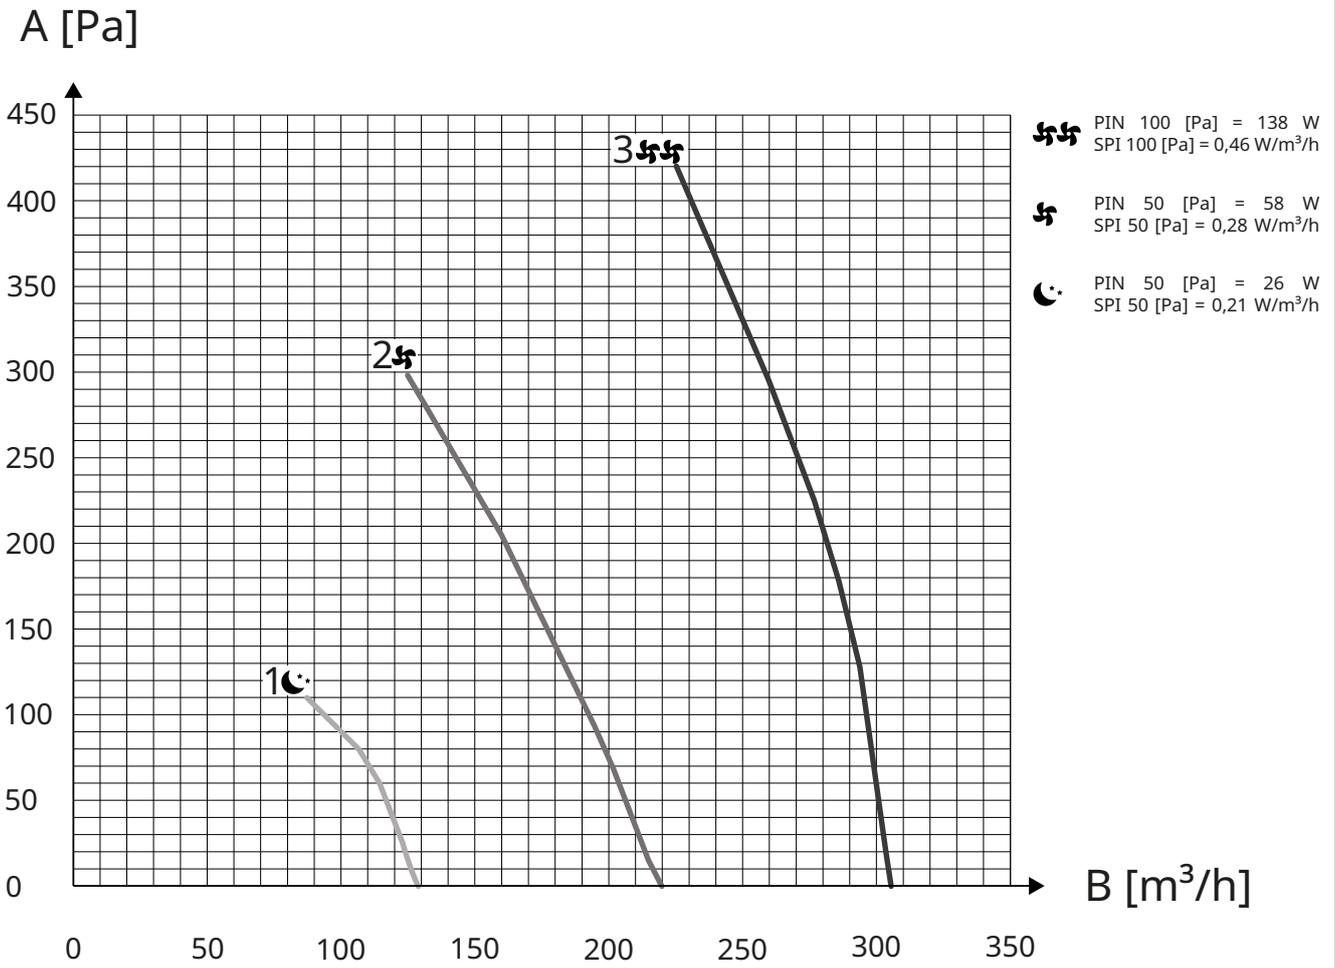


**Size 40**

**Sensible version**

<b>A</b>	Available pressure	<b>3.</b>	Maximum ventilation speed	☼☼
<b>B</b>	Air flow	<b>PIN:</b>	Power input	W
<b>1.</b>	Minimum ventilation speed	<b>SPI:</b>	Specific power input	W/m <sup>3</sup> /h
<b>2.</b>	Rated ventilation speed			

A [Pa]

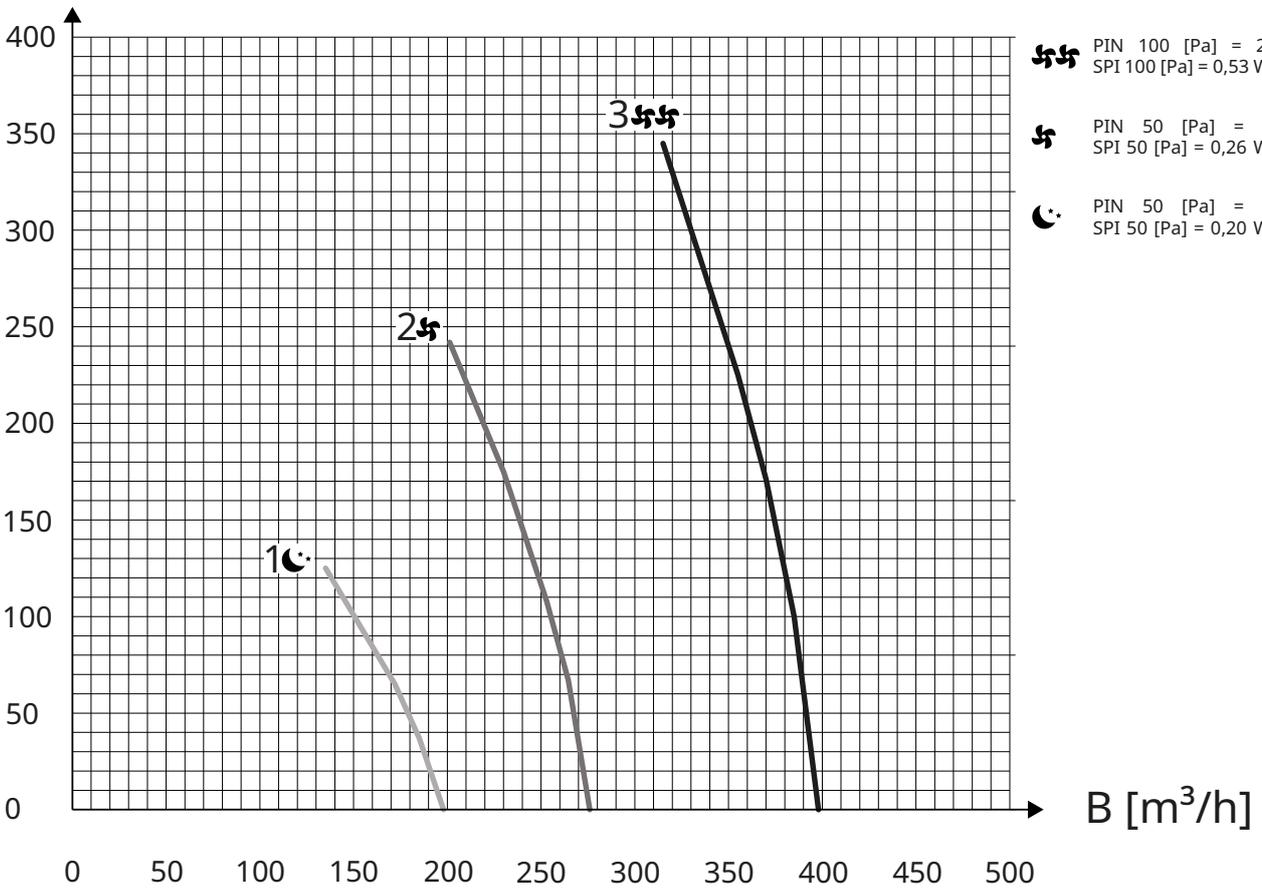


**Size 45**

**Sensible version**

<b>A</b>	Available pressure
<b>B</b>	Air flow
<b>1.</b>	Minimum ventilation speed 
<b>2.</b>	Rated ventilation speed 

<b>3.</b>	Maximum ventilation speed 
<b>PIN:</b>	Power input W
<b>SPI:</b>	Specific power input W/m <sup>3</sup> /h

A [Pa]

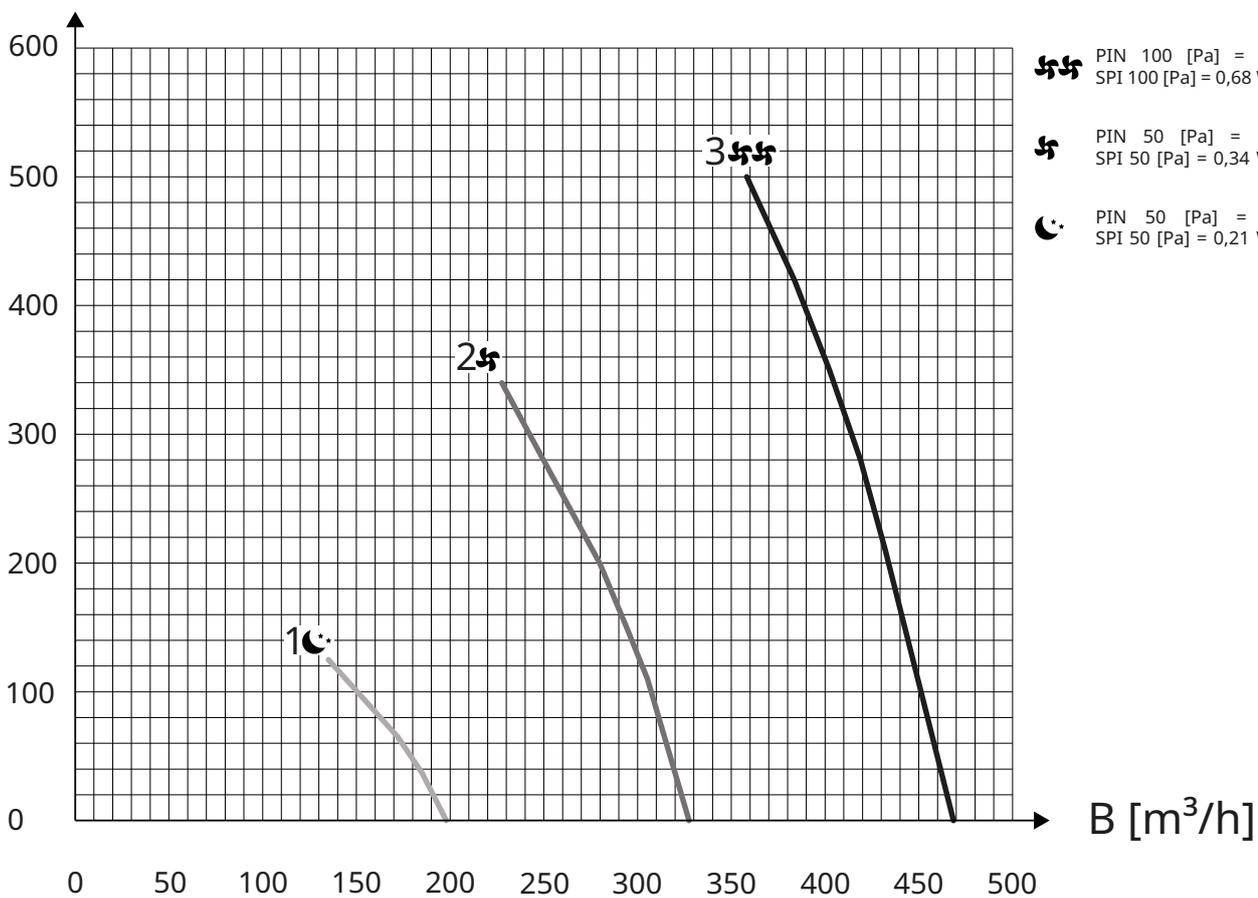


## 9.3 Heat recovery

### Size 15

#### Sensible version winter heat recovery

**A** Heat recovery  
**B** Air flow


**1.** Winter heat recovery

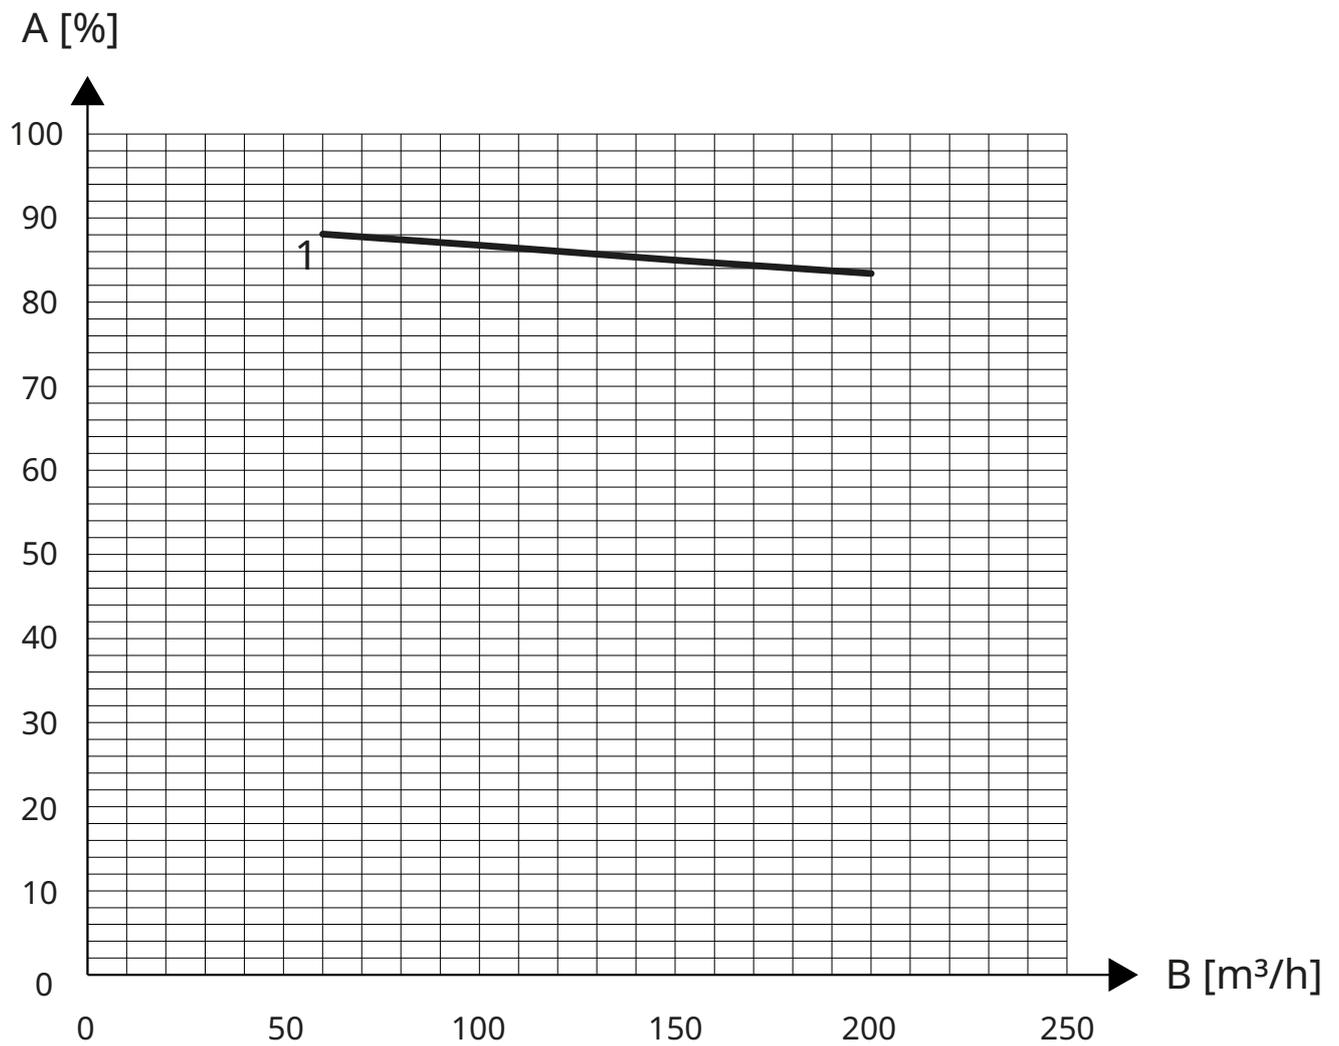

### Sensible version summer heat recovery

**A** Heat recovery  
**B** Air flow

**1.** Summer heat recovery

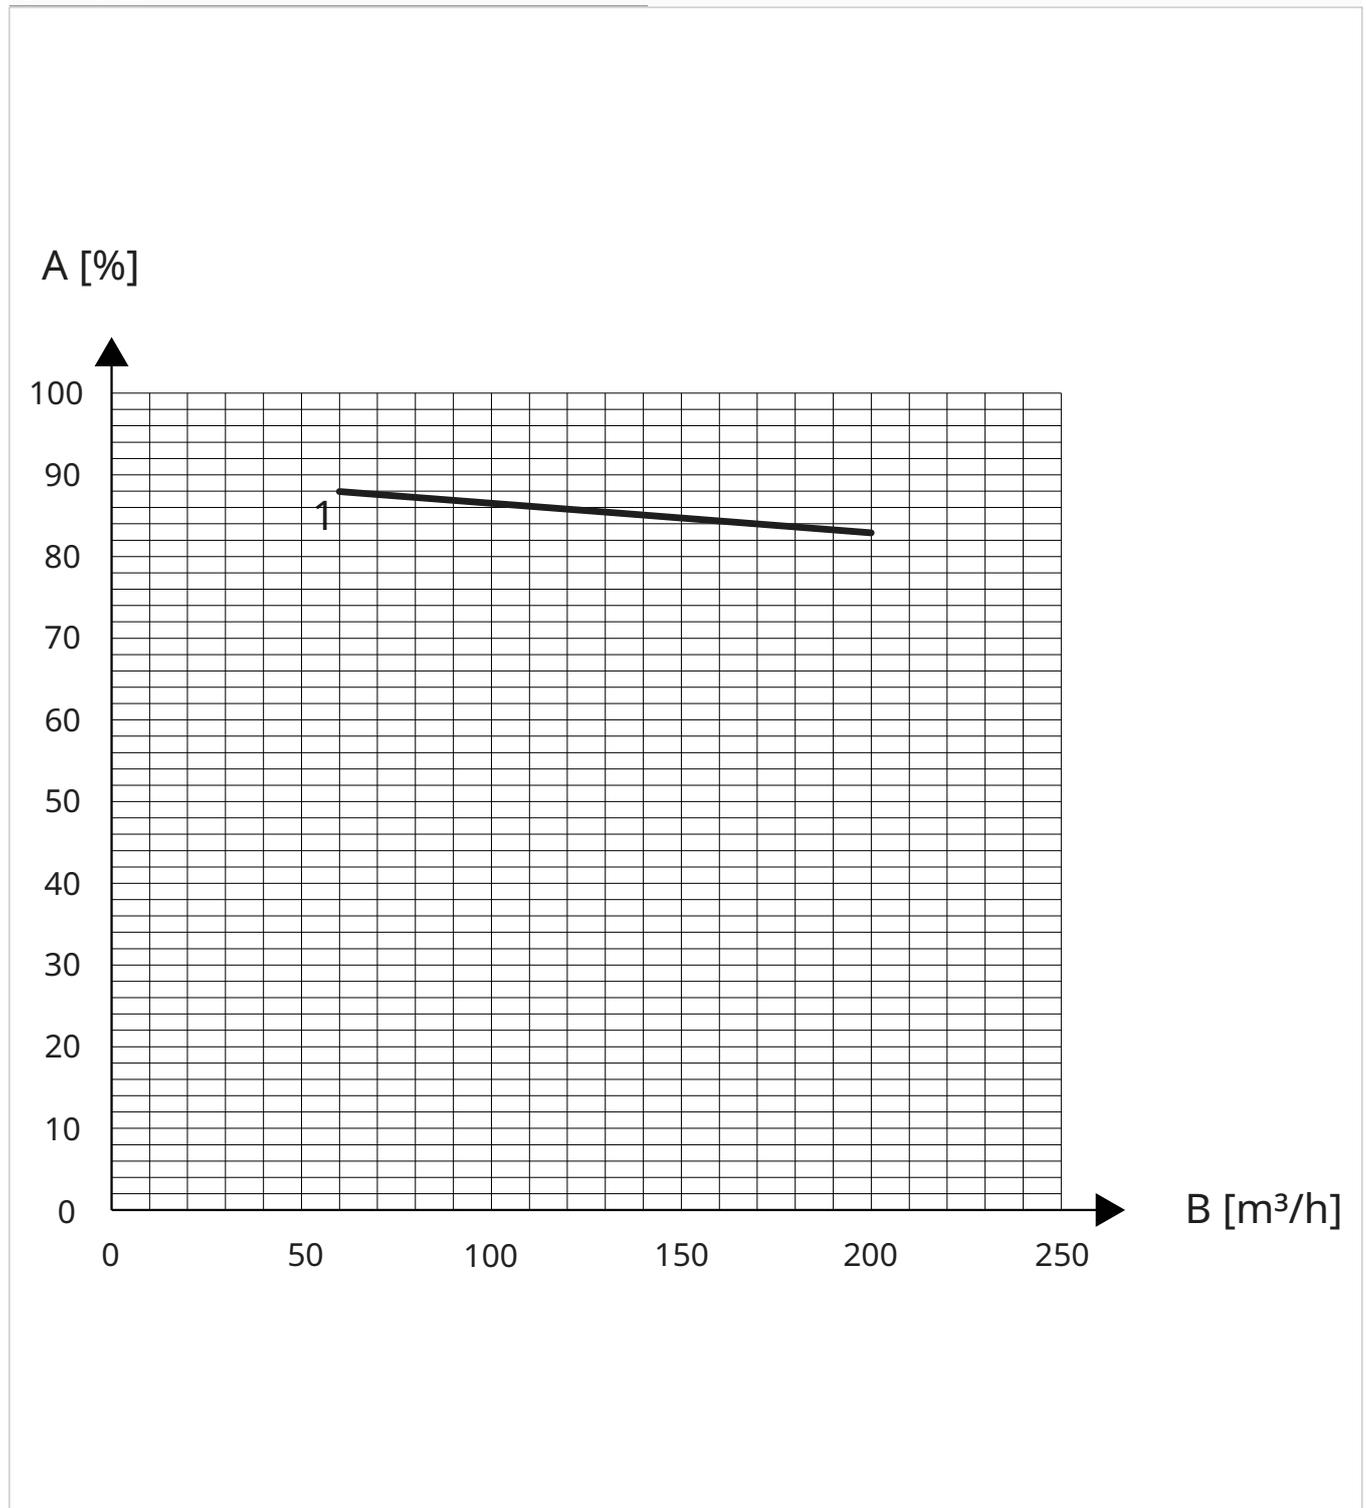


**Size 30**

**Sensible version winter heat recovery**

**A** Heat recovery  
**B** Air flow


**1.** Winter heat recovery

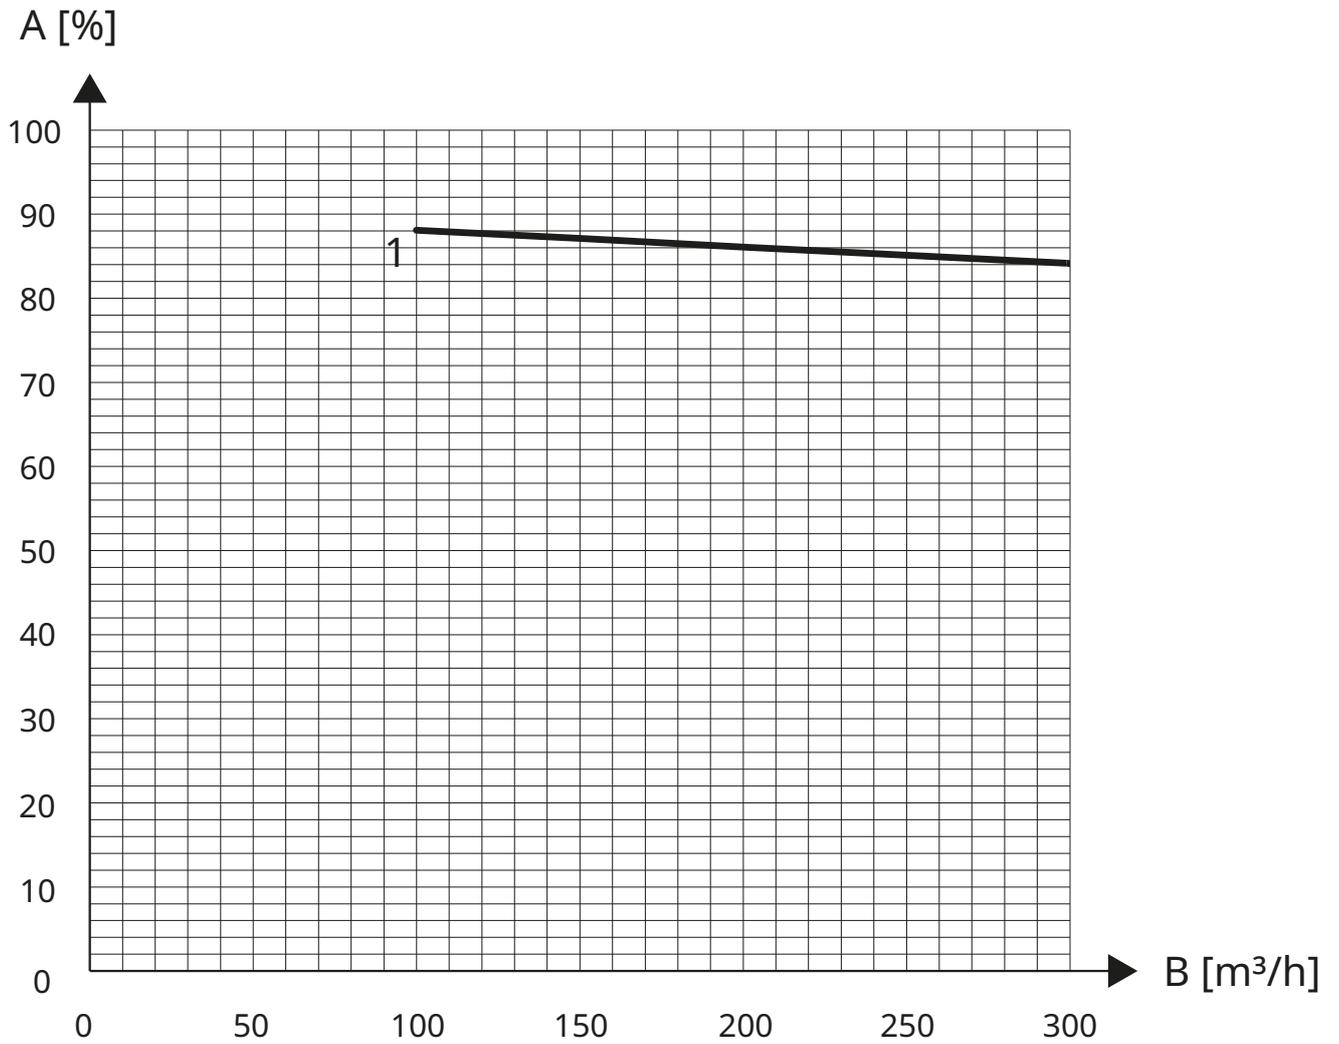


### Sensible version summer heat recovery

**A** Heat recovery  
**B** Air flow

**1.** Summer heat recovery

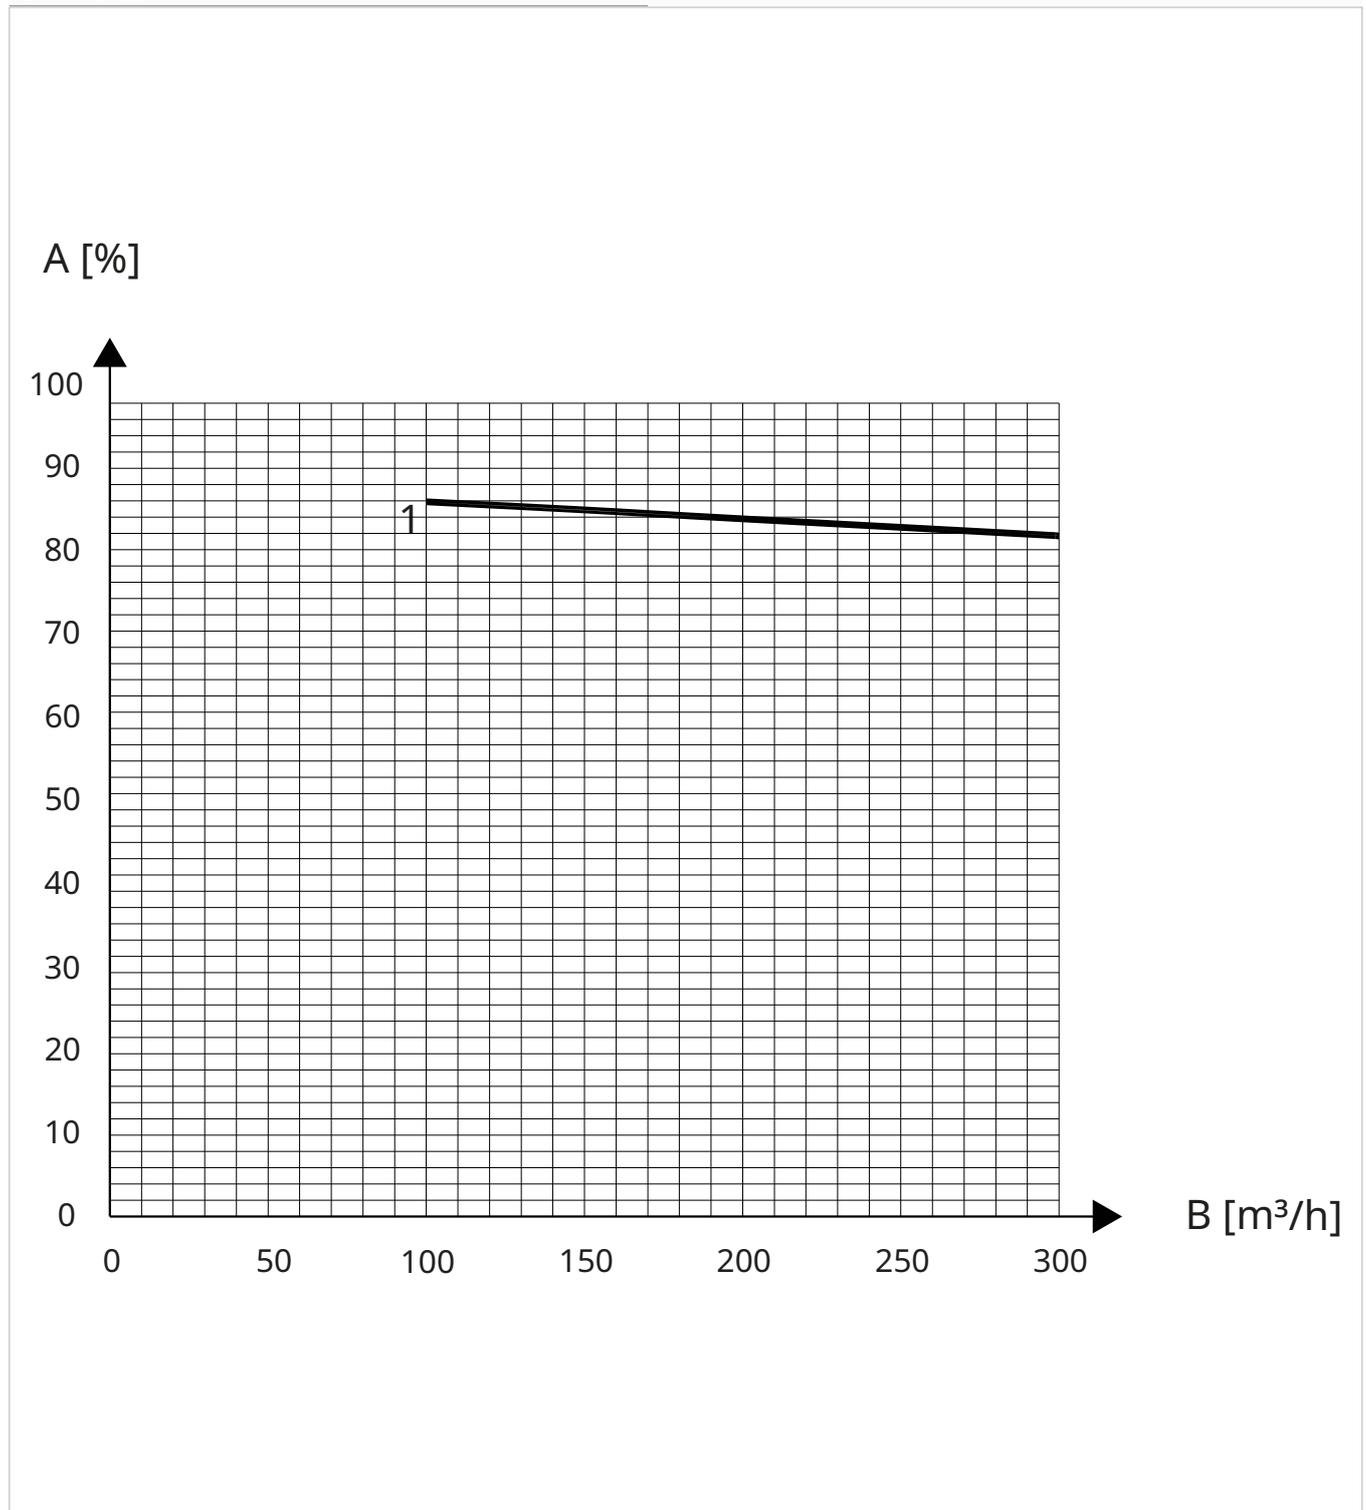


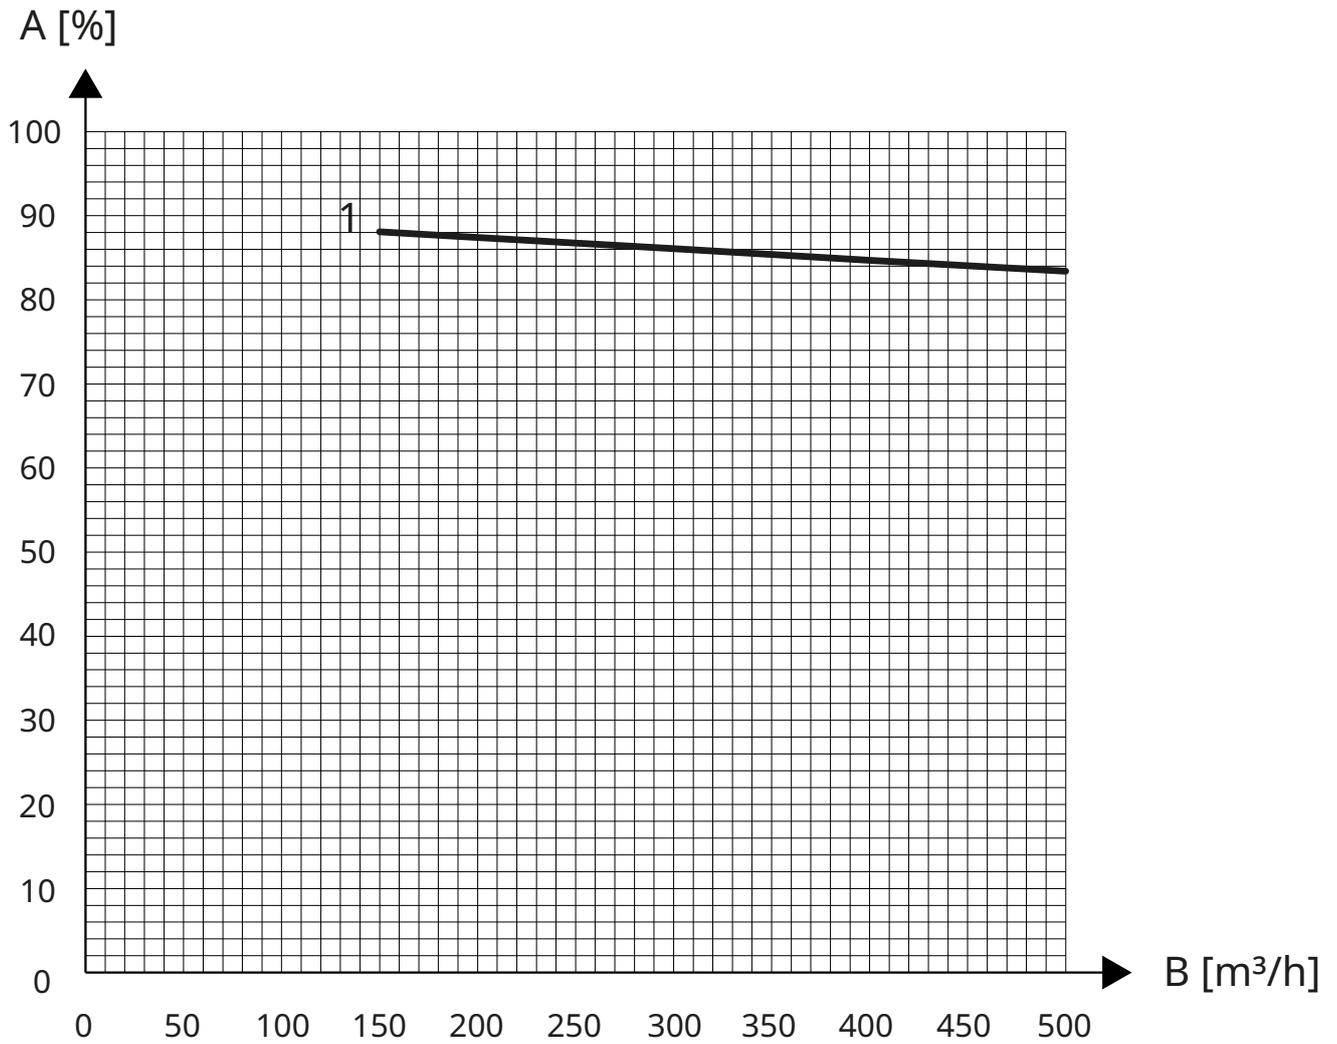
**Size 40****Sensible version winter heat recovery****A** Heat recovery  
**B** Air flow**1.** Winter heat recovery

### Sensible version summer heat recovery

**A** Heat recovery  
**B** Air flow

**1.** Summer heat recovery

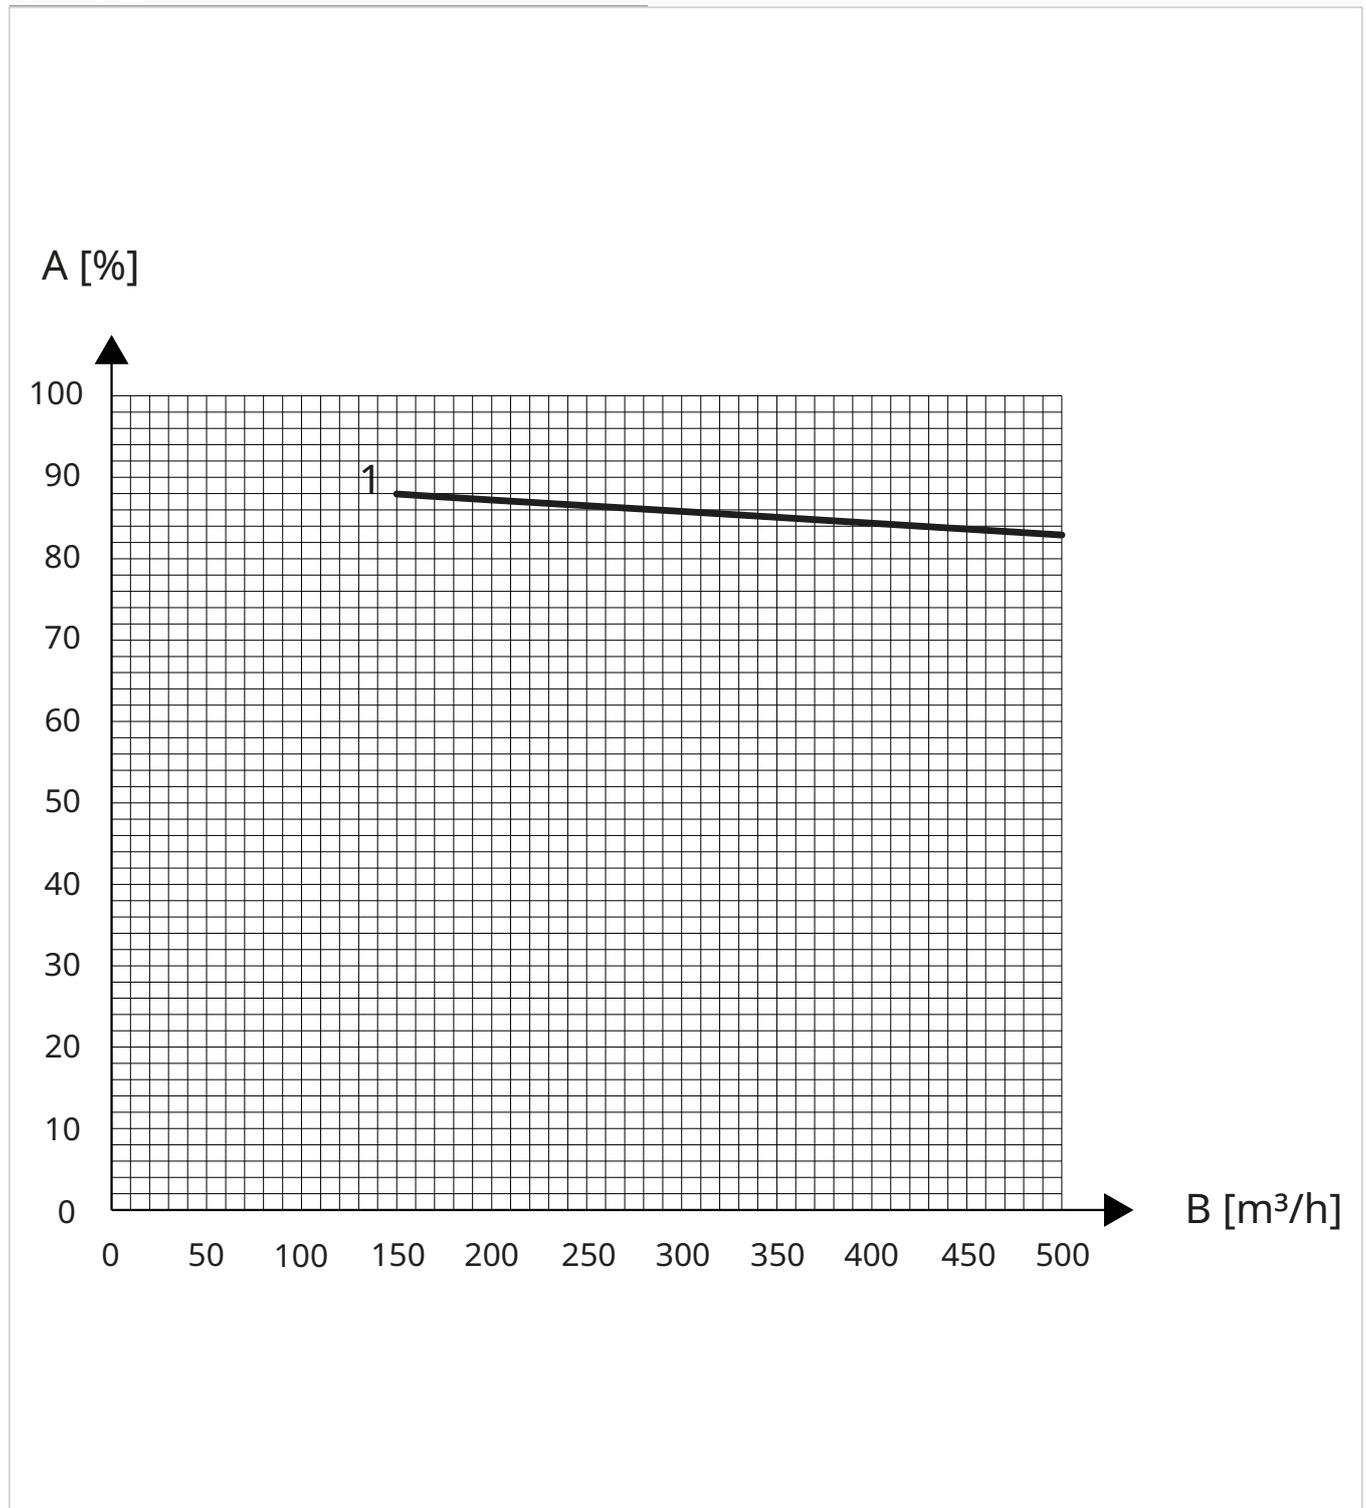


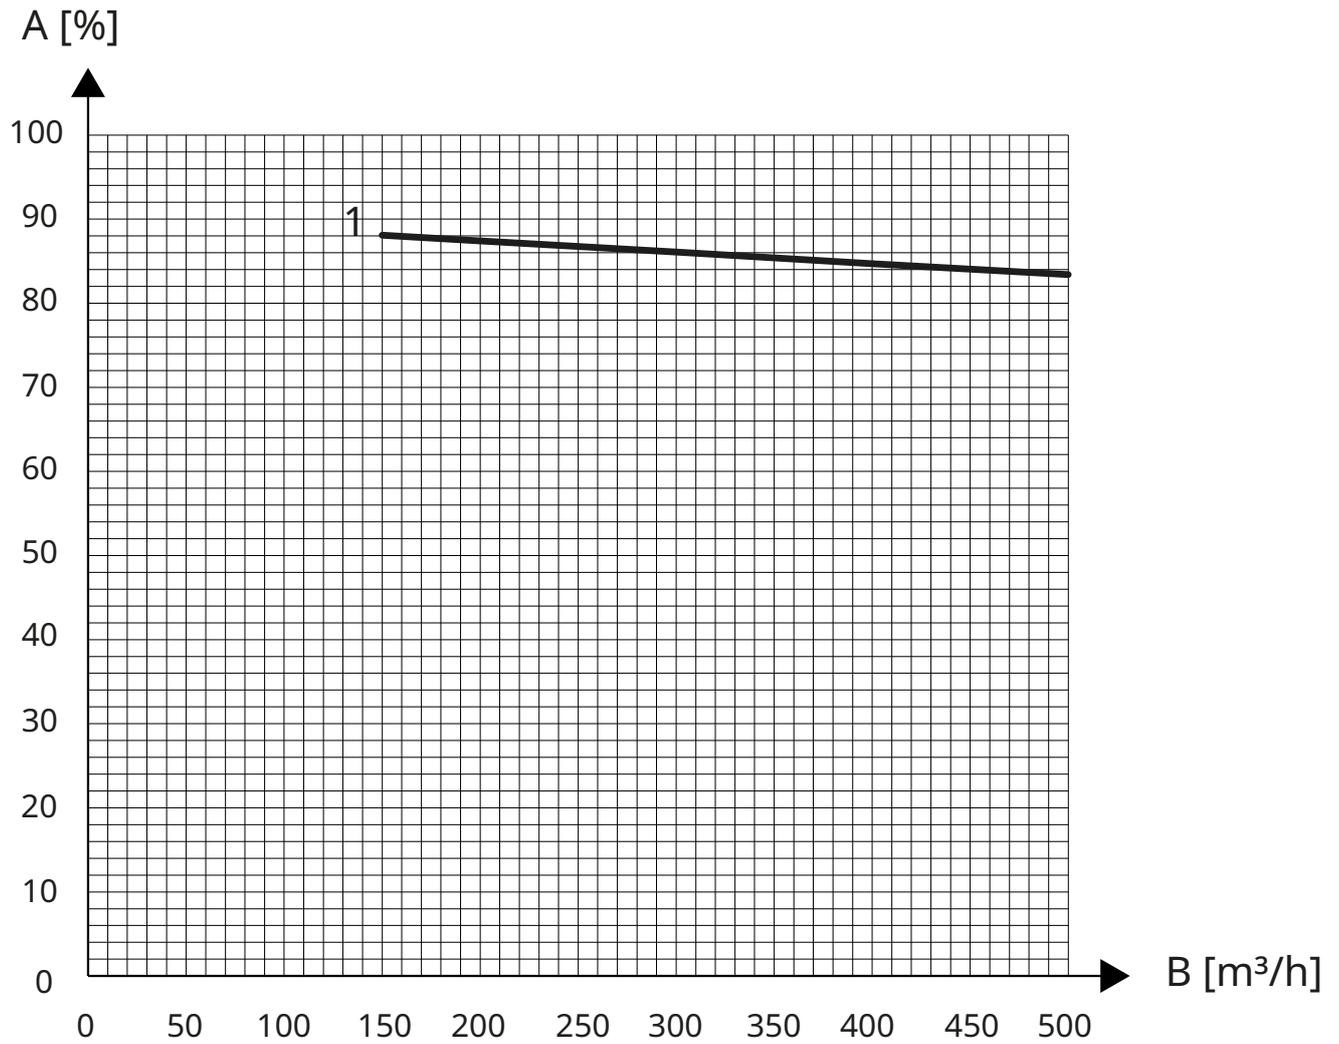**Size 45****Sensible version winter heat recovery****A** Heat recovery  
**B** Air flow**1.** Winter heat recovery

### Sensible version summer heat recovery

**A** Heat recovery  
**B** Air flow

**1.** Summer heat recovery

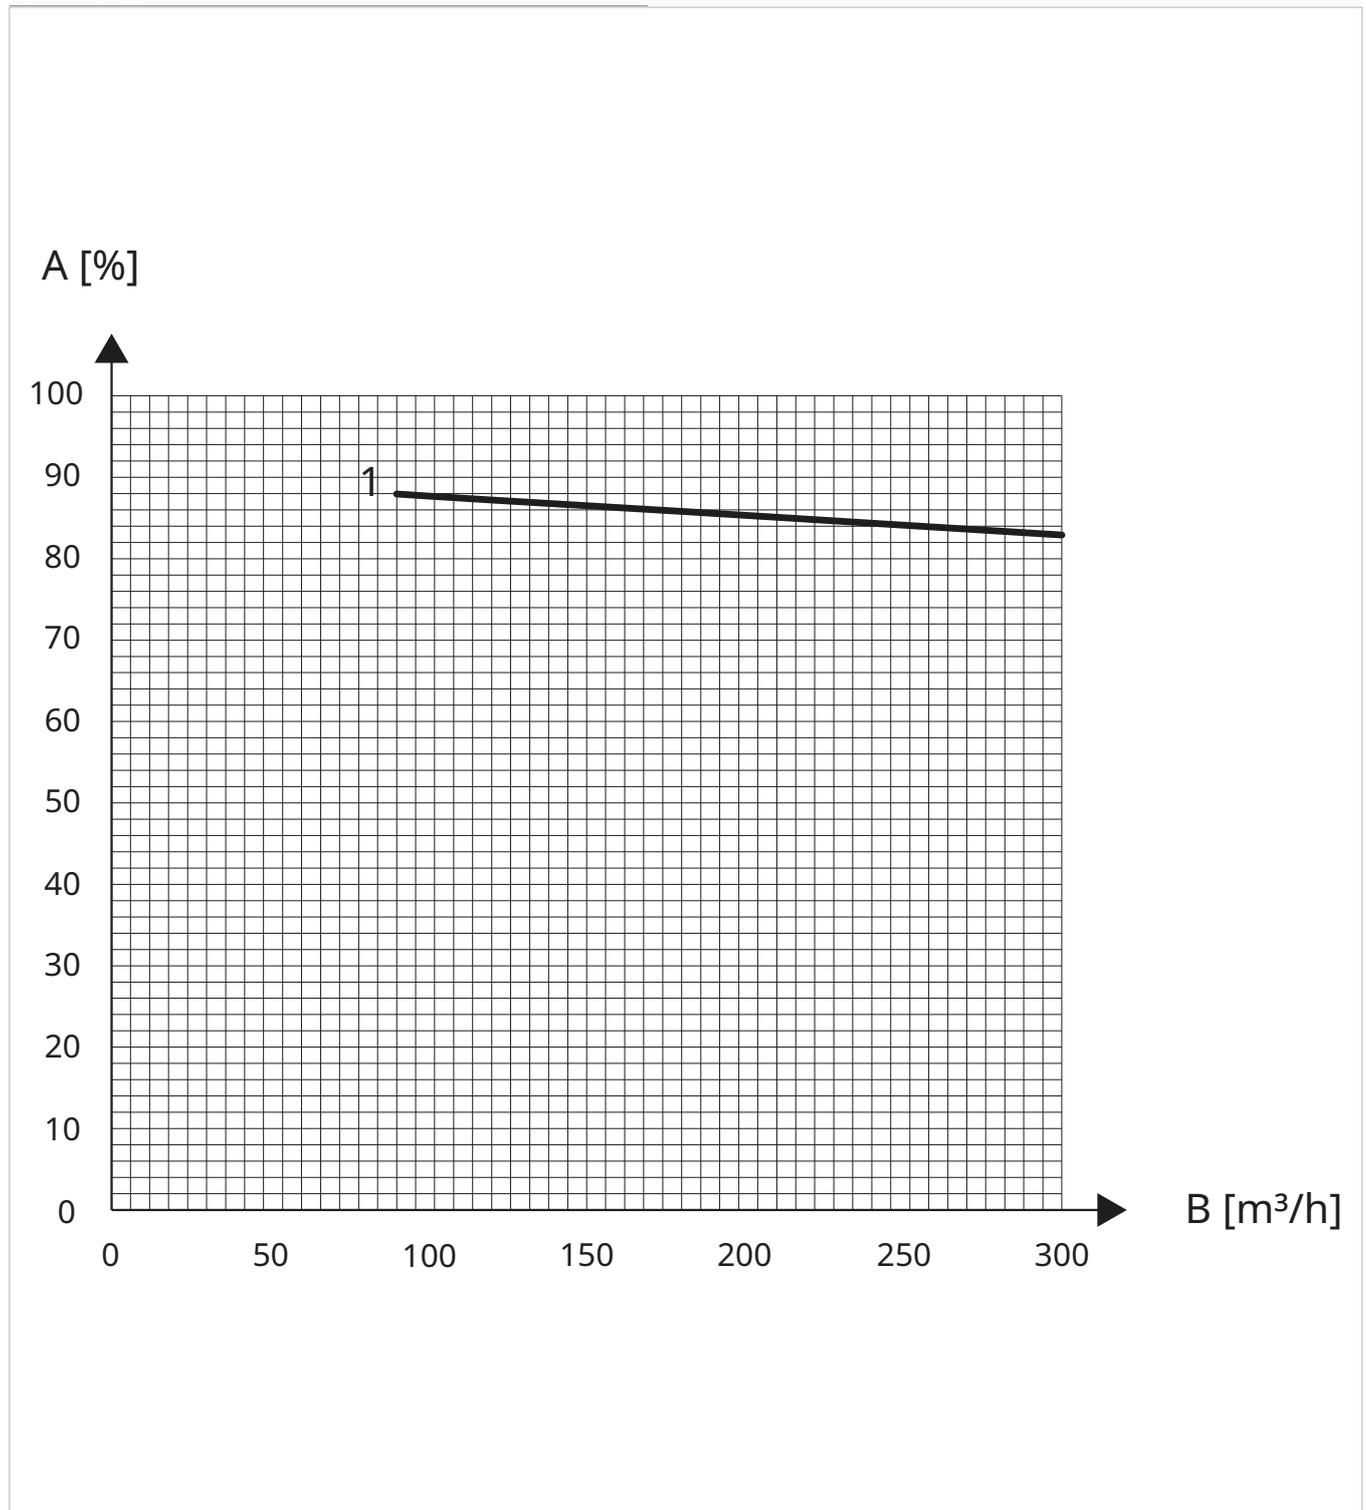


## 9.4 Operating limits

### Sensible version winter operating limits

**A** Indoor temperature  
**B** Outdoor temperature


**C** Preheating requirement zone

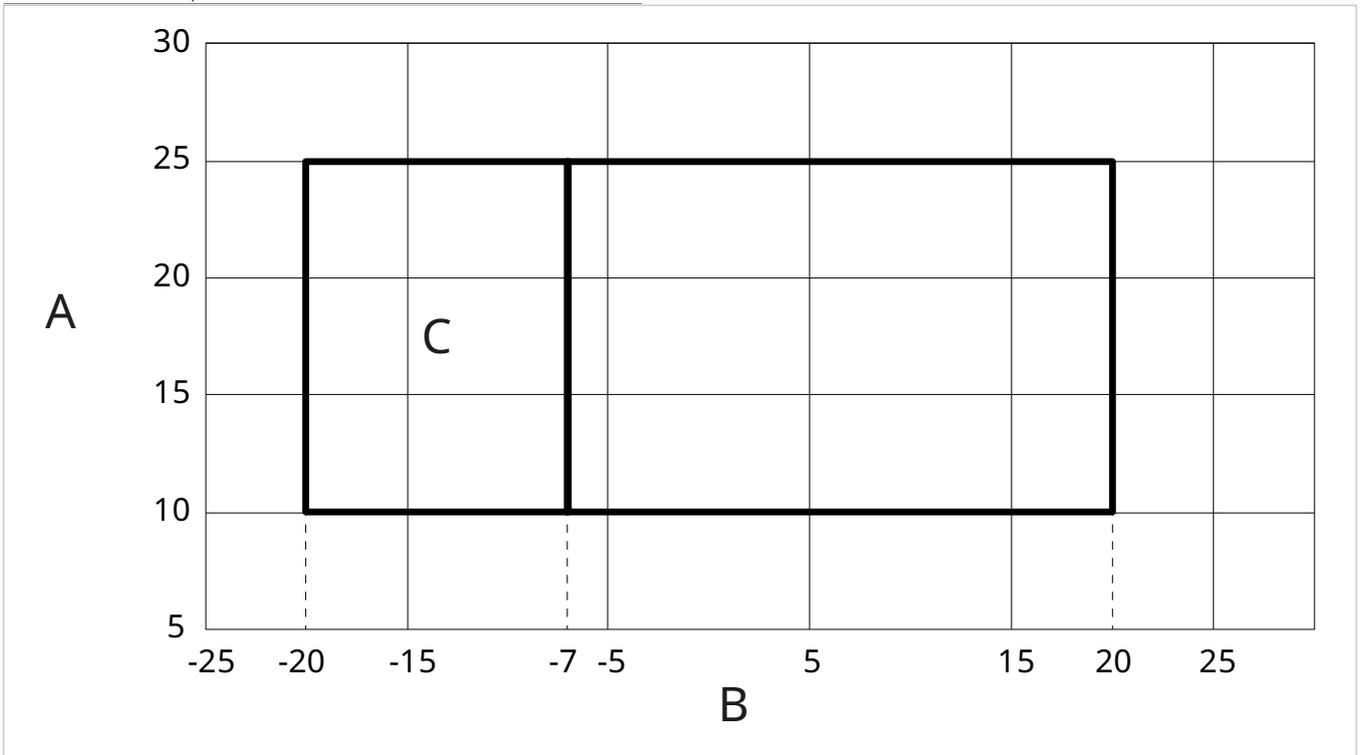

### Sensible version summer operating limits

**A** Indoor temperature

**B** Outdoor temperature






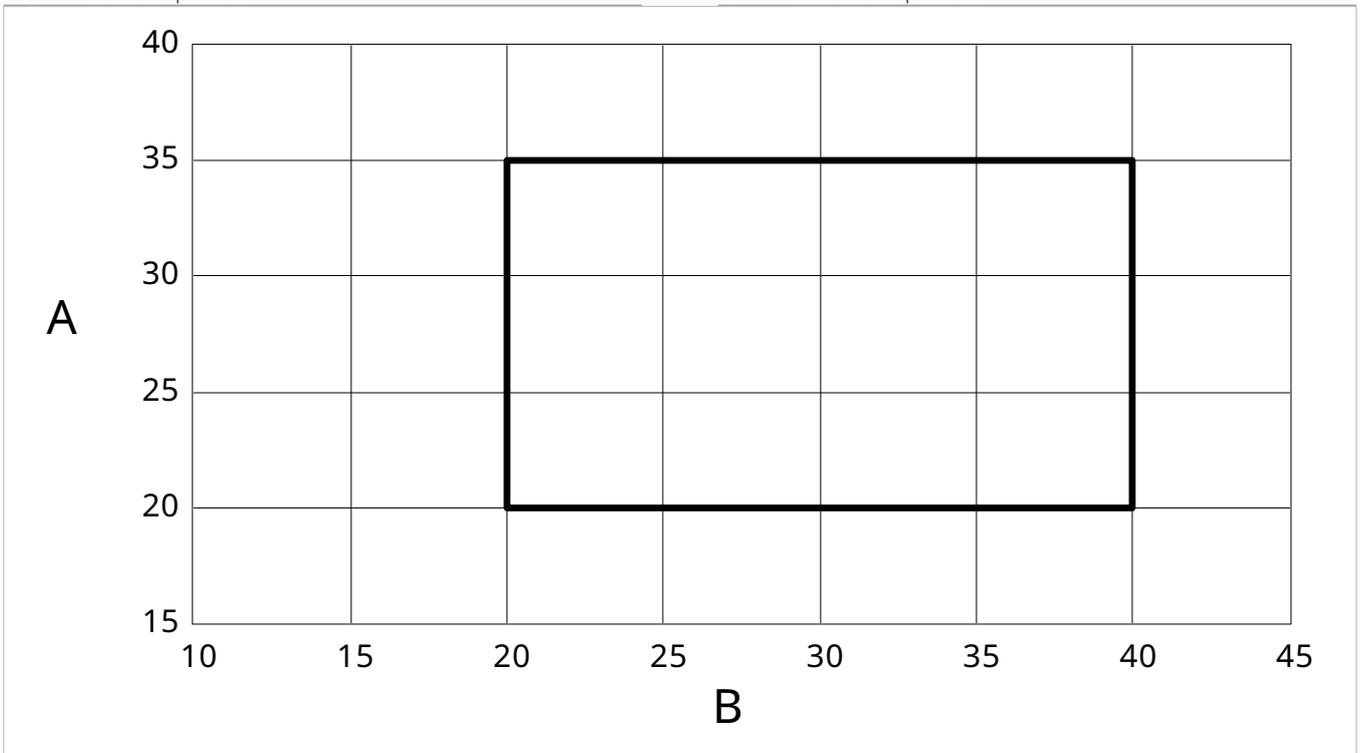


## 9.5 Dimensions

### Size 15

- A** Electrical panel
- B** Condensate drain
- C** Power supply







- D** Female aeraulic connection Ø 160
- E** Filter port
- F** Installation bracket

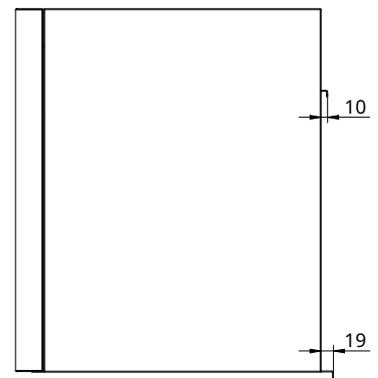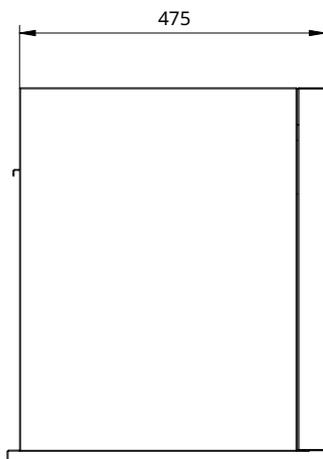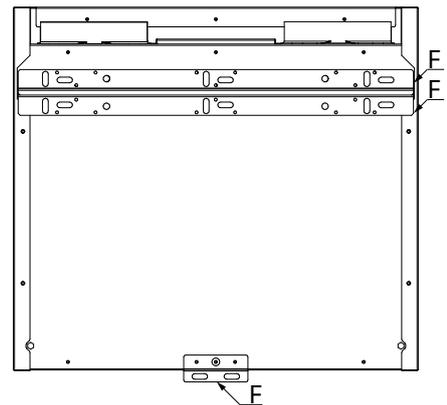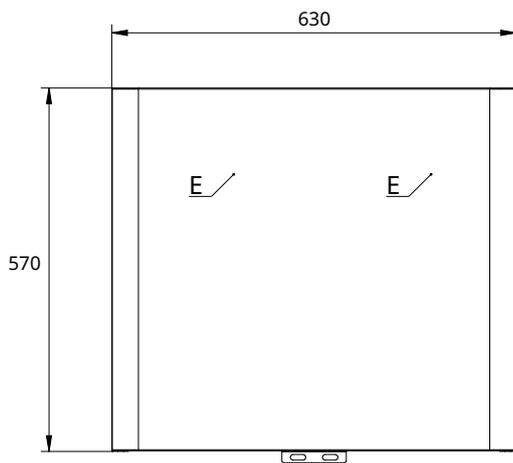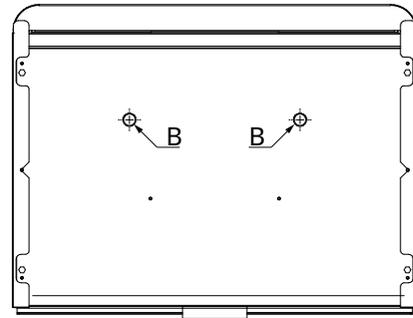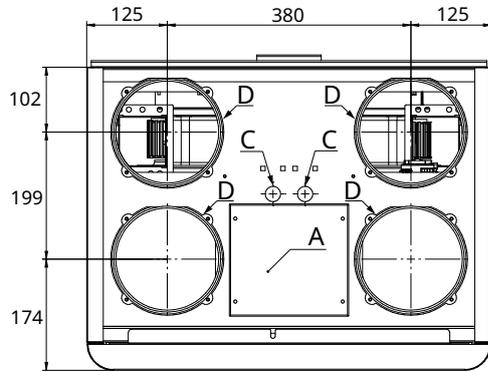







**Size 30**

- A** Electrical panel
- B** Condensate drain
- C** Power supply

- D** Female aeraulic connection Ø 160
- E** Filter port
- F** Installation bracket

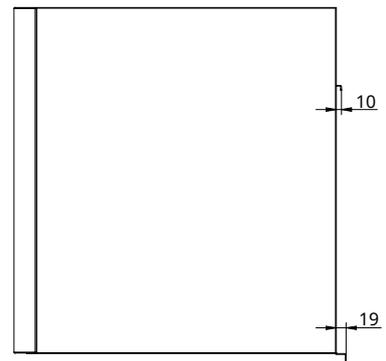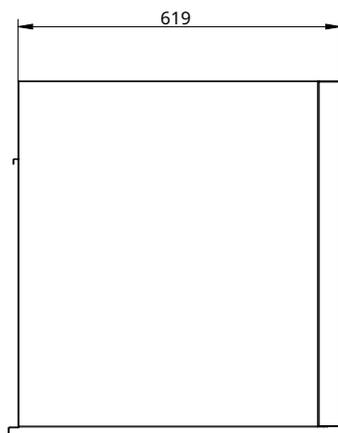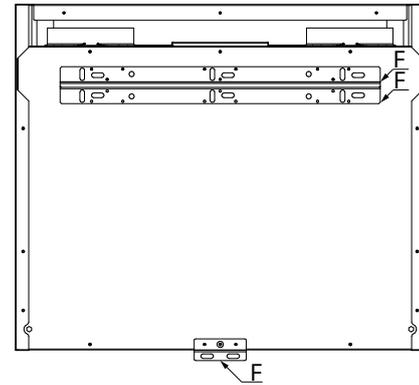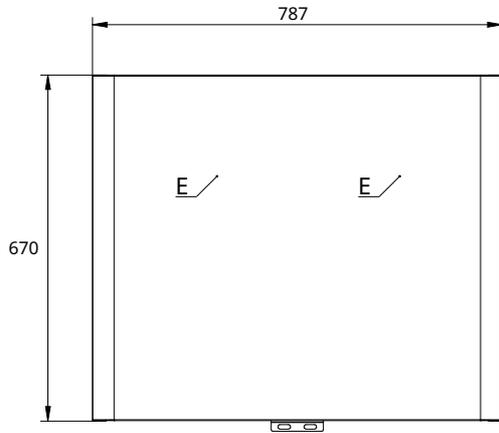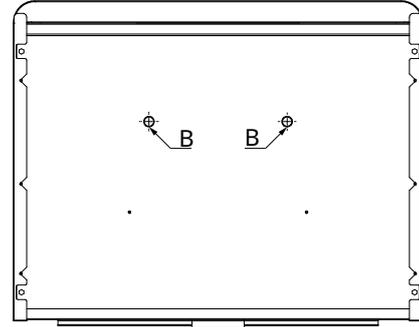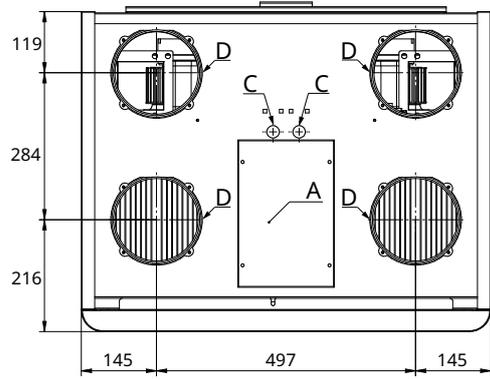

**Size 40 - 45**

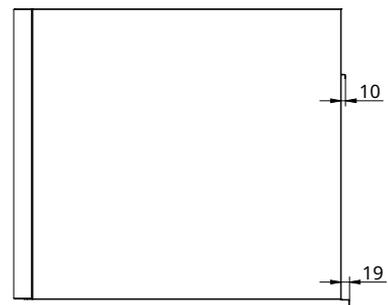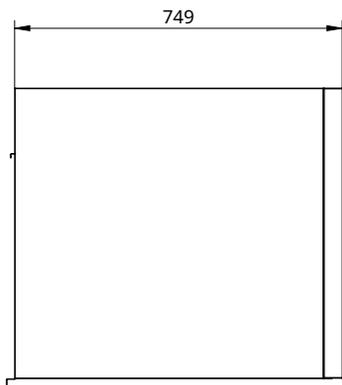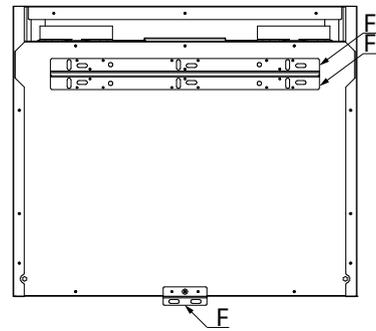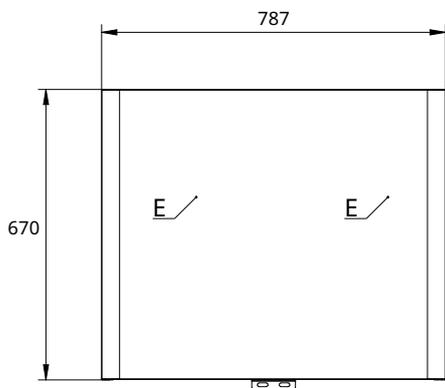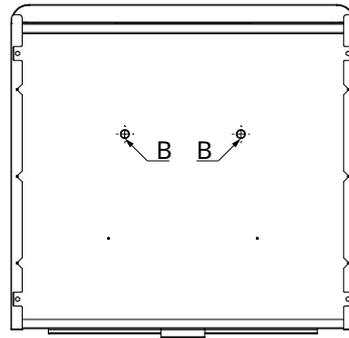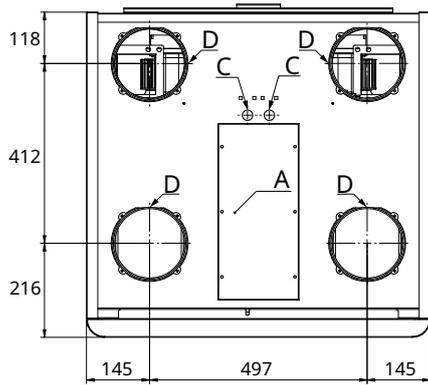

## 9.6 Ecodesign classification

Models	u.m.	15V
<b>ECODESIGN ErP data (1)</b>		
Supplier's name		PANASONIC
Model identifier		Aquarea Vent 15V
Cold specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-76,47
Average specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-38,55
Warm specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-14,20
SEC class		A
Declared typology		RVU - Bidirectional
Type of drive		Variable speed
Type of heat recovery		Recuperative
Thermal efficiency	%	86,2
Maximum flow rate	m <sup>3</sup> /h	160
Power input	W	110
LWA sound power level	dB(A)	48
Reference flow rate	m <sup>3</sup> /s	0,0311
Reference pressure	Pa	50
SPI Specific power input	W/m <sup>3</sup> /h	0,277
CTRL control factor		0,85
Internal maximum leakage	%	2,0
External maximum leakage	%	1,7
Position and description of visual filter warning		Sybolized message on unit display and control panel and the instruction manual
Internet address for disassembly instructions		<a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>
Cold annual electricity consumption AEC	kWh/year	832,51
Average annual electricity consumption AEC	kWh/year	295,51
Warm annual electricity consumption AEC	kWh/year	250,51
Cold annual heating saved AHS	kWh/year	8855,61
Average annual heating saved AHS	kWh/year	4526,80
Warm annual heating saved AHS	kWh/year	2046,96
1. Product fiche for RVU per EU Regulation No. 1254/2014		

Models	u.m.	30V
<b>ECODESIGN ErP data (1)</b>		
Supplier's name		PANASONIC
Model identifier		Aquarea Vent 30V
Cold specific energy consumption SEC	kWh/ (m <sup>2</sup> Da)	-76,33
Average specific energy consumption SEC	kWh/ (m <sup>2</sup> Da)	-38,49
Warm specific energy consumption SEC	kWh/ (m <sup>2</sup> Da)	-14,18
SEC class		A
Declared typology		RVU - Bidirectional
Type of drive		Variable speed
Type of heat recovery		Recuperative
Thermal efficiency	%	85,9
Maximum flow rate	m <sup>3</sup> /h	300
Power input	W	140
LWA sound power level	dB(A)	49
Reference flow rate	m <sup>3</sup> /s	0,0583
Reference pressure	Pa	50
SPI Specific power input	W/m <sup>3</sup> /h	0,276
CTRL control factor		0,85
Internal maximum leakage	%	1,8
External maximum leakage	%	1,4
Position and description of visual filter warning		Sybolized message on unit display and control panel and the instruction manual
Internet address for disassembly instructions		<a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>
Cold annual electricity consumption AEC	kWh/year	831,97
Average annual electricity consumption AEC	kWh/year	294,97
Warm annual electricity consumption AEC	kWh/year	249,97
Cold annual heating saved AHS	kWh/year	8839,72
Average annual heating saved AHS	kWh/year	4518,67
Warm annual heating saved AHS	kWh/year	2043,28
1. Product fiche for RVU per EU Regulation No. 1254/2014		

Models	u.m.	40V
<b>ECODESIGN ErP data (1)</b>		
Supplier's name		PANASONIC
Model identifier		Aquarea Vent 40V
Cold specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-77,11
Average specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-39,11
Warm specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-14,72
SEC class		A
Declared typology		RVU - Bidirectional
Type of drive		Variable speed
Type of heat recovery		Recuperative
Thermal efficiency	%	86,5
Maximum flow rate	m <sup>3</sup> /h	380
Power input	W	350
LWA sound power level	dB(A)	51
Reference flow rate	m <sup>3</sup> /s	0,0739
Reference pressure	Pa	50
SPI Specific power input	W/m <sup>3</sup> /h	0,256
CTRL control factor		0,85
Internal maximum leakage	%	1,6
External maximum leakage	%	1,1
Position and description of visual filter warning		Sybolized message on unit display and control panel and the instruction manual
Internet address for disassembly instructions		<a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>
Cold annual electricity consumption AEC	kWh/year	813,37
Average annual electricity consumption AEC	kWh/year	276,37
Warm annual electricity consumption AEC	kWh/year	231,37
Cold annual heating saved AHS	kWh/year	8871,50
Average annual heating saved AHS	kWh/year	4534,92
Warm annual heating saved AHS	kWh/year	2050,63
1. Product fiche for RVU per EU Regulation No. 1254/2014		

Models	u.m.	45V
<b>ECODESIGN ErP data (1)</b>		
Supplier's name		PANASONIC
Model identifier		Aquarea Vent 45V
Cold specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-74,76
Average specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-36,95
Warm specific energy consumption SEC	kWh/ (m <sup>2</sup> □a)	-12,66
SEC class		A
Declared typology		RVU - Bidirectional
Type of drive		Variable speed
Type of heat recovery		Recuperative
Thermal efficiency	%	85,8
Maximum flow rate	m <sup>3</sup> /h	450
Power input	W	420
LWA sound power level	dB(A)	54
Reference flow rate	m <sup>3</sup> /s	0,0875
Reference pressure	Pa	50
SPI Specific power input	W/m <sup>3</sup> /h	0,343
CTRL control factor		0,85
Internal maximum leakage	%	1,4
External maximum leakage	%	1,0
Position and description of visual filter warning		Sybolized message on unit display and control panel and the instruction manual
Internet address for disassembly instructions		<a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>
Cold annual electricity consumption AEC	kWh/year	892,31
Average annual electricity consumption AEC	kWh/year	355,31
Warm annual electricity consumption AEC	kWh/year	310,31
Cold annual heating saved AHS	kWh/year	8834,43
Average annual heating saved AHS	kWh/year	4515,97
Warm annual heating saved AHS	kWh/year	2042,06
1. Product fiche for RVU per EU Regulation No. 1254/2014		

## 10. ACCESSORIES

### 10.1 Electrical resistance


#### Description

The electric air heater accessory heats the air in the ventilation ducts. It can be installed for pre-heating the unit in


cold climates and for post-heating to increase the outlet air temperature and heat the rooms. It is a flexible solution to improve thermal comfort in ventilation systems. It is available in two capacities: 0.5 kW and 1.0 kW.

#### Dimensions

##### Electrical duct heater 0.5 kW, DN 160 mm

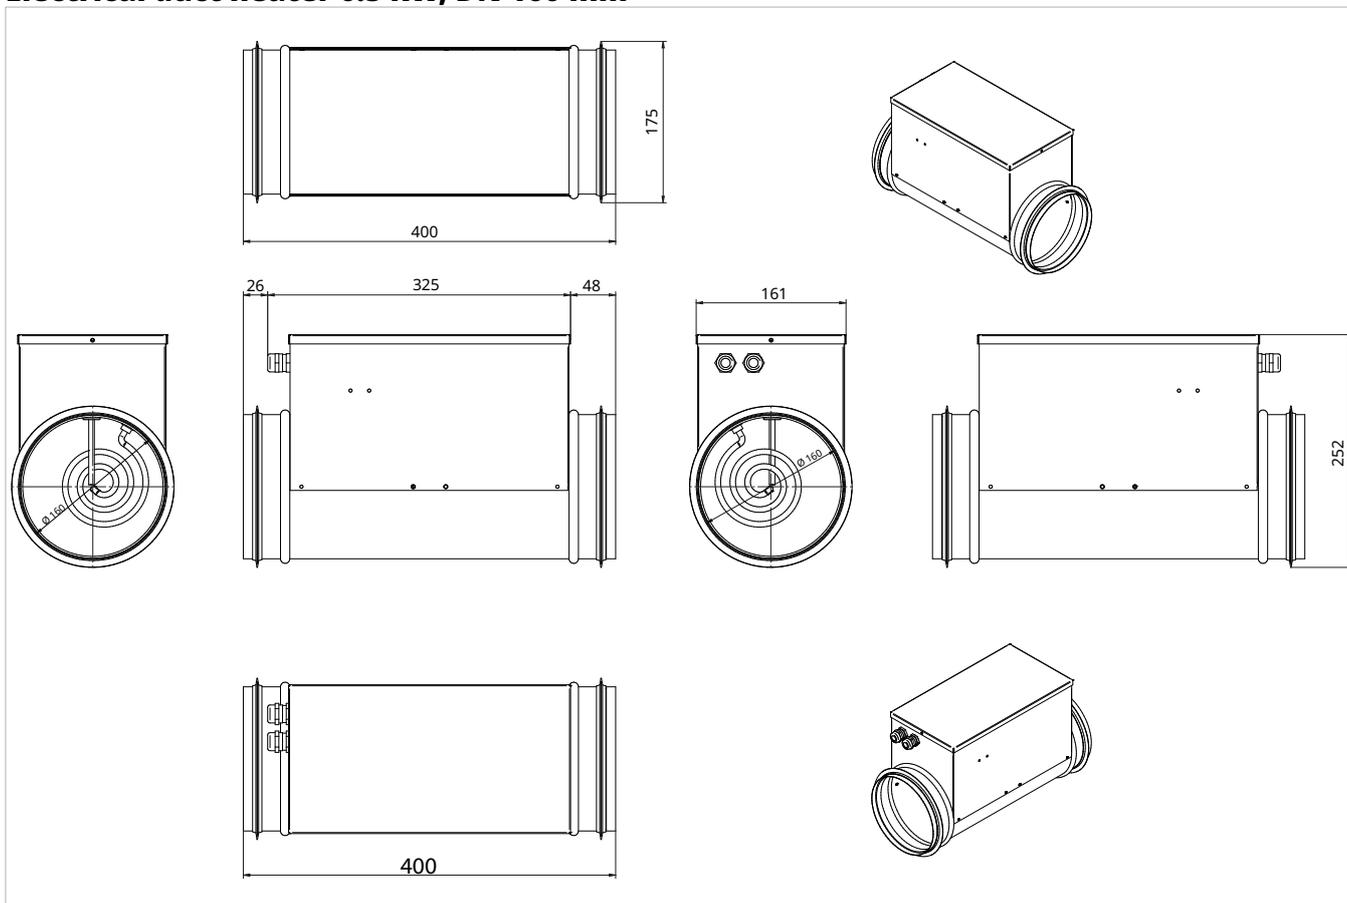


**Electrical duct heater 1.0 kW, DN 160 mm**

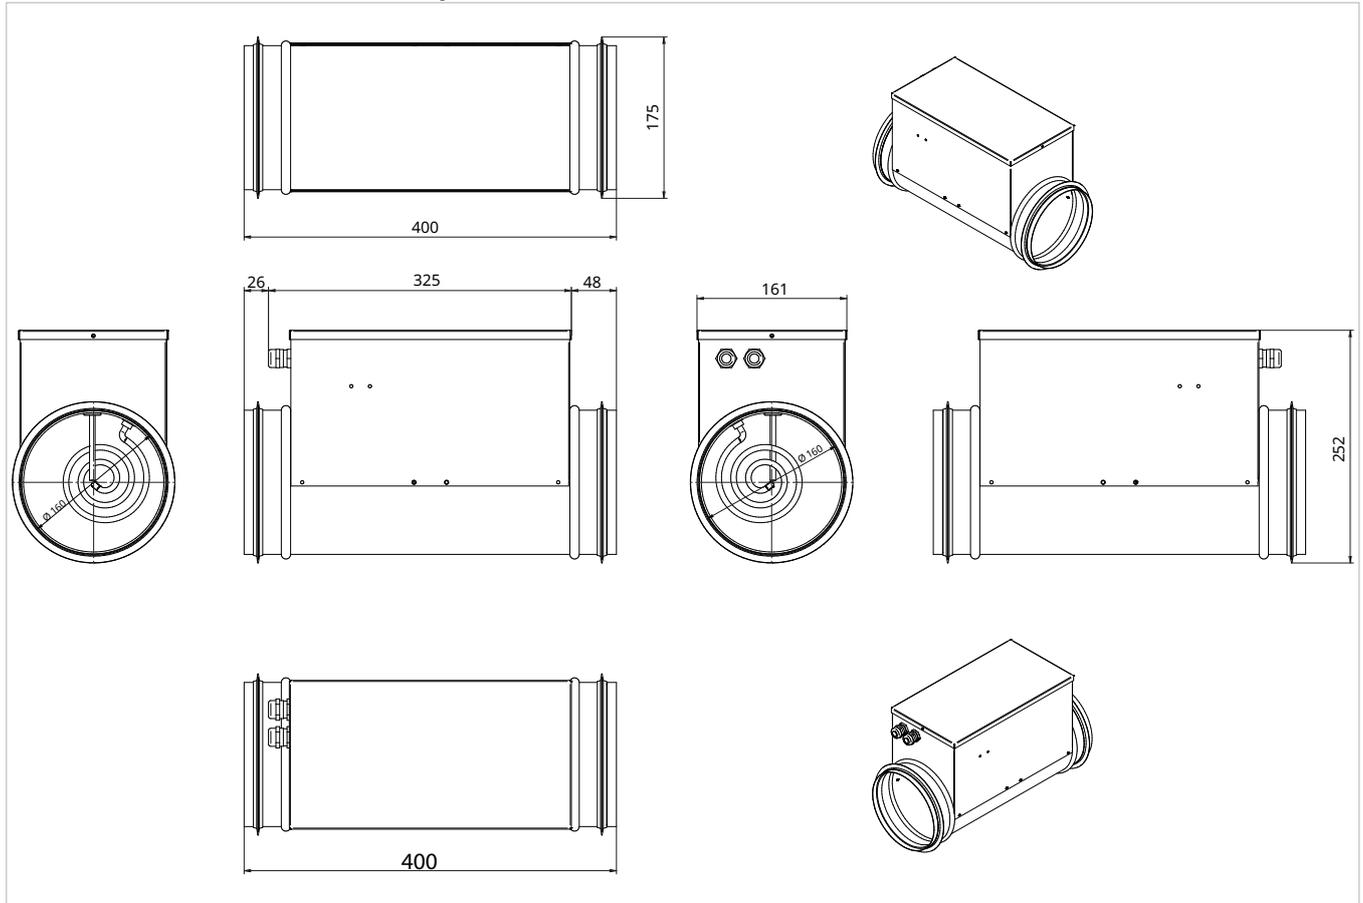


**Wiring diagram**

**Wiring diagram**

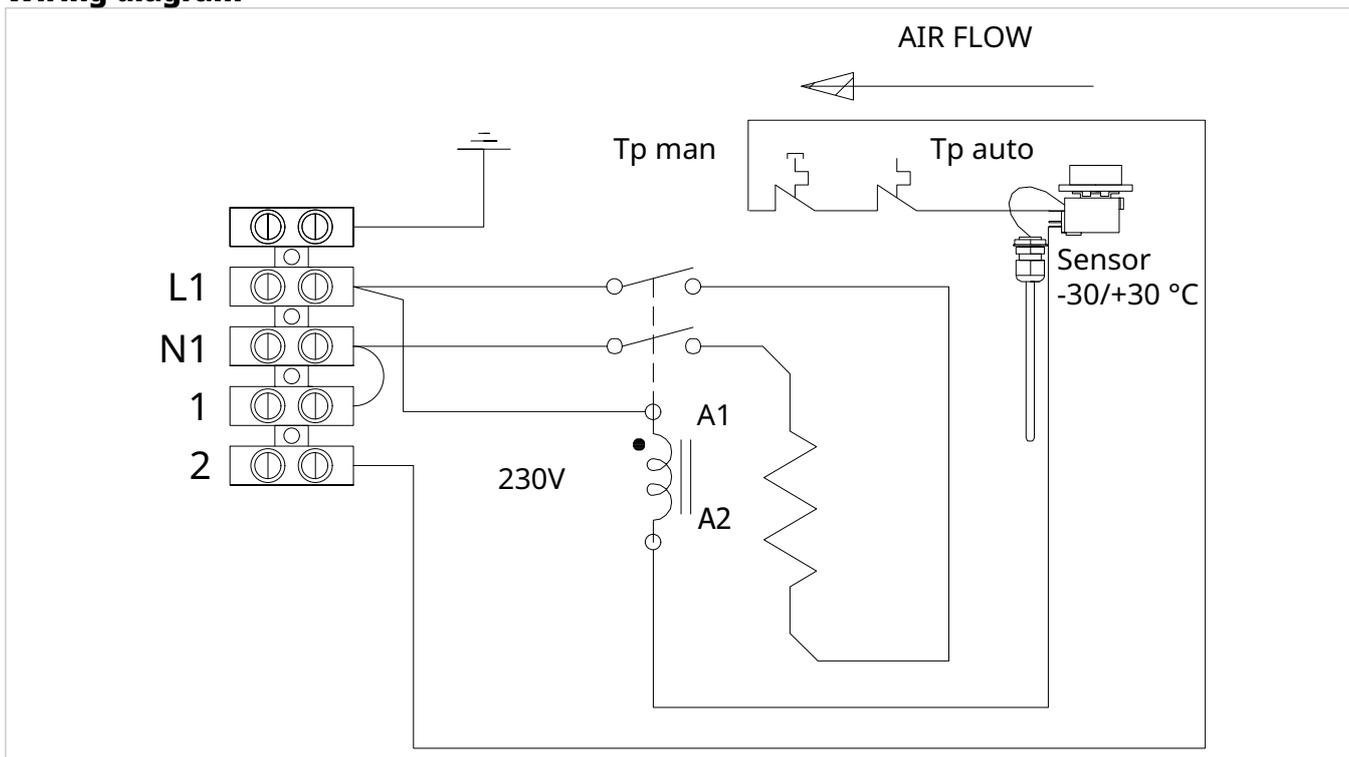



**Connections to be made by the customer**

L - N -PE	Unit power supply	230 / 1 / 50
1 - 2	Resistance On - Off contact	Voltage contact Contact closed (active resistance)

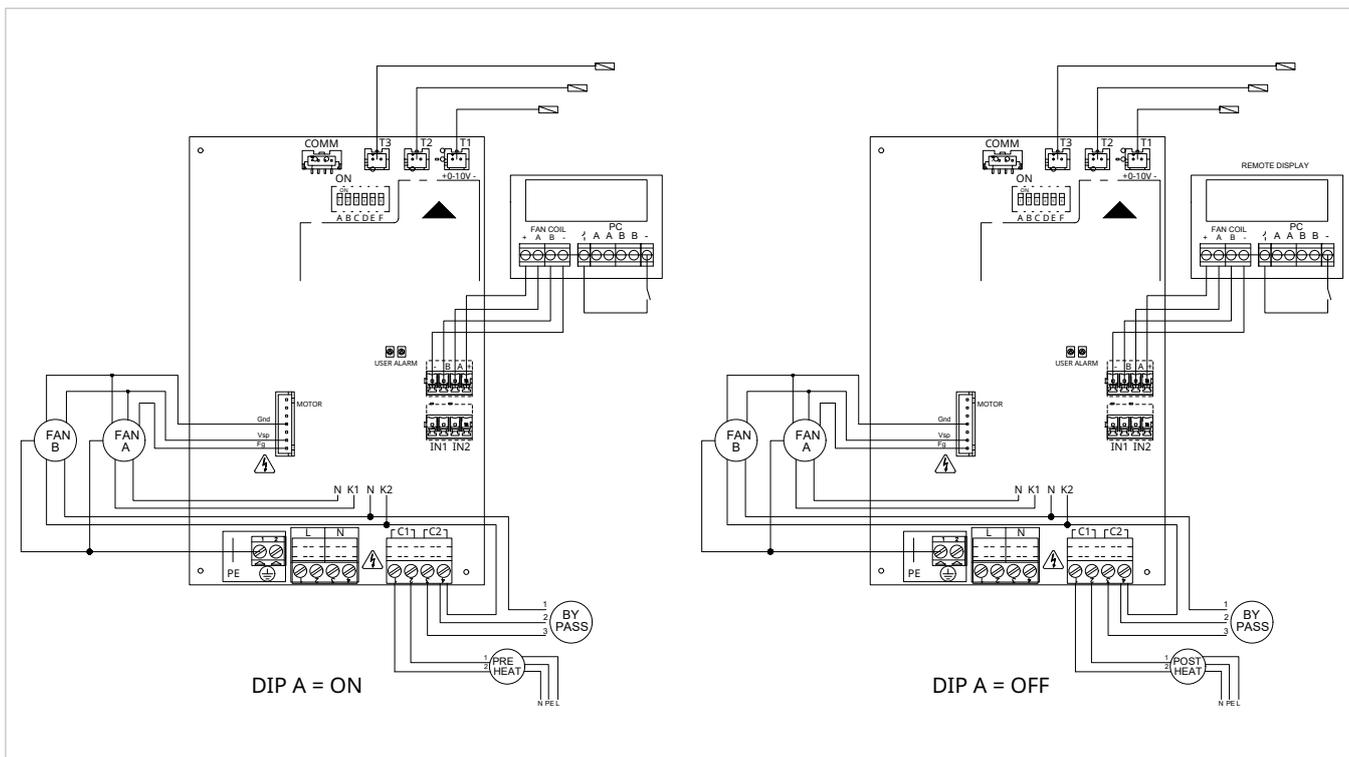

## 10.2 Valves for water coils

### Wiring diagram

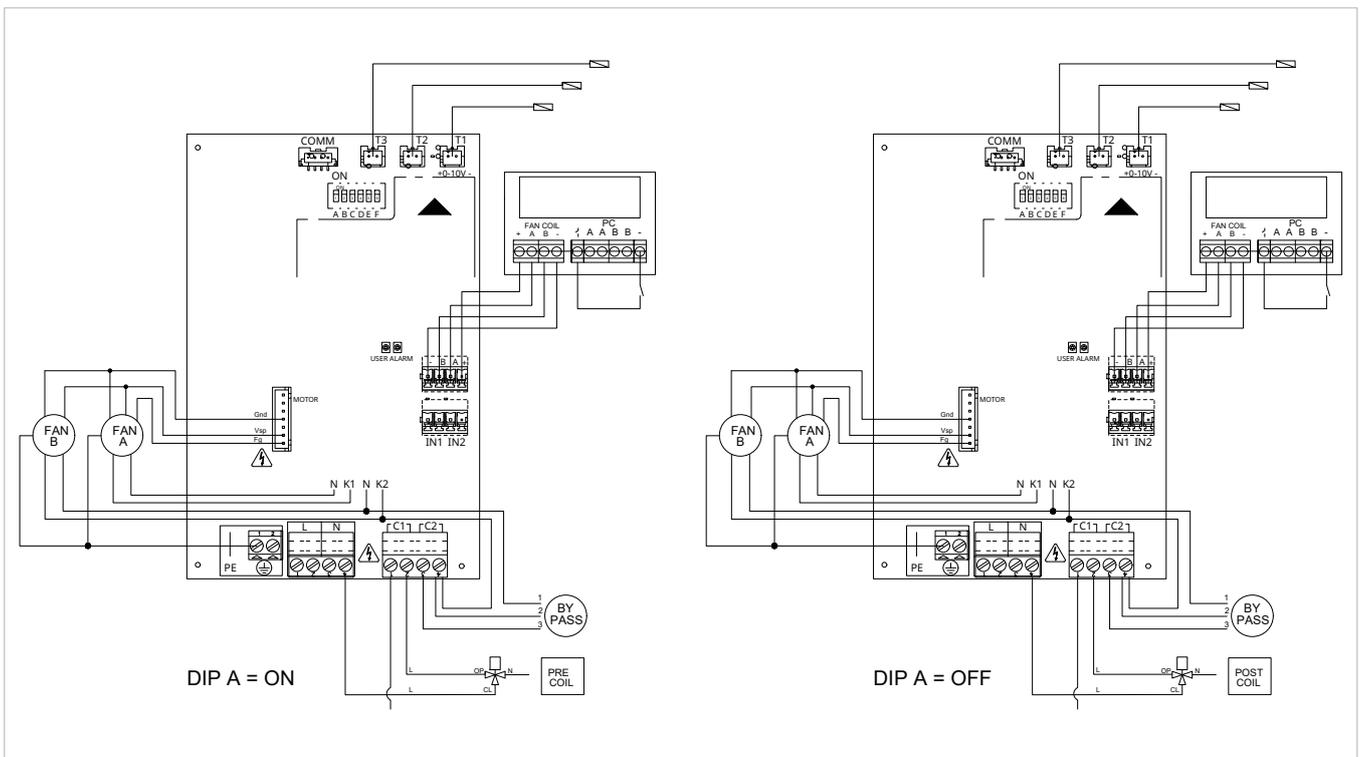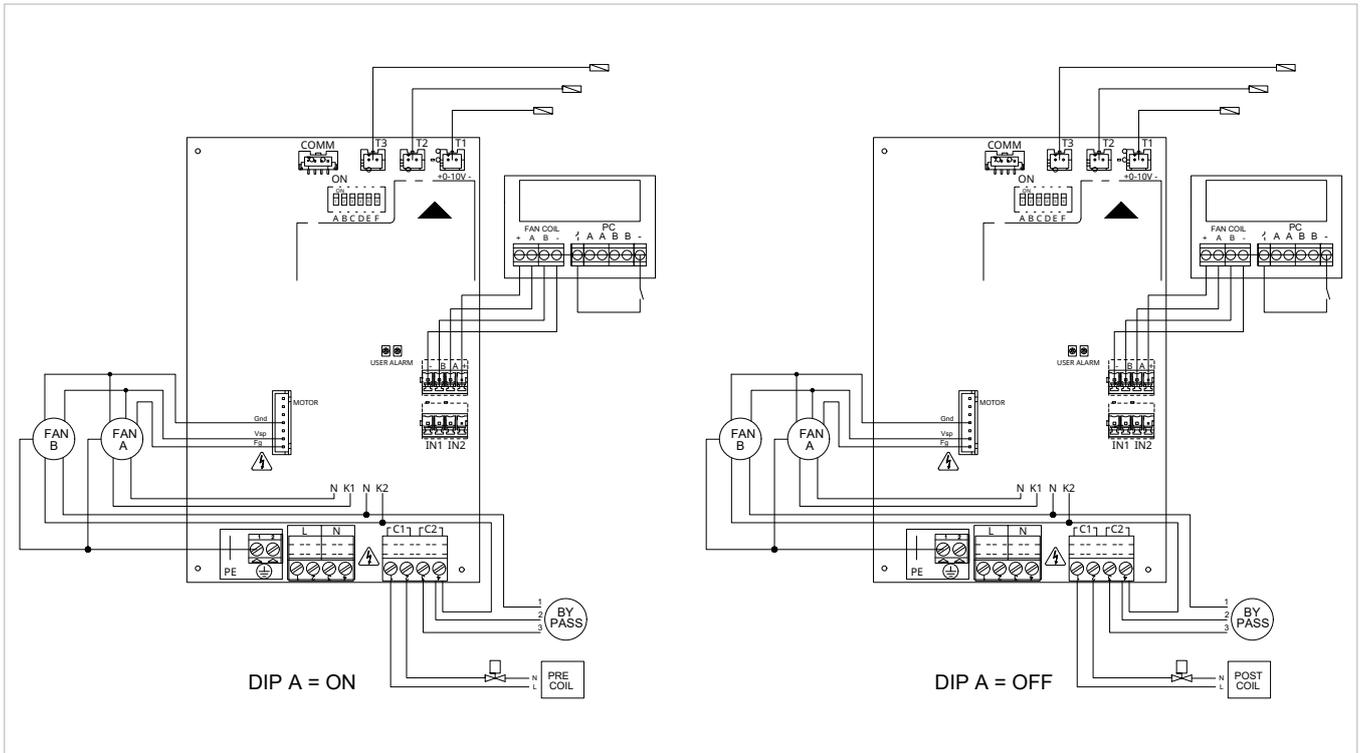







# Panasonic<sup>®</sup>

Panasonic Corporation  
1006 Kadoma, Kadoma City, Osaka, Japan