

Installation manual  
(Original instructions)

EN

**Panasonic<sup>®</sup>**

N420977A - Rev.00 - 05/2025

**Aquarea Vent**

**Series P-VEN\*\*ZE5**

---

*First of all, we would like to thank you for having chosen one of our units.*

*As you will realise, you have made a winning choice by purchasing a product that represents the state of the art in domestic air-conditioning technology.*

*Thanks to the product you have purchased and by following the suggestions in this manual, you will benefit from optimal environmental conditions with the lowest possible energy investment.*

## Compliance

This unit complies with European directives:

- Low Voltage Directive 2014/35/EU by transposition of the following technical standards: EN 60335-1:2012 + EN 60335-2-80:2003
- EMC Directive 2014/30/EU, by transposition of technical standards: EN 55014-1:2021 + EN 55014-2:2021
- + EN IEC 61000-3-2:2019+A1:2021 + EN 61000-3-3:2013+A2:2021
- RoHS Directive 2011/65/EU by transposition of the following technical standards: EN IEC 63000:2018
- European ErP Ecodesign Regulation No. 1254/2014

## Markings



# CONTENTS

|                      |   |
|----------------------|---|
| Compliance . . . . . | 2 |
|----------------------|---|

## 1. General information . . . . . 4

|                                  |   |
|----------------------------------|---|
| 1.1 About the manual . . . . .   | 4 |
| 1.2 General warnings . . . . .   | 5 |
| 1.3 Basic safety rules . . . . . | 5 |
| 1.4 Disposal . . . . .           | 6 |

## 2. Product introduction . . . . . 7

|  |    |
|--|----|
| 2.1 Identification . . . . .               | 7  |
| 2.2 Destination of use . . . . .           | 7  |
| 2.3 Description of the appliance . . . . . | 7  |
| 2.4 List of external components . . . . .  | 8  |
| 2.5 List of internal components . . . . .  | 9  |
| 2.6 Compatible accessories . . . . .       | 10 |

## 3. Installation . . . . . 11

|   |    |
|---|----|
| 3.1 Preliminary warnings . . . . .                  | 11 |
| 3.2 Reception . . . . .                             | 11 |
| 3.3 Dimensions and weights with packaging . . . . . | 11 |
| 3.4 Handling with packaging . . . . .               | 11 |
| 3.5 Storage . . . . .                               | 12 |
| 3.6 Unpacking . . . . .                             | 12 |
| 3.7 Handling without packaging . . . . .            | 13 |
| 3.8 Installation site . . . . .                     | 13 |
| 3.9 Minimum installation distances . . . . .        | 14 |
| 3.10 Positioning . . . . .                          | 15 |
| 3.11 Condensate drain connection . . . . .          | 18 |
| 3.12 Aeraulic connections . . . . .                 | 20 |
| 3.13 Electrical connections . . . . .               | 23 |

## 4. Wall control command Code PCZ-EEB749 . . . . . 27

|                                  |    |
|----------------------------------|----|
| 4.1 Interface . . . . .          | 27 |
| 4.2 Installation . . . . .       | 27 |
| 4.3 Connection diagram . . . . . | 29 |
| 4.4 Connections . . . . .        | 30 |
| 4.5 Functions . . . . .          | 31 |

## 5. Wall control command Code PCZ-EFB749 . . . . . 34

|                                  |    |
|----------------------------------|----|
| 5.1 Interface . . . . .          | 34 |
| 5.2 Installation . . . . .       | 34 |
| 5.3 Connection diagram . . . . . | 36 |

|                           |    |
|---------------------------|----|
| 5.4 Connections . . . . . | 37 |
| 5.5 Functions . . . . .   | 38 |

## 6. Start-up . . . . . 41

|  |    |
|--|----|
| 6.1 Preliminary warnings . . . . .               | 41 |
| 6.2 First start-up . . . . .                     | 41 |
| 6.3 Plant delivery . . . . .                     | 43 |
| 6.4 Switching off for extended periods . . . . . | 43 |

## 7. Maintenance . . . . . 44

|                                   |    |
|-----------------------------------|----|
| 7.1 Routine maintenance . . . . . | 44 |
|-----------------------------------|----|

## 8. Faults and remedies . . . . . 46

|  |    |
|--|----|
| 8.1 Preliminary warnings . . . . .         | 46 |
| 8.2 Troubleshooting table . . . . .        | 46 |
| 8.3 Alarm table and card flashes . . . . . | 47 |

## 9. Technical information . . . . . 48

|  |    |
|--|----|
| 9.1 Technical data . . . . .           | 48 |
| 9.2 Performance curves . . . . .       | 50 |
| 9.3 Heat recovery . . . . .            | 53 |
| 9.4 Operating limits . . . . .         | 59 |
| 9.5 Dimensions . . . . .               | 61 |
| 9.6 Ecodesign classification . . . . . | 63 |

## 10. Accessories . . . . . 66

|                                       |    |
|---------------------------------------|----|
| 10.1 Electrical resistance . . . . .  | 66 |
| 10.2 Valves for water coils . . . . . | 69 |

# 1. GENERAL INFORMATION

## 1.1 About the manual

This manual was written to provide all the explanations for the correct management of the appliance.

- ⚠ This instruction manual is an integral part of the appliance and must therefore be kept in a safe place and must ALWAYS accompany the appliance even if it is passed on to another owner or user, or transferred to another plant. If it is damaged or lost, download a copy from the website.
- ⚠ Read this manual carefully before proceeding with any operation and follow the instructions in the individual chapters.
- ⚠ Specific warnings are given in each chapter of the document and should be read before starting operations.
- ⚠ The manufacturer accepts no liability for damage to persons or property resulting from failure to observe the regulations contained in this booklet.
- ⚠ This document is confidential under the terms of the law and may not be reproduced or passed on to third parties without the express authorisation of the Manufacturer.

### Editorial pictograms

The pictograms in the following chapter provide quick and unambiguous information necessary for the correct and safe use of the machine.

#### Related to safety

##### ⚠ High risk warning (bold text)

- The operation described above presents a risk of serious physical injury, fatality, major damage to the appliance and/or to the environment if not carried out in compliance with safety regulations.

##### ⚠ Low risk warning (plain text)

- The operation described above presents a risk of minor physical injury or minor damage to the appliance and/or to the environment if not carried out in compliance with safety regulations.

##### ⊘ Prohibition (normal text)

- Marks actions that are prohibited.

##### ❗ Important information (bold text)

- This indicates important information that must be taken into account during the operations.

#### In the texts

##### Purpose of the actions

- Actions required

*Expected responses following an action*

- Lists

#### In the figures

- 1 The numbers indicate the individual components.

A Capital letters indicate a combination of components and dimensions.

- ① The white numbers in black marks indicate a series of actions to be carried out in sequence.

- Ⓐ The black letter in white identifies an image when there are several images in the same figure.

### Pictograms on the product

Symbols are used in some parts of the appliance:

#### Related to safety



##### Read the instruction manual

- Read the instructions carefully before performing any operation on the appliance.



##### Instruction manual

- Read the information available in the technical documentation of the appliance.



##### Read the instruction manual

Read the instructions carefully before performing any operation on the appliance.



##### Instruction manual

Read the information available in the technical documentation of the appliance.



##### Attention electrical hazard

- Warns relevant personnel of the presence of electricity and the risk of electric shock.

### Recipients

#### User

Non-expert person capable of operating the product in safe conditions for people, for the product itself and the environment, interpreting an elementary diagnostic of faults and abnormal operating conditions, carrying out simple adjustment, checking and maintenance operations.

#### Installer

Expert person qualified to position and connect (hydraulically, electrically, etc.) the unit to the plant; this person is responsible for handling and correct installation according to the instructions provided in this manual and the national standards currently in force.

#### Service

Expert and qualified person authorised directly by the Manufacturer to carry out all routine and supplementary maintenance operations, as well as every adjustment, check, repair and replacement of parts necessary during the life of the unit.



## Organisation of the manual

The manual is divided into sections each dedicated to one or more target groups.

### General information

It addresses all recipients.

It contains general information and important warnings that should be known before installing and using the appliance.

### Product introduction

Addressed to all recipients, contains general information on the product.

### Installation and Operation

It is addressed exclusively to the installer.

Contains specific warnings and all information necessary for positioning, mounting, connecting the device and operation.

### Commissioning, maintenance and troubleshooting

They are addressed exclusively to the Authorised Service Centre.

It contains specific warnings and useful information for the most common commissioning and routine maintenance.

### Technical information

It addresses all recipients.

It contains detailed technical information about the appliance.

## 1.2 General warnings

- ⚠ Specific warnings are given in each chapter of the document and should be read before starting operations.
- ⚠ All personnel involved must be aware of the operations and dangers that may arise when beginning all unit installation operations.
- ⚠ Installation performed outside the warnings provided in this manual and use of the appliance outside the prescribed temperature limits will invalidate the warranty.
- ⚠ Any contractual or extra-contractual liability for damage caused to persons, animals or property, due to installation, adjustment and maintenance errors or improper use is excluded. All uses not expressly indicated in this manual are not permitted.
- ⚠ The installation of the appliances must be carried out by a qualified company which, on completion of the work, will issue a declaration of compliance to the person in charge of the plant in accordance with the regulations in force and the instructions provided in the instruction booklet accompanying the appliance.
- ⚠ First start-up and repair or maintenance operations must be carried out by the Authorised Service Centre or by qualified personnel following the provisions of this manual.
- ⚠ Do not modify or tamper with the appliance as this can lead to dangerous situations.
- ⚠ Use suitable personal protective clothing and equipment during installation and/or maintenance operations.

tions. The Manufacturer is not liable for the non-observance of the current safety and accident prevention regulations.


- ⚠ In case of liquid or oil leaks, isolate the main power supply of the system and close any water valves. Promptly contact the Authorised Service Centre or professionally qualified personnel, and refrain from personally intervening on the equipment.
- ⚠ When replacing components, use only original spare parts.
- ⚠ The Manufacturer reserves the right to make changes to its models at any time to improve its product, without prejudice to the essential characteristics described in this manual. The Manufacturer is not obliged to add such modifications to machines previously manufactured, already delivered, or under construction.
- ⚠ The appliance can be used by children aged 8 years and above and by persons with reduced physical, sensory, or mental capabilities, or those lacking experience or necessary knowledge, provided they are under supervision or have been given instructions concerning the safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Cleaning and maintenance intended to be carried out by the user should not be done by children without supervision.

## 1.3 Basic safety rules

We would like to remind you that the use of products that use electricity and water involves observing certain basic safety precautions such as:

- ⊖ It is forbidden to touch the appliance with wet or damp body parts.
- ⊖ It is forbidden to carry out any operation before disconnecting the appliance from the power supply by setting the plant master switch to "OFF".
- ⊖ It is forbidden to modify the safety or adjustment devices without the authorisation and instructions of the appliance manufacturer.
- ⊖ It is forbidden to pull, unplug or twist the electrical cables coming out of the appliance, even if it is disconnected from the mains supply.
- ⊖ It is forbidden to introduce objects and substances through the openings provided for the intake and delivery of air.
- ⊖ It is forbidden to open the access doors to the internal parts of the appliance without first setting the plant master switch to "OFF".
- ⊖ It is forbidden to dispose of packaging material and leave it within reach of children as it can be a potential hazard.

## 1.4 Disposal

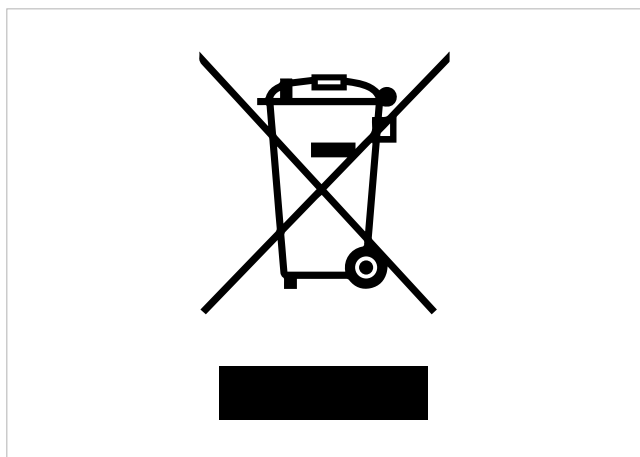

The symbol on the product or packaging indicates that the product should not be treated as normal household waste. Instead, it should be taken to an appropriate collection point for recycling of electrical, electronic, and battery equipment.

Proper disposal of this product avoids harm to humans and the environment and promotes the reuse of valuable raw materials.

For more detailed information about the recycling of this product, contact your local authority, your household waste disposal service, or the shop where you purchased the product.

Illegal disposal of the product by the user involves the application of the administrative sanctions provided for by the regulations in force.

This provision is only valid in the EU Member States.

⚠ Avoid disassembling the appliance yourself.


⚠ **Contact an Authorised Service Centre to disassemble the appliance.**

## 2. PRODUCT INTRODUCTION

### 2.1 Identification

The appliance can be identified by the rating plate:

**Technical rating plate**

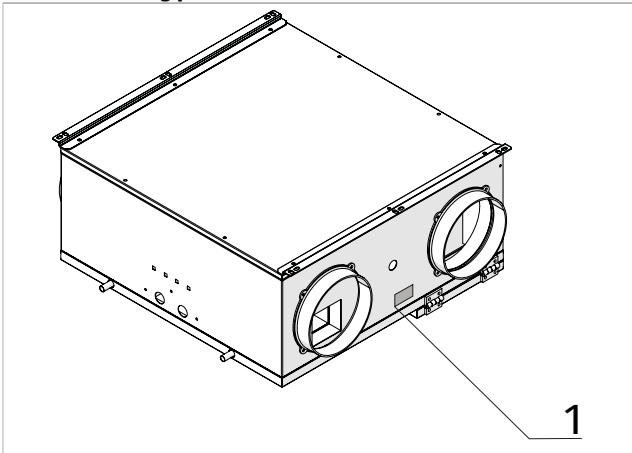

#### Technical rating plate

This shows the technical and performance specifications of the appliance.

⚠ Tampering with, removing or missing identification plates does not allow the product to be reliably identified by its serial number and therefore invalidates the warranty.

### 2.2 Destination of use

This appliance is a ventilation unit complete with heat recovery unit dedicated to changing air without wasting energy. The unit is particularly suitable for single family units, flats and in all cases where the nominal flow rates for air exchange do not exceed 500 m<sup>3</sup>/h.

The unit is designed for installation inside buildings protected from the weather in horizontal position on the ceiling or in a vertical wall position with ducted air distribution.

### 2.3 Description of the appliance

**Structure:** self-supporting sheet metal frame, interior in high density EPS 30 kg/m<sup>3</sup> and polyethylene foam. Carpentry and internal plugging in thick galvanised sheet metal.

**Heat exchanger:** counter-current type. Sensible version in polypropylene, enthalpic version with breathable membranes.

**Fans:** Brushless DC fans regulated by inverters allow high levels of comfort and energy efficiency with constant flow function.

**Filters:** EPM1 filter on fresh air and extract air with low pressure drop. Easily removable for routine maintenance.

**Models:** 3 sizes with different flow rates are available.


**Configurations:** the unit is configurable in air flows according to the position of the room side and the outdoor side.

- A factory configuration
- B configuration modifiable on site

## 2.4 List of external components


### Horizontal installation Configuration A

- |    |  |    |  |
|----|--|----|--|
| 1. | Extract air                            | 5. | Cable grommet                            |
| 2. | Vertical condensate drain installation | 6. | Electrical connection passage            |
| 3. | Supply air                             | 7. | Horizontal condensate drain installation |
| 4. | Fixing bracket                         | 8. | Filter access hatch                      |

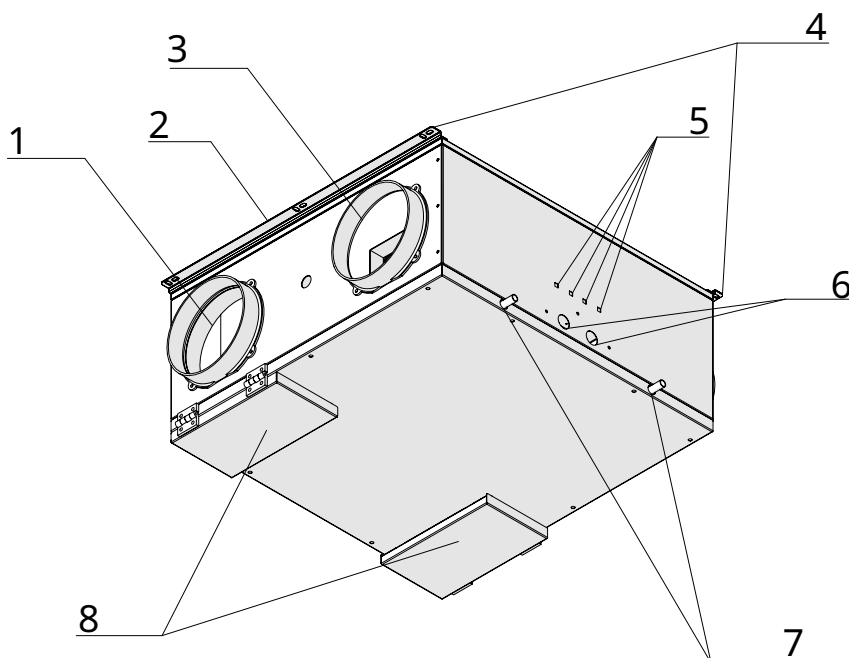

### Vertical installation Configuration A

- |    |   |     |  |
|----|---|-----|--|
| 1. | Fresh air inlet                                 | 6.  | Horizontal condensate drain installation |
| 2. | Vertical condensate drain installation          | 7.  | Cable grommets                           |
| 3. | Exhaust air                                     | 8.  | Supply air                               |
| 4. | Holes for the passage of electrical connections | 9.  | Extract air                              |
| 5. | Fixing bracket                                  | 10. | Filter access hatch                      |

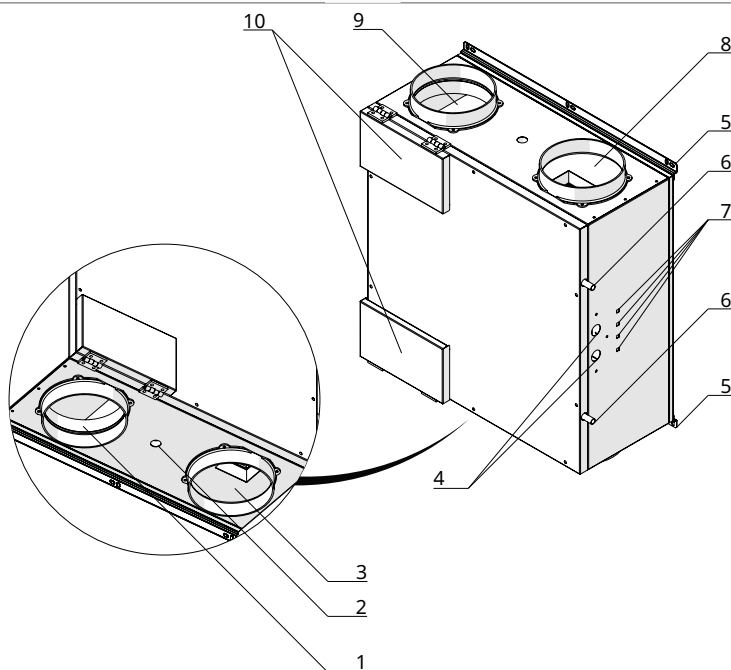


## 2.5 List of internal components

### Horizontal installation Configuration A

1. Outdoor air filter
2. Heat exchanger
3. Room air filter
4. Bypass


5. Supply fan
6. Electrical panel
7. Exhaust fan

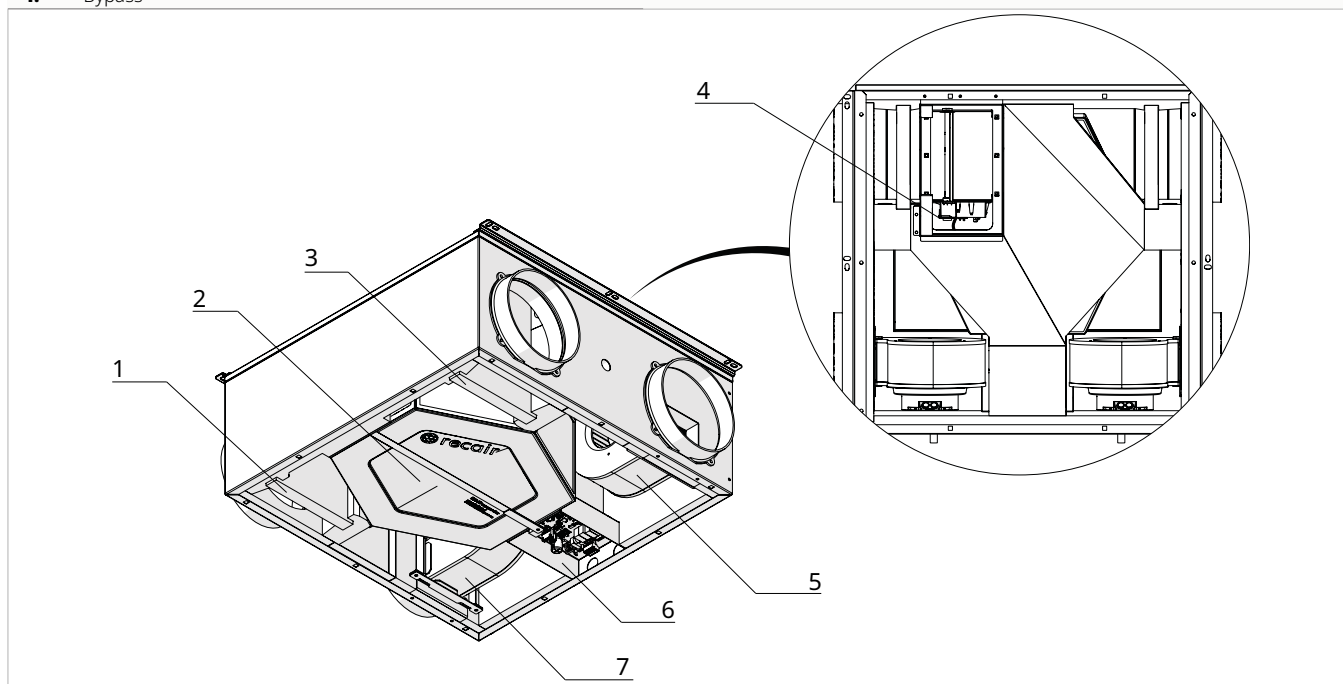


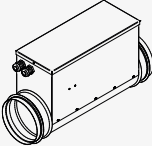
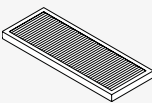
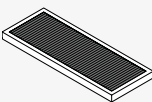
### Vertical installation Configuration A

1. Fresh air inlet filter
2. Extract air filter
3. Heat exchanger
4. Exhaust fan

5. Electrical panel
6. Supply fan
7. Bypass

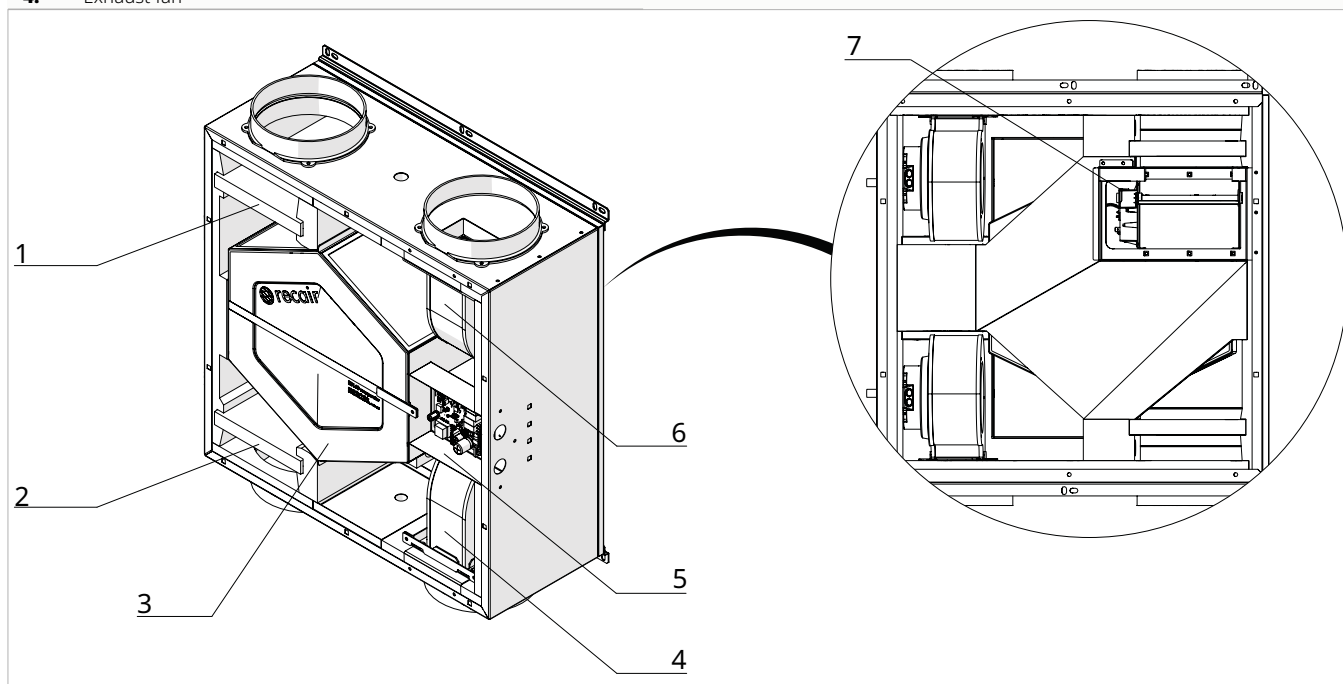

## 2.6 Compatible accessories

| Description  |  | Code         |
|--|--|--------------|
| <b>Commands</b>  |  |              |
|   | LED electronic control panel with touch interface, wall mounted complete with thermostat and room temperature and relative humidity probe. Cable connection. White colour                              | PCZ-AHRP0025 |
|  | LED electronic control panel with touch interface, wall-mounted complete with thermostat and room temperature and relative humidity probe with integrated Wi-Fi module. Cable connection. White colour | PCZ-AHRP0026 |
| <b>Auxiliary electrical coils</b>  |  |              |
|   | Electric post-heating coil DN 125 mm 0.5 kW  | PCZ-AHRP0423 |
|  | Electric post-heating coil DN 160 mm 0.5 kW  | PCZ-AHRP0422 |
| <b>Spare filters</b>   |  |              |
|   | Kit 2 ePM1 80% delivery filters delivery fresh air supply and extraction   | PCZ-AHRP0501 |
| <b>Active carbon spare filters</b>   |  |              |
|  | Kit 1 activated carbon filter  | PCZ-AHRP0901 |

## 3. INSTALLATION

### 3.1 Preliminary warnings

- ⚠ **For detailed information on the products, refer to chapter "Technical information" p. 48.**
- ⚠ The installation must be carried out by the installer. There is a risk of water leakage, electric shock or fire if the installation is not performed correctly.
- ⚠ During installation, it is necessary to observe the precautions mentioned in this manual, and on the labels affixed to the inside of the appliances, as well as to take

every precaution suggested by common sense and the safety regulations in force at the place of installation.

- ⚠ Using only the supplied installation-specific components is recommended. Use of alternative components could lead to water leakage, electric shock or fire.
- ⚠ Failure to apply the indicated rules may cause malfunctions of the appliance and relieves the Manufacturer from any warranty and from any damage caused to persons, animals or property.

### 3.2 Reception

#### Preliminary warnings

- ⚠ Upon receipt of the package check that it is not damaged, otherwise accept the goods with reservation, producing photographic evidence of any damage.
- ⚠ In the event of damage, notify the shipper by registered mail with return receipt within 3 days of receipt. Presenting photographic documentation, similar information should also be sent by email to the Manufacturer.
- ⚠ No reports of damage will be taken into account later than 3 days after delivery.


#### Package description

The packaging is made of suitable material and carried out by experienced personnel.

The units are all checked and tested and are delivered complete and in perfect condition.

The appliance is shipped in standard packaging consisting of a cardboard box and a set of polystyrene foam protectors, placed on a wooden pallet and secured with straps.

### 3.3 Dimensions and weights with packaging

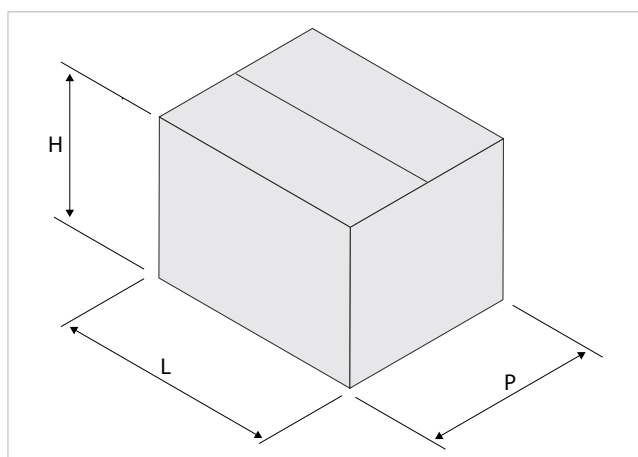

| Models                          | u.m. | 15Z  | 20Z  | 30Z  |
|---------------------------------|------|------|------|------|
| <b>Packaging dimensions (1)</b> |      |      |      |      |
| Width                           | mm   | 650  | 650  | 650  |
| Length                          | mm   | 700  | 700  | 700  |
| Height                          | mm   | 330  | 390  | 390  |
| Weight                          | kg   | 22,0 | 23,0 | 23,0 |
| 1. Excluding pallet             |      |      |      |      |

### 3.4 Handling with packaging

#### Preliminary warnings

- ⚠ The unit may only be handled by qualified personnel adequately equipped and with equipment suitable for the weight and dimensions of the unit.

- ⚠ Before each handling operation, check the lifting capacity of the machinery used in accordance with the indications on the packaging.
- ⚠ When the load is lifted from the ground, stay clear of the immediate and surrounding area.


- ⚠ Check the information on the packaging for the amount of stackable packages.

- ⚠ In manual operations, the maximum weight per person required by current legislation must always be observed.

#### Handling

##### With pallet:

- ▶ use a forklift

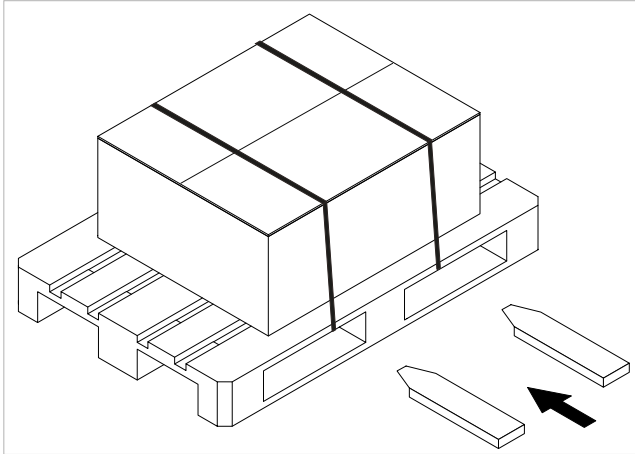

##### Without pallet:

- ▶ use a forklift
- ⚠ The unit can only be moved manually for short trips in exceptional cases. In this case it is necessary to carefully check that the weight of the unit does not exceed what is stipulated by the regulations with respect to the number of persons employed.

### 3.5 Storage

#### Preliminary warnings


- ⚠ Stored in accordance with the applicable national regulations.
- ⚠ Store in a closed environment protected from the weather, off the ground by means of sleepers or pallets with temperatures not below 0 °C, up to a maximum of 40 °C.

### 3.6 Unpacking

#### Preliminary warnings

- ⚠ Check that the individual components are present.
- ⚠ Check that no components were damaged during transport.
- ⚠ Dispose of the packaging components following the applicable waste disposal regulations. Check for disposal arrangements with your local authority.
- ⚠ Handle with care.
- ⊖ The packing material (cardboard, staples, plastic bags, etc.) must not be dispersed or abandoned in the surrounding environment and must be kept out of reach of children due to risk of hazard.

#### Removing the packaging

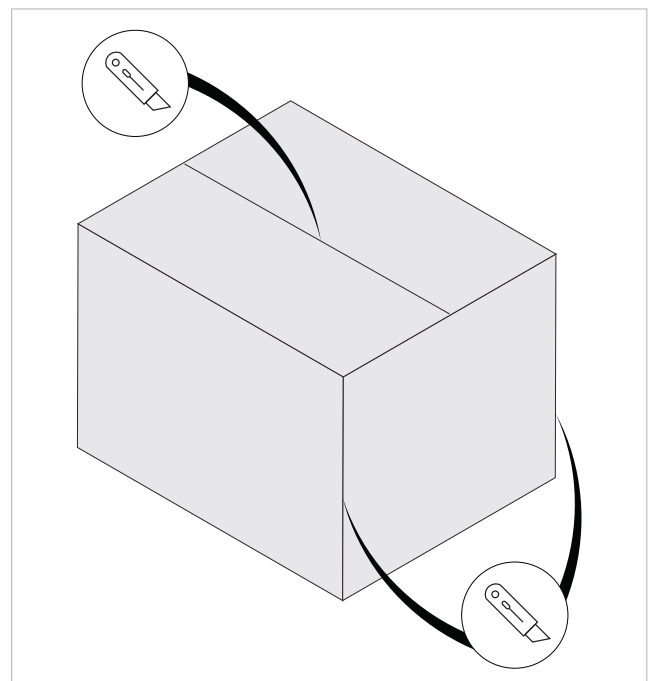



**To remove the packaging:**

- ▶ use a cutter
- ▶ open the cardboard packaging
- ① To aid removal of the product, also cut the vertical edges.
- ▶ remove the accompanying components
- ▶ remove the polystyrene elements
- ▶ remove the appliance from the box

**Accompanying material**

They are included with the appliance, inside the packaging:

- Control panel user manual
  - Installer manual
  - Energy efficiency label
  - Configuration B label
  - Drain connection with siphon
  - Two brackets with adjustable spacers for vertical installation
- ⚠ Check the presence of the individual components.

### 3.7 Handling without packaging

**Preliminary warnings**

- ⚠ The unit must be handled using non-slip gloves.
- ⚠ The unit may only be handled by qualified personnel adequately equipped and with equipment suitable for the weight and dimensions of the unit.
- ⚠ Before each handling operation, check the lifting capacity of the machinery used in accordance with the indications on the packaging.
- ⚠ When the load is lifted from the ground, stay clear of the immediate and surrounding area.
- ⚠ Check the information on the packaging for the amount of stackable packages.

- ⚠ In manual operations, the maximum weight per person required by current legislation must always be observed.

**Movement methods**

- ▶ use a fork lift, scaffolding or other suitable lifting system
- ⚠ The unit can only be moved manually for short trips in exceptional cases. In this case it is necessary to carefully check that the weight of the unit does not exceed what is stipulated by the regulations with respect to the number of persons employed.

### 3.8 Installation site

The location of the appliance must be determined by the plant engineer or a competent person and must take into account both purely technical requirements and any national/local legislation in force.

The appliance is intended to be installed indoors:

- in a horizontal position fixed to the ceiling.
- in a vertical position fixed to the wall.
- ⚠ The installation position must be chosen close to a wall connected to the outside.
- ⚠ The appliance is declared IPX0 protected, therefore not suitable for installation outdoors or in rooms with the presence of water (swimming pool, etc.).

**Preliminary warnings**

- ⚠ Avoid installing the unit in the vicinity of:
  - obstacles or barriers that cause recirculation of the exhaust air
  - narrow places where the sound level of the appliance can be enhanced by reverberations or resonances
  - environments with the presence of flammable or explosive gases
  - very damp environments (laundries, greenhouses, bathrooms with high humidity, etc.) to prevent the formation of condensation on the external panels of the unit
  - environments with the presence of flammable or explosive gases or flammable fluids

- solar radiation and proximity to heat sources
- ⚠ **Avoid installing the unit in the vicinity of the sea. Salty atmospheres cause corrosion and oxidation of the internal components, compromising the functioning of the unit.**
- ⚠ Avoid placing the unit within 1 metre of radio and video equipment.
- ⚠ Do not install above heat sources.
- ⚠ Ensure that:
  - the installation site of the unit must be chosen with the utmost care to guarantee adequate protection from shocks and consequent damage
  - the supporting surface is capable of supporting the weight of the appliance
  - the supporting surface does not affect load-bearing building elements, piping, or power lines
  - the functionality of load-bearing elements is not compromised
  - there are no obstacles to the free circulation of air through the holes (plants, leaves...)
  - the appliance must be installed in a position where it can be easily serviced
  - the safety distances between the units and other appliances or structures are scrupulously respected so that the air entering and leaving the fans is free to circulate

- ⚠ If the unit is installed incompletely or on an unsuitable surface, it could cause damage to persons or property if it becomes detached.
- ⚠ The appliance must not be in a position where the air flow is aimed directly at a person.


- ⚠ Provide the following:
  - a drain nearby for the outflow of condensation
  - a compliant power supply nearby

**3.9 Minimum installation distances**

The clearance zones for the installation and maintenance of the appliance are shown in the figure below. Established spaces are necessary to avoid barriers to airflow and allow for normal cleaning and maintenance.


- ⚠ Make sure that there is sufficient space to allow the panels to be removed for routine and supplementary maintenance operations.

**Horizontal installation**

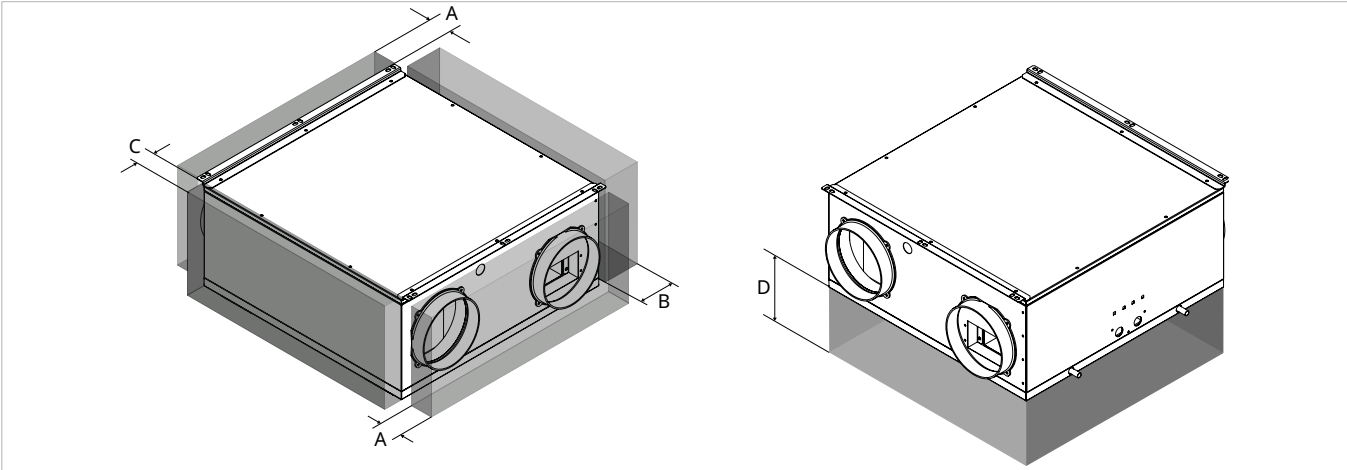

| Models            | u.m. | 15Z | 20Z | 30Z |
|-------------------|------|-----|-----|-----|
| Minimum distances |      |     |     |     |
| A                 | mm   | 10  | 10  | 10  |
| B                 | mm   | 30  | 30  | 30  |
| C                 | mm   | 10  | 10  | 10  |
| D                 | mm   | 235 | 293 | 293 |

**Vertical installation**

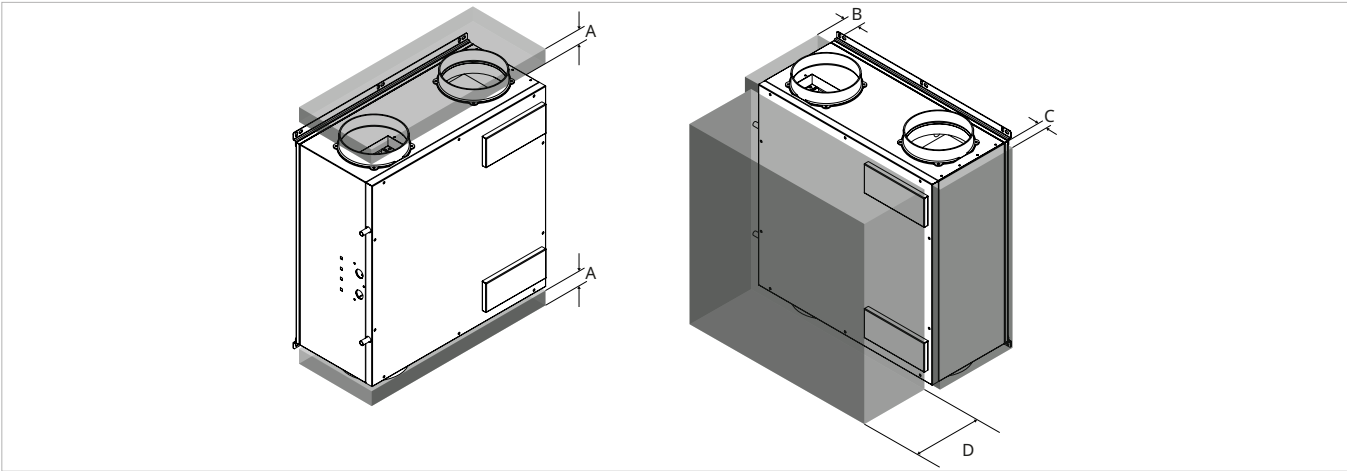


| Models              | u.m. |
|---------------------|------|
| Minimum distances * |      |
| A                   | mm   |
| B                   | mm   |

| Models | u.m. |
|--------|------|
| C      | mm   |
| D      | mm   |

### Hatch dimensions

⚠ For installation in a ceiling, it is mandatory to create an access hatch for the inspection and maintenance of the device.

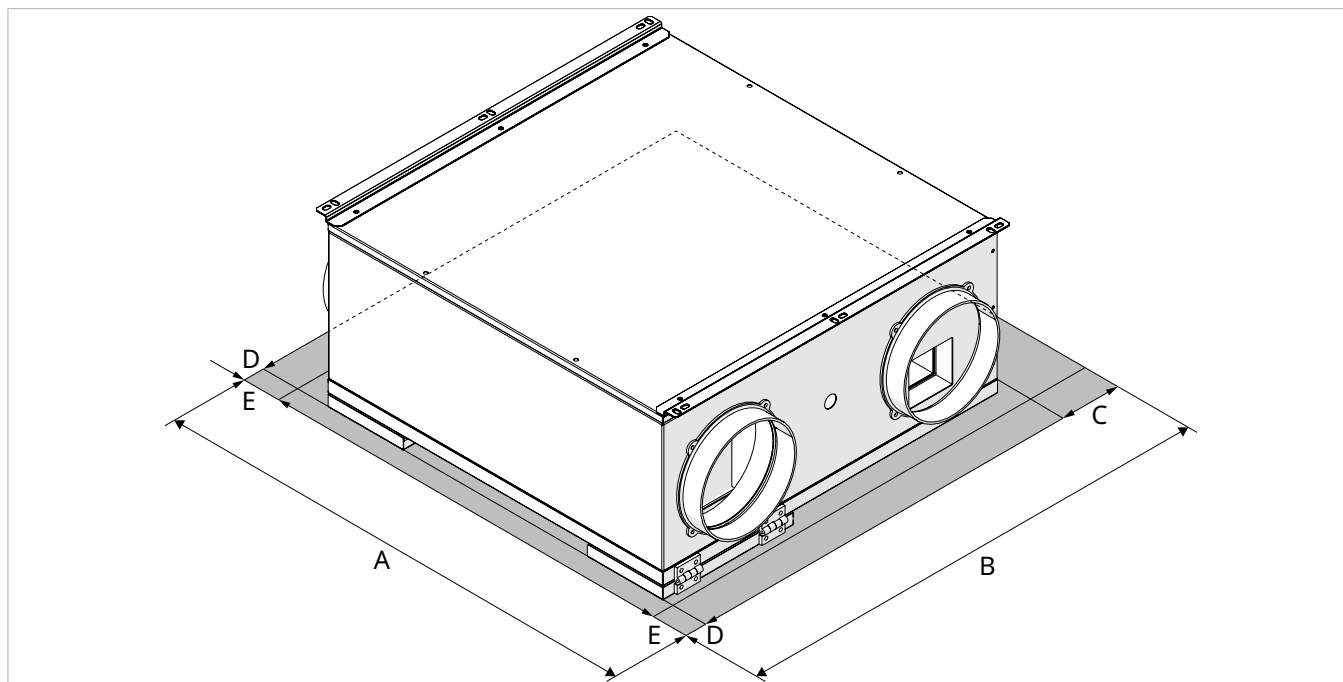

| Models                  | u.m. | 15Z | 20Z | 30Z |
|-------------------------|------|-----|-----|-----|
| <b>Hatch dimensions</b> |      |     |     |     |
| A                       | mm   | 672 | 672 | 672 |
| B                       | mm   | 620 | 620 | 620 |
| C                       | mm   | 30  | 30  | 30  |
| D                       | mm   | 10  | 10  | 10  |
| E                       | mm   | 10  | 10  | 10  |

## 3.10 Positioning

### Preliminary warnings

⚠ Check that:

- the surface supports the weight of the appliance
- the surface does not affect piping or power lines
- the functionality of load-bearing elements is not compromised

### Drilling the outside wall

The external wall must be prepared with holes for air ducting.


### To drill the holes:

- ▶ mark the position of the hole
- ▶ use a drill
- ▶ drill a guide hole
- ▶ use a core drill
- ▶ make a hole through the wall
- ▶ maintain a downward slope towards the outside

⚠ To avoid the release of large amounts of dust and debris into the room, you are advised to couple the core drill with a vacuum system.

- ⚠ Proceed with caution near the outside wall to avoid breaking the plaster around the hole.
- ⚠ Take precautions so that the removed material does not hit people and objects below.

#### Installation bracket configuration

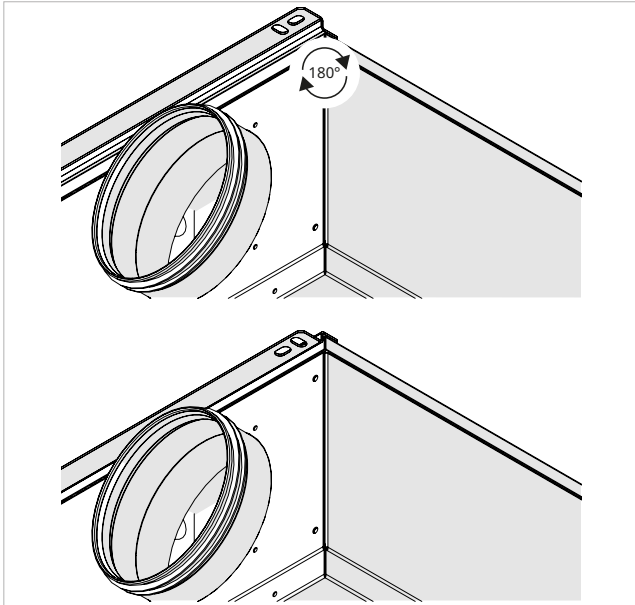



- ⚠ The unit is factory-supplied with the installation bracket oriented upwards. It is possible to rotate it 180° to mount the unit flush with the ceiling. This option may cause vibrations, unwanted noise, and a variation in height compared to the standard configuration indicated in the manual.

#### Positioning the unit

The unit can be installed in two different ways:

- Horizontal ceiling installation
- Vertical wall installation

#### Horizontal ceiling installation

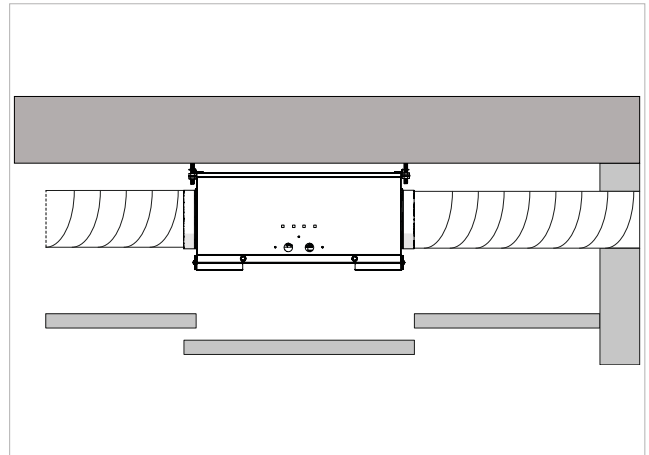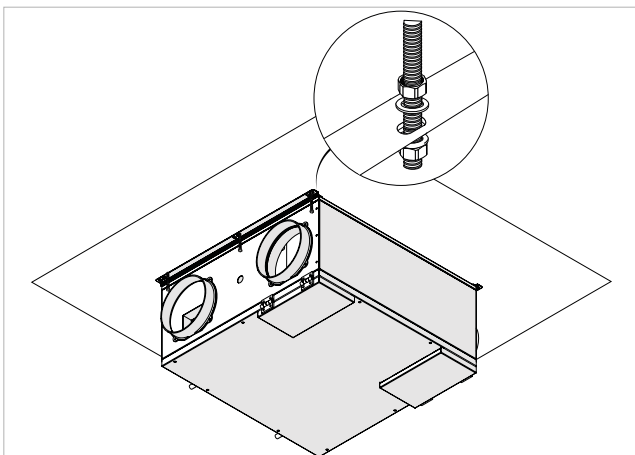

- ⚠ Check the correct orientation of the unit.
- ▶ mark the position of the fixing holes
- ▶ use fixing systems appropriate for the type of supporting surface and the weight of the unit
- ▶ secure the unit to the fixing system


#### Check that:

- it is levelled
- the minimum installation distances are respected


#### Vertical wall installation

The machine leaves the factory ready for horizontal installation. The position of the fixing brackets must be changed to install it in a vertical position.


- ⚠ Check the correct orientation of the unit.

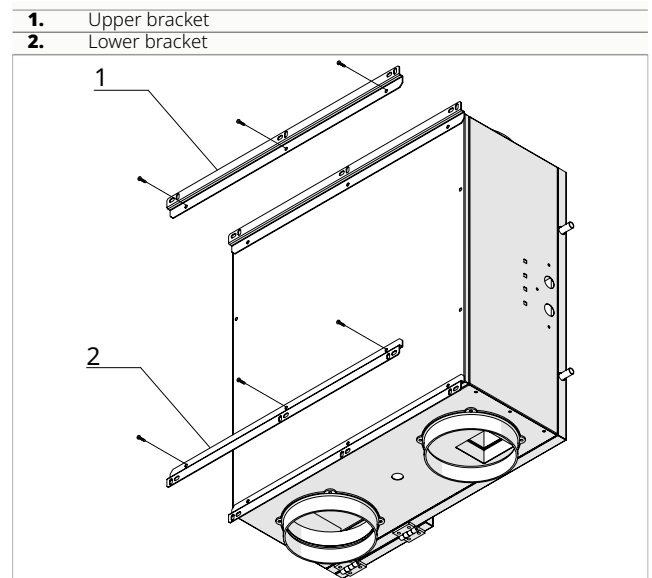

- ▶ remove the fixing screws
- ▶ remove the brackets

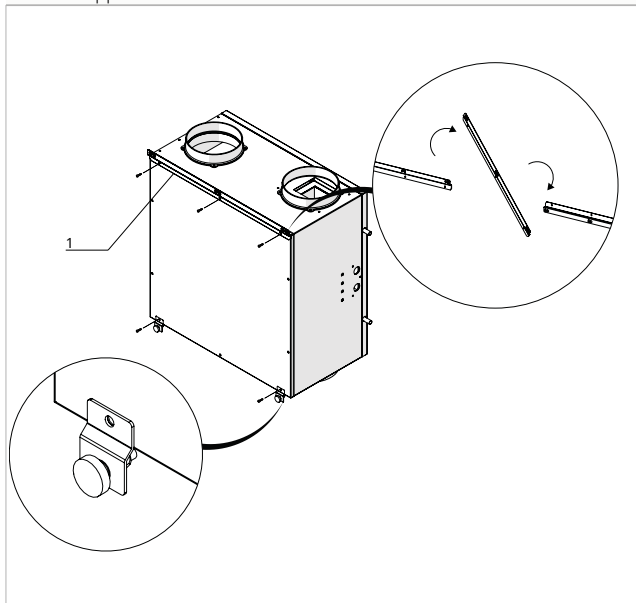**1.** Upper bracket

- rotate the upper bracket by 180°
- reposition the bracket on the unit
- position the brackets with adjustable spacers on the lower side

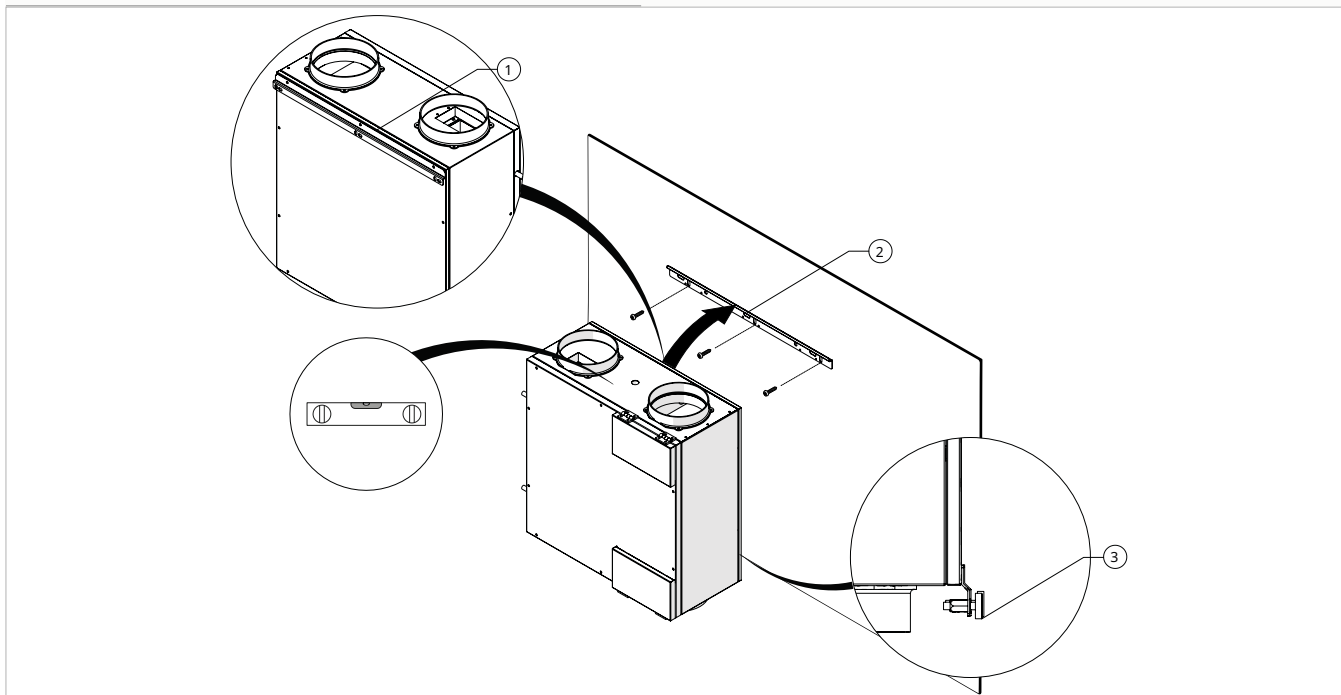**1.** Upper bracket**2.** Lower bracket**3.** Spacers

- take the lower bracket removed from the unit again
- use the lower bracket as a template
- mark the position of the fixing holes
- use screws and expansion plugs suitable for the weight of the appliance and the material of the supporting wall
- fix the lower bracket to the wall
- hook the upper bracket positioned on the device to the lower bracket positioned on the wall
- adjust the spacers

**Check that:**

- it is levelled
- the minimum installation distances are respected

### 3.11 Condensate drain connection


#### Preliminary warnings

- ⚠ This appliance is equipped with trays for collecting the condensate that is produced during operation. Condensate must be routed to a suitable place for drainage.
- ⚠ The appliance is equipped with two condensate drainage connections. One of the two must be used depending on the chosen configuration.
- ⚠ If the drainage line runs into a container (tank or other) it must be ensured that the container itself is hermetically sealed and most importantly it must be ensured that the drainage pipe is not immersed in water.
- ⚠ The hole for the condensate pipe must always have an downwards slope.
- ⚠ When connecting the condensate drain, take care not to crush the rubber pipe.

#### Attachment position

The unit has three condensate drain attachments. The size and position of the condensate drain attachments are shown below.

- |    |   |
|----|---|
| 1. | Vertical installation condensate drain attachment Ø 20 mm                   |
| 2. | Condensate drain connection horizontal installation configuration B Ø 12 mm |
| 3. | Condensate drain connection horizontal installation configuration A Ø 12 mm |

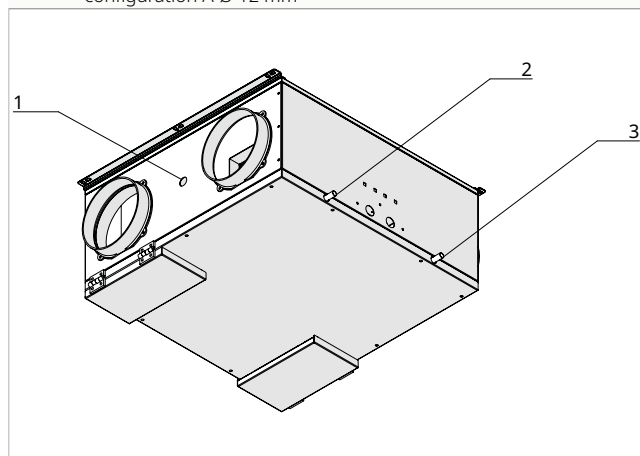


- ⚠ The unused attachments must be capped.


## Connections

### Unit installed horizontally on the ceiling:


1. Condensate drain connection
2. Condensate drain pipe
3. Hose clamp

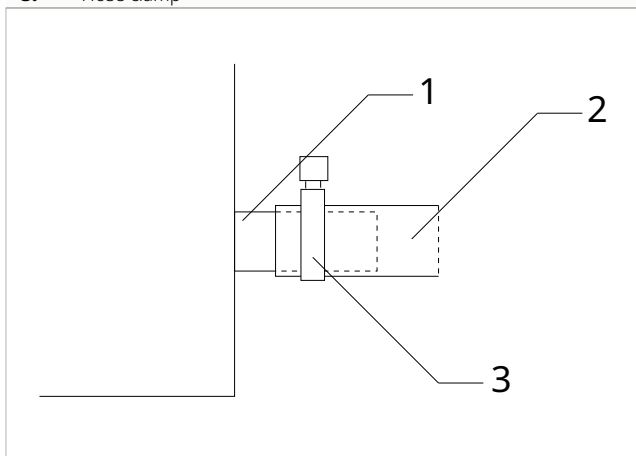

### 1. Unit

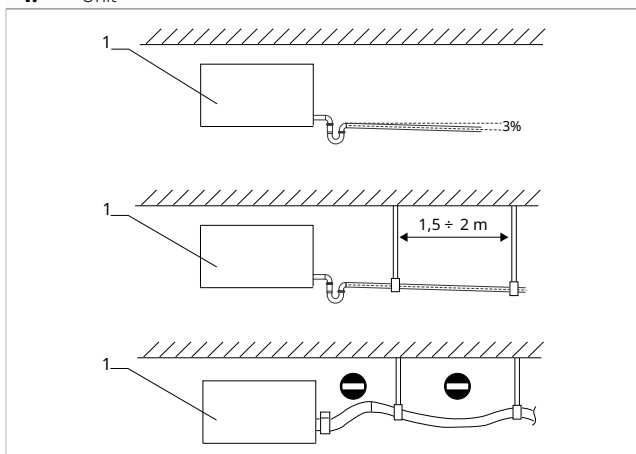

|    |       |
|----|-------|
| HT | 60 mm |
| H1 | 30 mm |
| H2 | 30 mm |

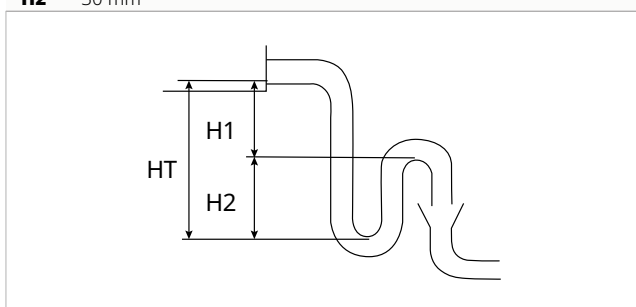

### Depending on the chosen configuration:

- connect the drainage pipe to the connection provided on the unit
- install a siphon on the condensate drainage pipe near the unit
- direct the condensate drain pipe to a suitable place for draining
- maintain a minimum slope of 3% towards the drain location

- insulate junction points

**⚠ It is mandatory to install an adequate siphon on the condensate drainage pipe to prevent the negative pressure generated by the fans from obstructing the proper flow of condensate, which could lead to spillage inside the premises.**

**⚠ The drainage system must include a suitable siphon to prevent unwanted air from entering the vacuum system. The siphon also prevents the entry of odours or insects.**

**⚠ The siphon must be fitted with a plug at the bottom or must in any case permit quick dismantling for cleaning.**


**⚠ Use plastic drainage pipes.**

**⚠ Avoid metal pipes.**


**⚠ Make sure all joints are sealed to prevent leakage of water.**


**⚠ Condensate drain pipes must be insulated for both indoor and outdoor sections to avoid condensation on the surface and/or frosting problems. The insulation must be inserted all the way to the condensate drain pipe connection on the unit.**

### Unit installed vertically on the wall:

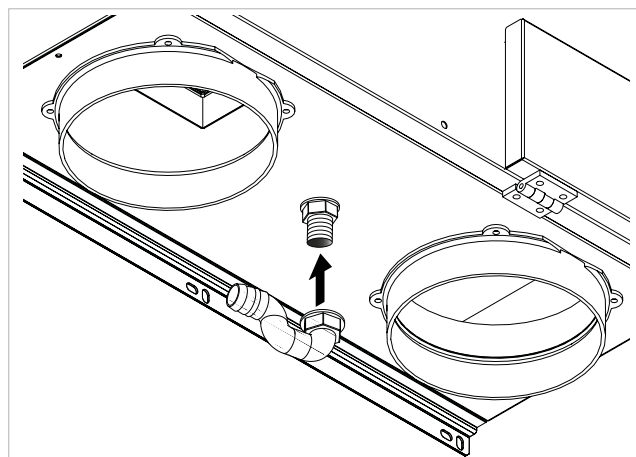

1. Drain connection with siphon
2. Condensate drain pipe
3. Hose clamp

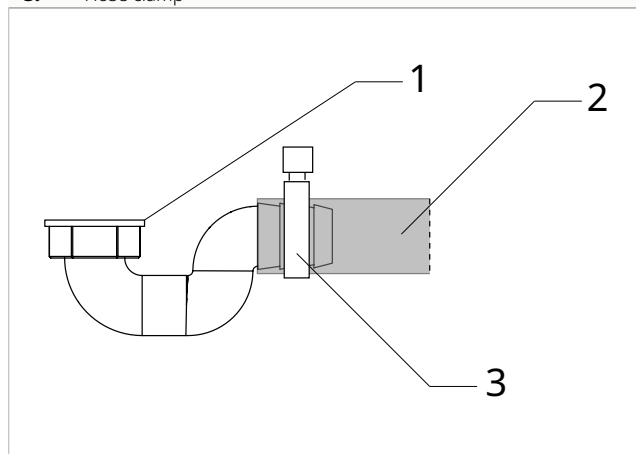

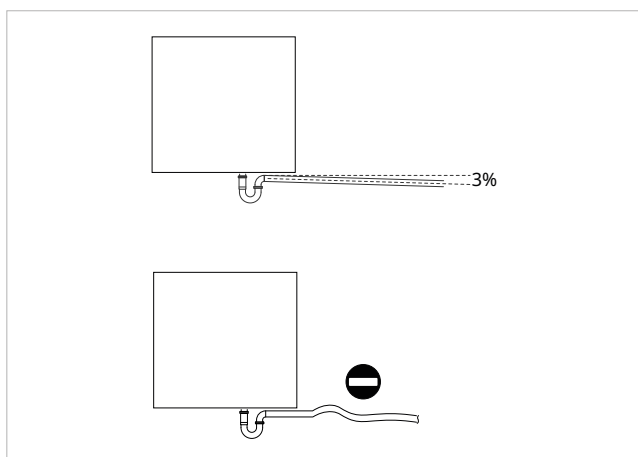

- ▶ connect the drain pipe to the drain connection with siphon
- ▶ direct the drainage pipe to a suitable place for draining

- ▶ maintain a minimum slope of 3% towards the drain location
- ▶ insulate junction points
- ⚠ **It is mandatory to install an adequate siphon on the condensate drainage pipe to prevent the negative pressure generated by the fans from obstructing the proper flow of condensate, which could lead to spillage inside the premises.**
- ⚠ Use plastic drainage pipes.
- ⚠ Avoid metal pipes.
- ⚠ Make sure all joints are sealed to prevent leakage of water.
- ⚠ Condensate drain pipes must be insulated for both indoor and outdoor sections to avoid condensation on the surface and/or frosting problems. The insulation must be inserted all the way to the condensate drain pipe connection on the unit.

## 3.12 Aeraulic connections

### Preliminary warnings

- ⚠ The sizing of ducting and supply and extract grilles must be carried out by a professionally qualified person.
- ⚠ To prevent the transmission of any vibrations of the machine into the room, an anti-vibration joint should be placed between the fan outlets and the ducts.


- ⚠ The connecting pipes must be of a suitable diameter and supported so that their weight does not put strain on the appliance.

### Airflow configurations

- A factory configuration
- B configuration modifiable on site


#### Configuration A Horizontal installation

**RIP:** Extract air  
**IMM:** Supply air  
**EXP:** Exhaust air  
**PAE:** Fresh air inlet

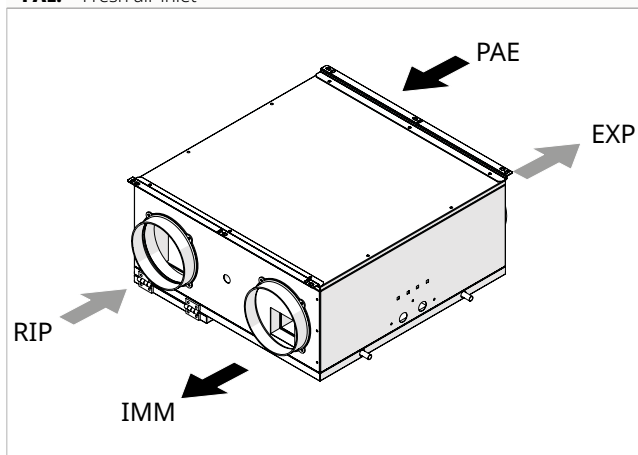

#### Configuration B Horizontal installation


**RIP:** Extract air  
**IMM:** Supply air  
**EXP:** Exhaust air  
**PAE:** Fresh air inlet

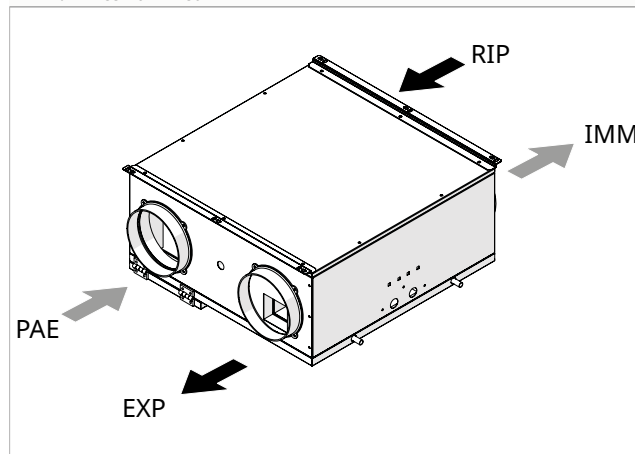



### Configuration A Vertical installation

**RIP:** Extract air  
**IMM:** Supply air  
**EXP:** Exhaust air  
**PAE:** Fresh air inlet

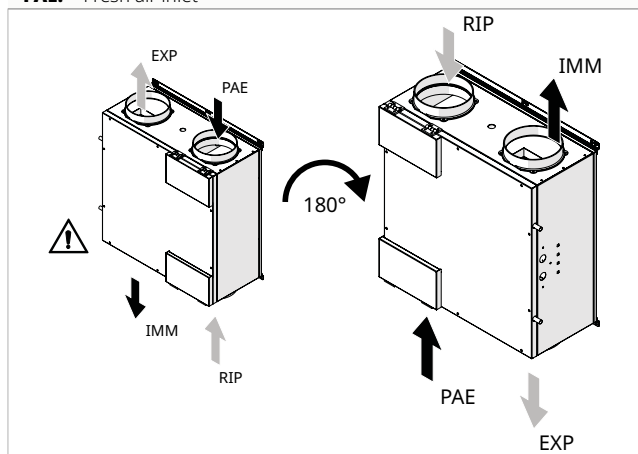


⚠ To install the vertical A configuration on the wall it is necessary to rotate the unit 180°.

### Changing the airflow configuration from A to B

To modify the configuration, switch microswitch E from Off to On. The unit will automatically reverse the fan outputs,


### Configuration B Vertical installation


**RIP:** Extract air  
**IMM:** Supply air  
**EXP:** Exhaust air  
**PAE:** Fresh air inlet

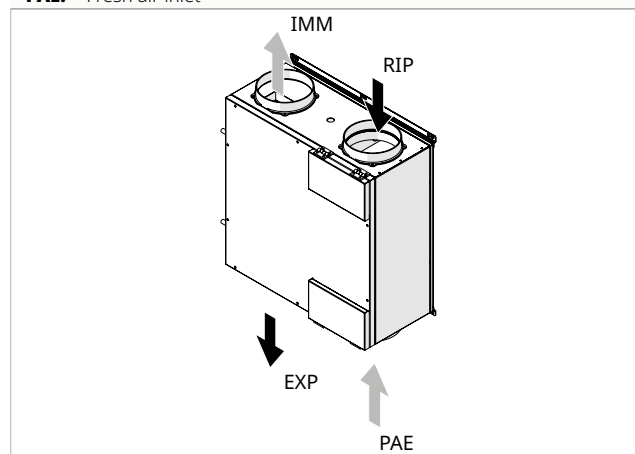

the probe properties, and the respective anti-freeze and bypass control logics.


#### 1. Microswitch E

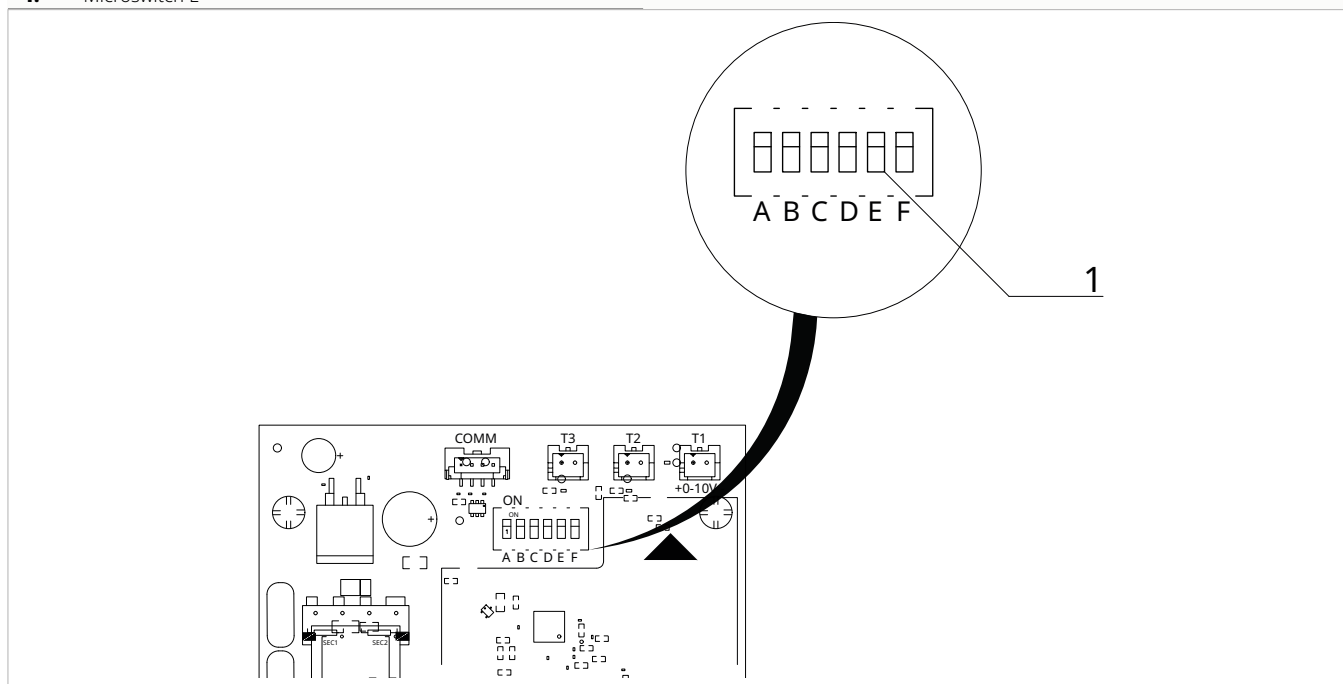

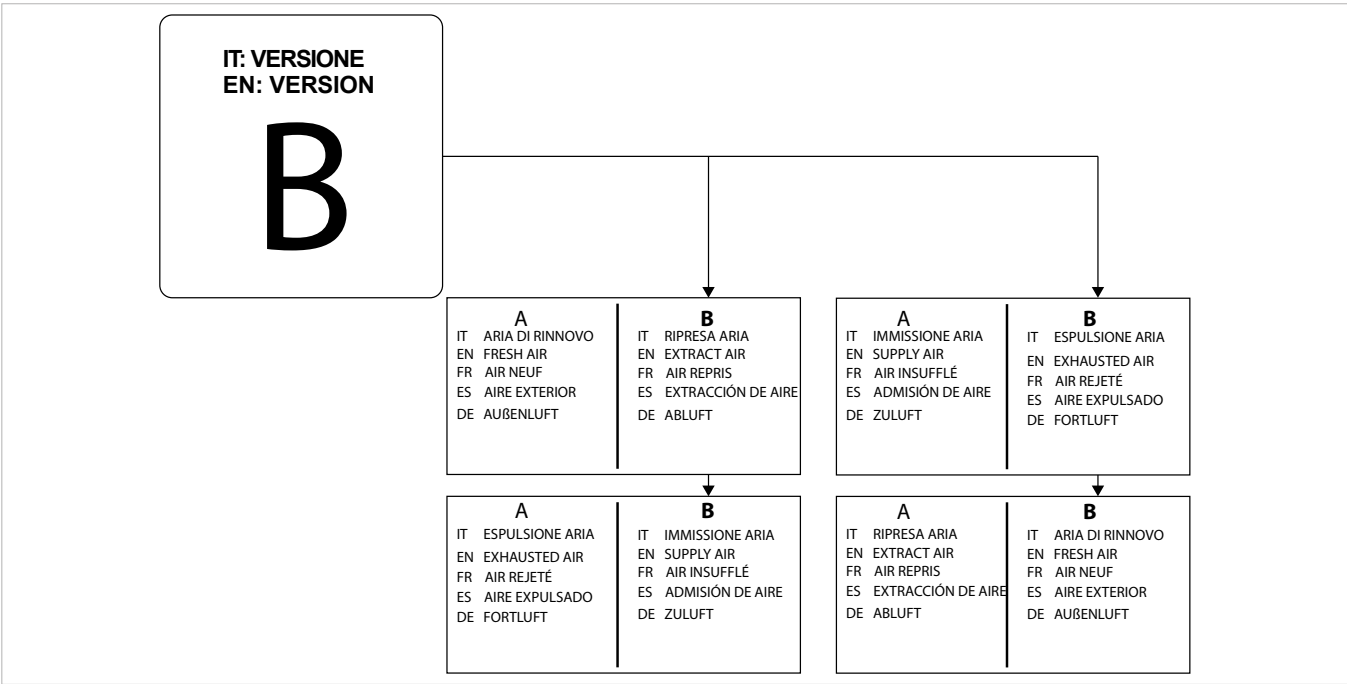

Label application:

To indicate that the machine configuration has been changed, the supplied label must be applied. The presence of the label indicates that you must refer to column B in the airflow labels.

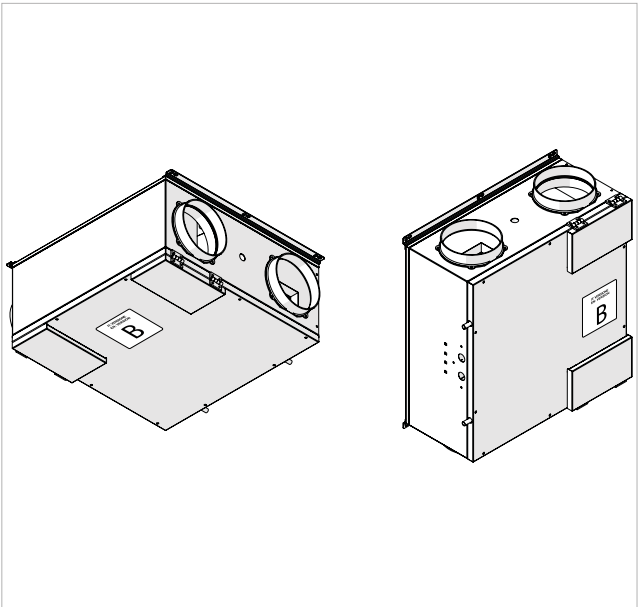


- Horizontal installation: apply the label to the lower panel
- Vertical installation: apply the label on the front panel

Connections

Room side

Configuration A


1. Room side air intake
2. Supply

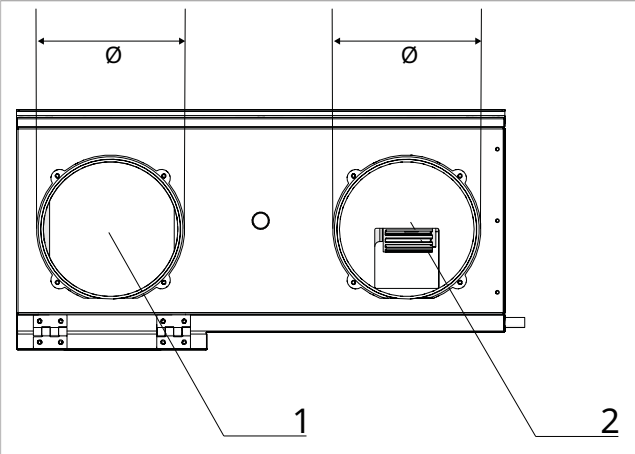



| Models                   | u.m. | 15Z | 20Z | 30Z |
|--------------------------|------|-----|-----|-----|
| Room side air connection | mm   | 160 | 160 | 160 |

**Outdoor side****Configuration A**

1. Expulsion
2. Outdoor air

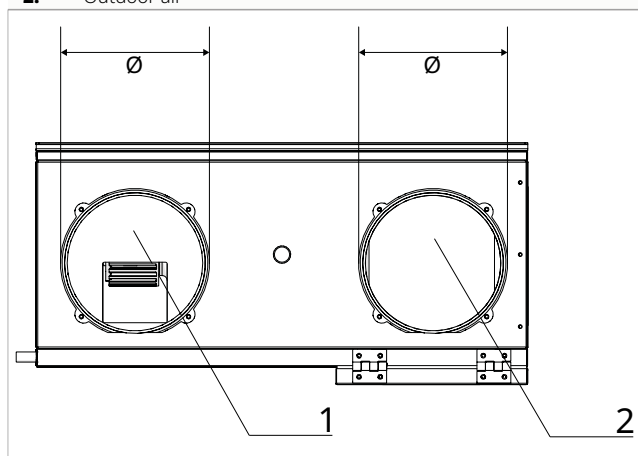

| Models                      | u.m. | 15Z | 20Z | 30Z |
|-----------------------------|------|-----|-----|-----|
| Outdoor side air connection | mm   | 160 | 160 | 160 |

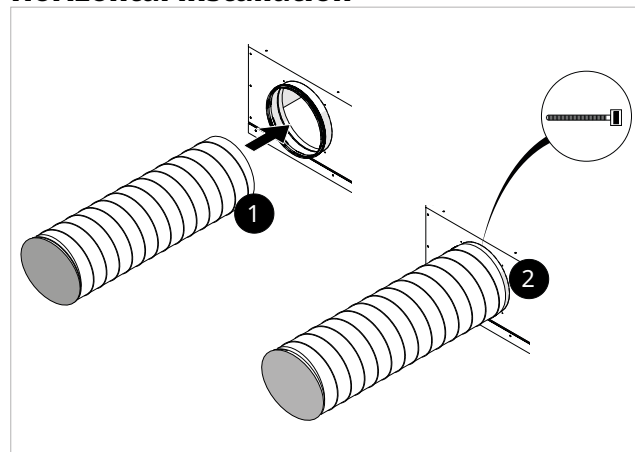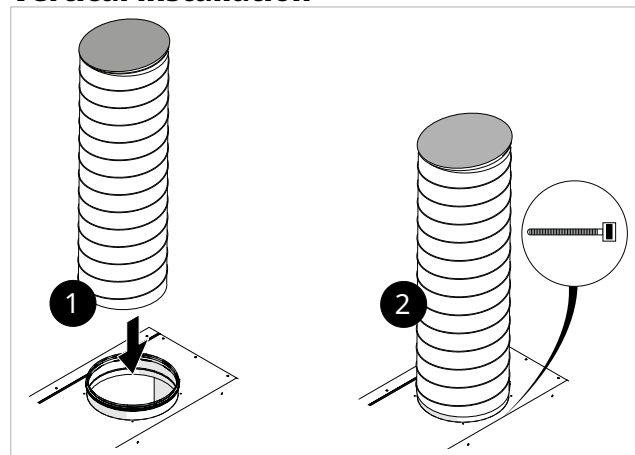**Circular connections****Horizontal installation****Vertical installation**

- ▶ position the ducts on the connections provided on the appliance
- ▶ use a metal clamp or duct fixing collar
- ▶ fix the ducts on the attachments
- ⚠ Use ducts lined with anti-condensation material of a suitable thickness.

**3.13 Electrical connections**

The appliance leaves the factory fully wired and only requires connection to the power supply, control and any accessories.

**Preliminary warnings**

- ⚠ All operations of an electrical nature must be carried out by suitably qualified personnel having the necessary legal knowledge and informed about the risks related to such operations.
- ⚠ All connections must be made in accordance with the relevant regulations in force in the country of installation.
- ⚠ Before carrying out any work, make sure that the power supply is switched off.
- ⚠ The unit should only be powered after the plumbing and electrical work has been completed.

## ⚠ References:

- for electrical connections please refer to the wiring diagrams in this manual, especially for the part concerning the power terminal board

## ⚠ Check that:

- the main supply characteristics are adequate for the power consumption of the appliance, also taking into account any other machinery in parallel operation
- the power supply voltage and frequency correspond to those specified on the nameplate of the appliance
- the cables are suitable for installation in accordance with the IEC standards in force
- the power supply is adequately protected against overloads and/or short circuits

- the disconnection device is positioned in an easily accessible place to enable intervention in the event of an emergency
- ⚠ It is mandatory:
- to connect the appliance to an effective grounding system
- for units with three-phase power supply, check the correct phase connection
- provide an all-pole switch with a contact opening distance of at least 3 mm that allows complete disconnection under overvoltage category III conditions
- Install a ground fault circuit interrupter (GFCI). Failure to install this device could result in electric shock
- ⚠ Ensure that a connection to earth is made. Do not ground the appliance to distribution pipes, surge arresters or the ground of telephony systems. If not performed correctly, grounding can cause an electric shock. Momentary high voltage surges caused by lightning or other causes could damage the heat pump.
- ⚠ Use a dedicated power supply circuit. Never use a power supply to which another appliance is also connected due to risk of overheating, electric shock or fire.
- ⚠ For the electrical connection, use a cable of sufficient length to cover the entire distance without any connection. Do not use extension cables. Do not apply other loads on the power supply.
- ⚠ After connecting the interconnection and power supply cables, ensure that the cables are arranged so that they do not exert excessive forces on the covers or electrical panels. Install the covers on the cables. Incomplete connections of the covers can lead to overheating of the terminals, electric shock or fire.
- ⚠ Any replacement of the power cable must only be carried out by qualified personnel and in accordance with current national regulations.
- ⚠ The manufacturer is not liable for any damage caused by the lack of earthing or failure to comply with the specifications in the respective diagrams.
- ⚠ The appliance is equipped with a noise filter as required by current regulations. Use selective residual current circuit breakers to compensate for the micro leakage to earth of this device.
- ⊖ Using gas and water pipes to ground the appliance is prohibited.

#### Power line dimensioning

Use the tables below for the sizing of the power supply line and its protection device.


These are not average draw or transient peaks, but values to be considered for the correct sizing of the plant and the request of the contractual power (excluding loads due to the normal operation of the building).

- ⚠ Maximum power is reached only in exceptional cases. Therefore, the indicated trip current is suggested to guarantee a balance between machine absorption and incidence in the general system.
- ⚠ The indicated minimum cable cross-section area must be verified according to the actual conditions of the installation: length of the cable, characteristics of the electrical supply, etc.
- ⚠ For units equipped with electrical heating elements, the draw values of the units must be added to those of the heating elements shown in the following tables.

#### Access to the electrical panel


- ⚠ Access to the electrical panel is only permitted to qualified personnel.
- ⚠ Before carrying out any work, ensure that the power supply is switched off.

#### Horizontal installation

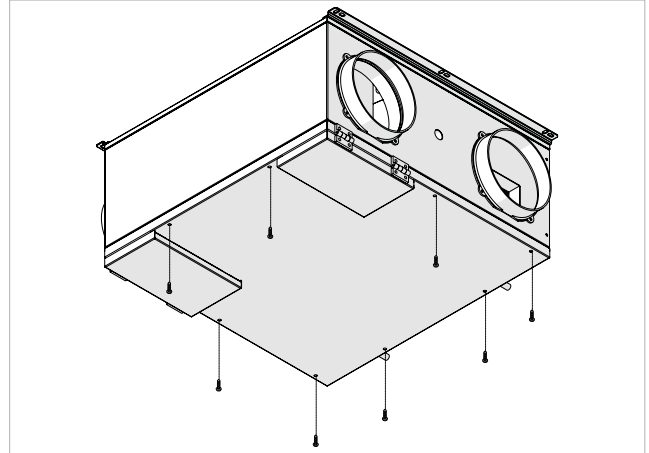


#### Horizontal installation

##### 1. Electrical panel

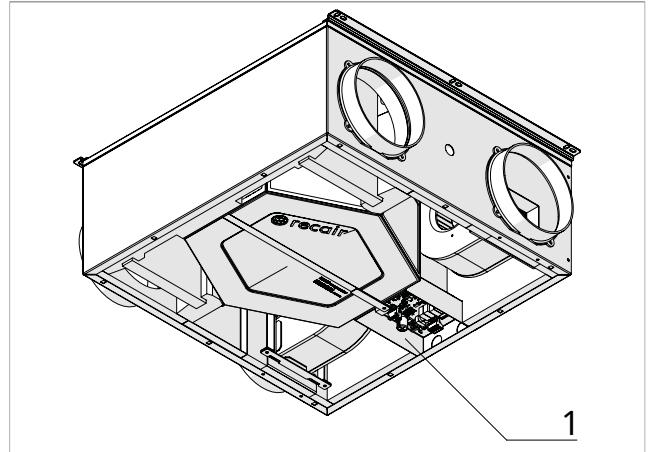


#### Vertical installation

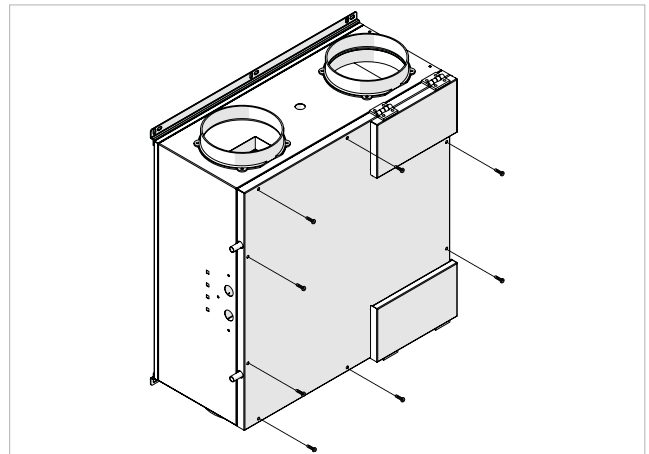

## Vertical installation

1. Electrical panel

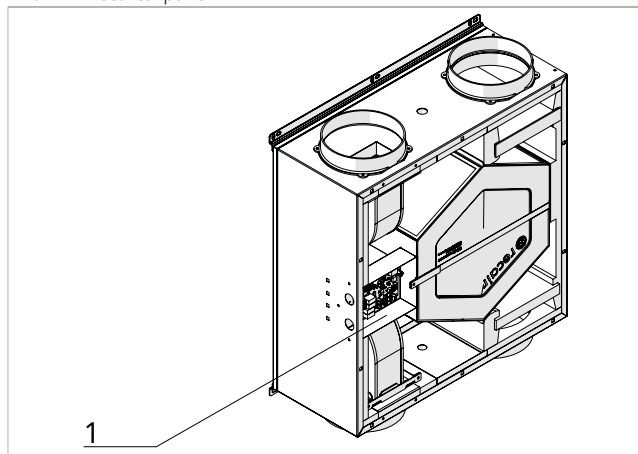

### To access the connections:

- ▶ undo the fixing screws
- ▶ remove the lower panel

### Connections


Before connecting the unit to the mains power supply, make sure that the isolator is open. The power supply of the single-phase unit must be connected to the appropriate terminals, subjected to the action of the isolating switch.

⚠ Use properly sized cables to avoid voltage drops or overheating.

## Connection diagram


1. 230/1/50 power supply
2. Isolator
3. Power cable

4. Unit
5. Remote control
6. Wired controller communication cable

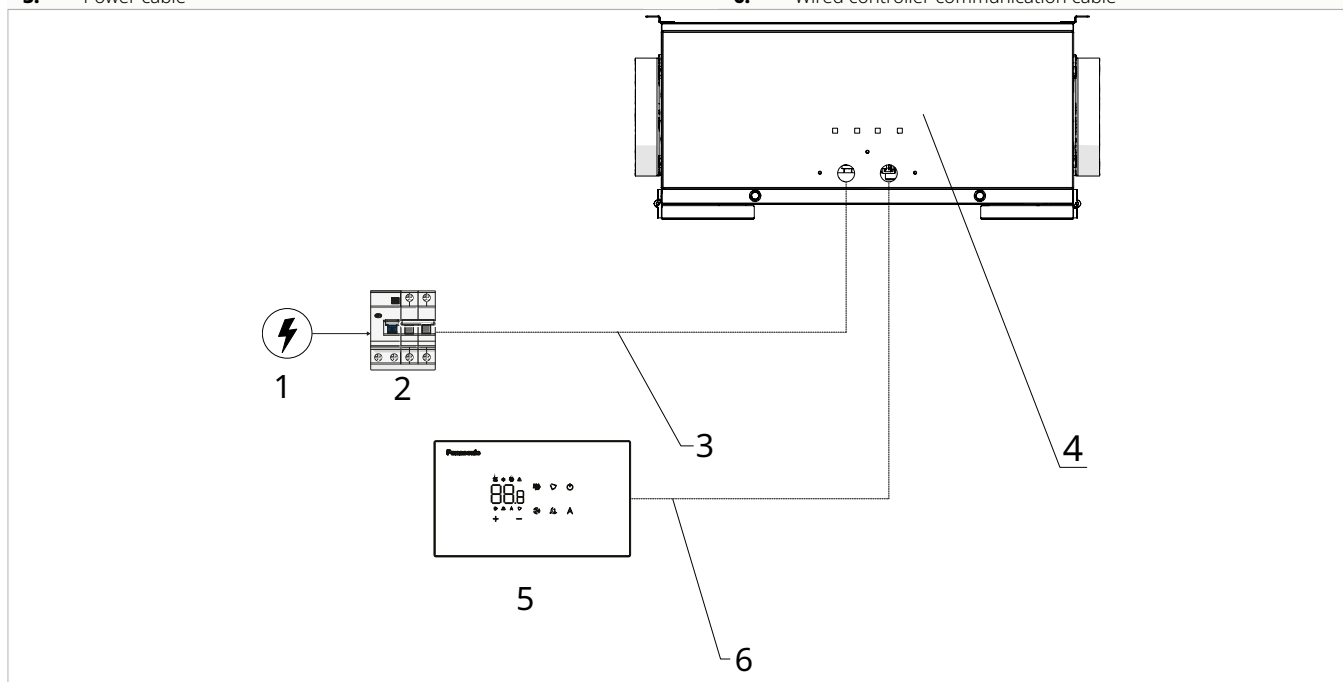

## On-board electrical panel

### Connection terminal board

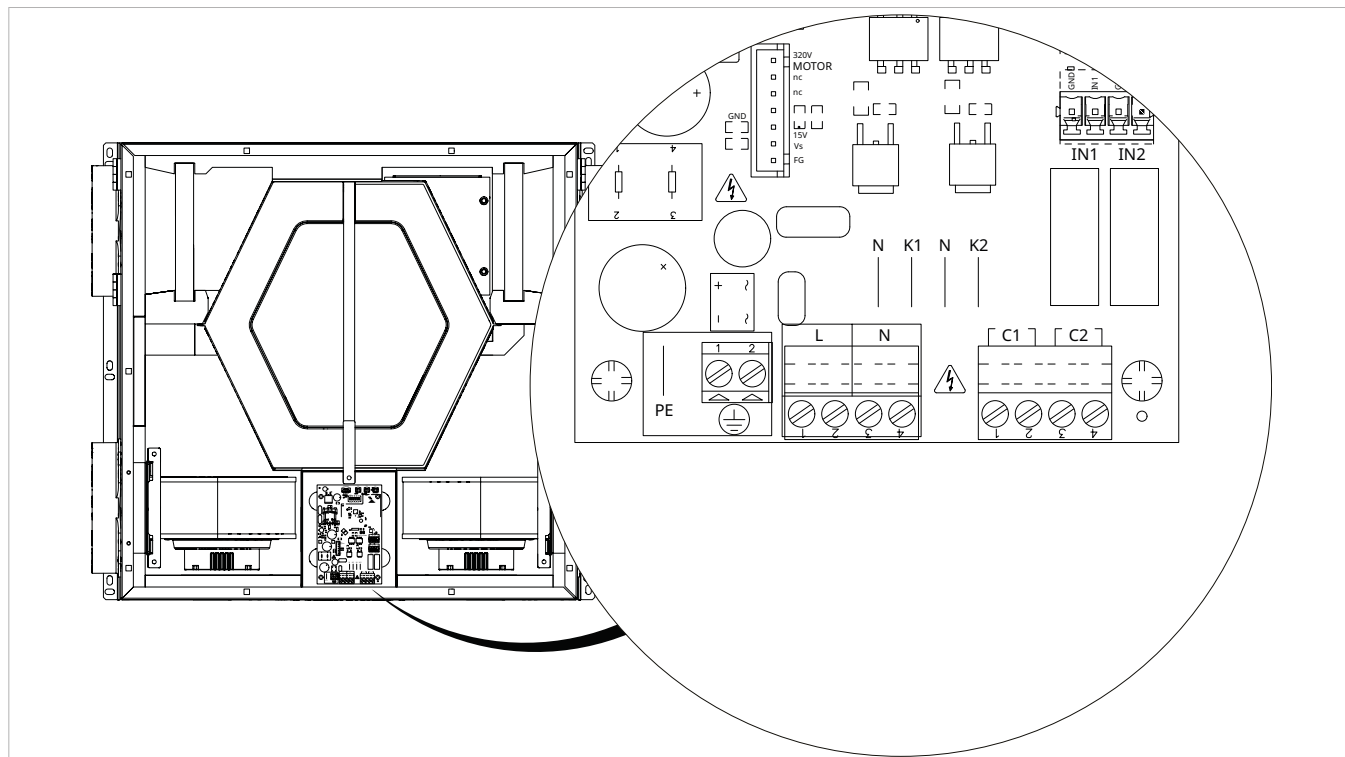


## 4. WALL CONTROL COMMAND CODE PCZ-EEB749

### 4.1 Interface

1. Display area

2. Keypad area

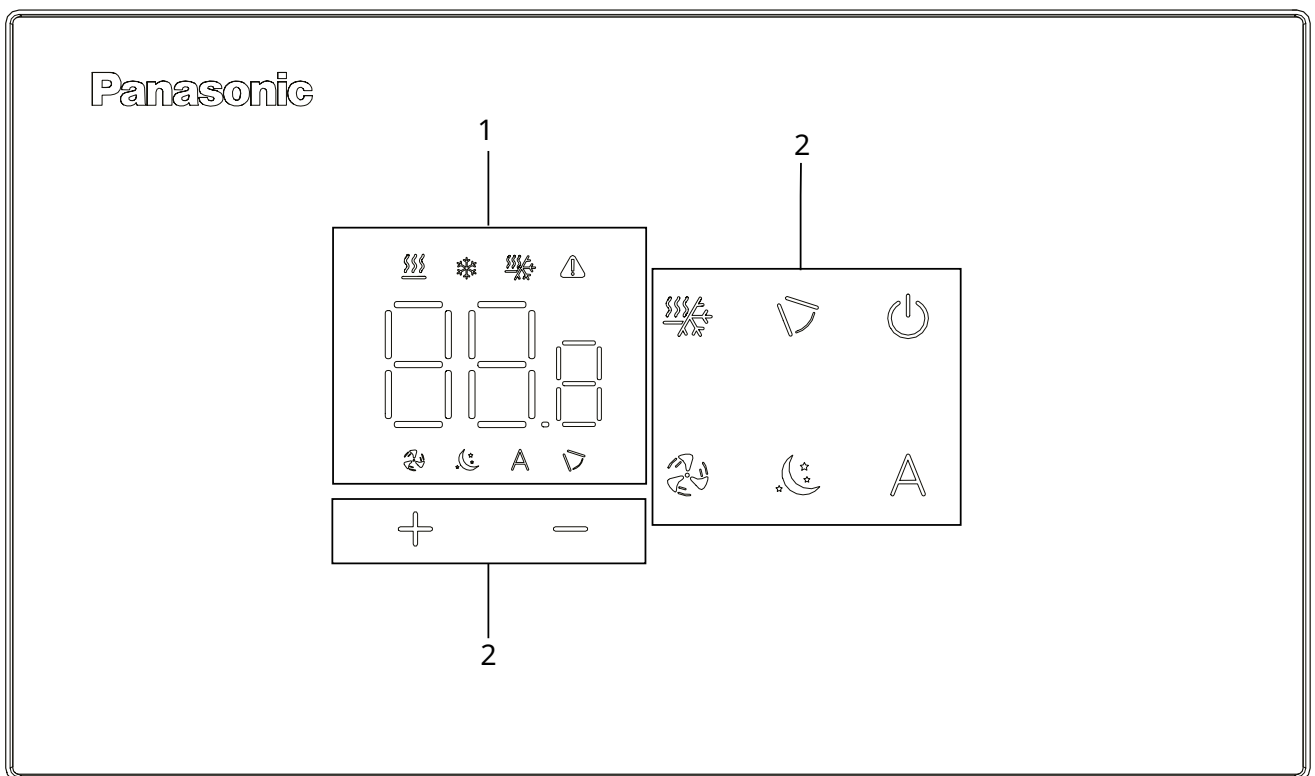

### 4.2 Installation

#### Description


The wall remote control is an electronic LED thermostat with a touch interface, capable of controlling multiple devices equipped with the same electronic board. It is equipped with a temperature and humidity sensor.

#### Mounting

- ⚠ The wall control panel must be installed inside an electrical box.
- ⚠ Before proceeding with the installation of the wall control command, the wall must be prepared to accommodate the electrical box.

⚠ Make sure that:


- the wall supports the weight of the appliance
- the section of wall does not contain pipes or electrical lines
- the functionality of load-bearing elements is not compromised

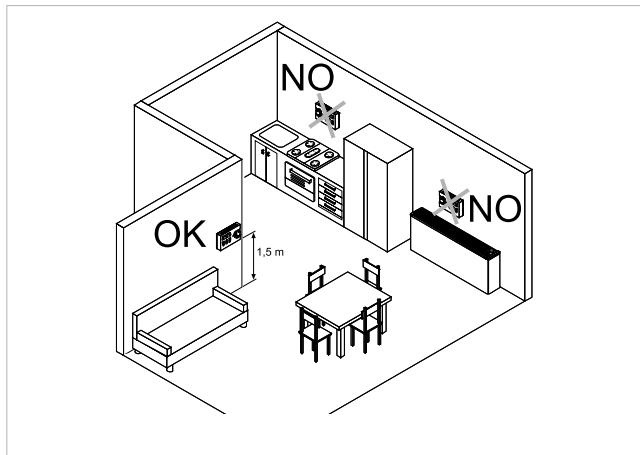

The wall control must be installed:

- on the outside walls
- at a height of approx. 1.5 m above the floor
- ⚠ If the control is located in an area used by people with reduced physical capabilities, refer to local regulations.
- away from doors and windows
- away from heat sources such as radiators, fan coils, cookers, direct sunlight
- ⚠ The wall control is supplied already assembled in the package.


- |    |                      |
|----|----------------------|
| 1. | Control base         |
| 2. | Wall control command |

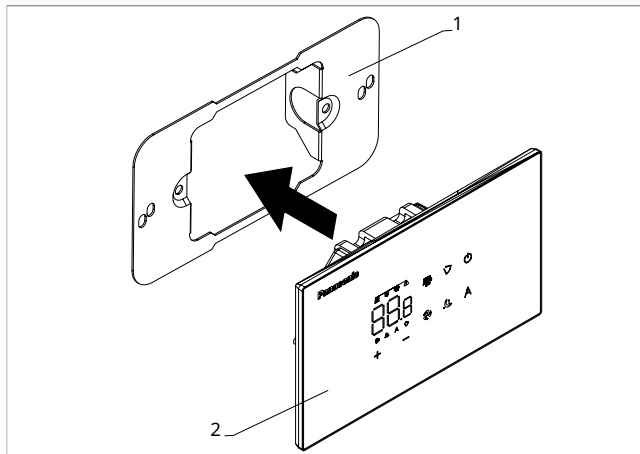

**Before mounting on the wall:**

- Separate the control base from the control panel

- |    |  |
|----|--|
| 1. | Fixing screws                          |
| 2. | Control base                           |
| 3. | Holes for fixing to the electrical box |
| 4. | Electrical box                         |

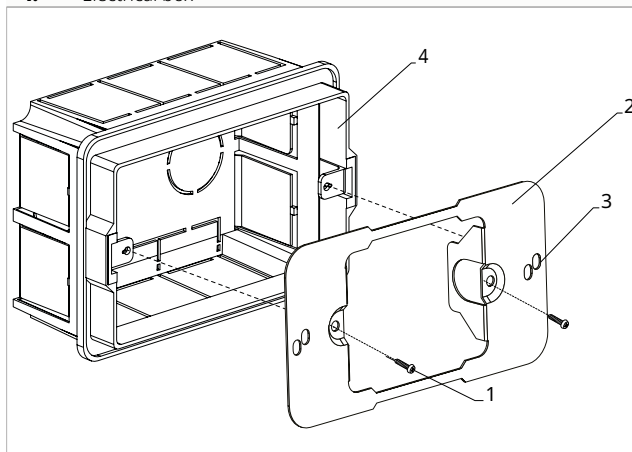


**For wall mounting of the control panel:**

- secure the control base to the electrical box with screws
- Make the connections

- ⚠ Before making the connections, check that the terminal block of the command is on the right side.
- ⚠ Several holes are present on the base of the control. The holes used depend on the model of the electrical box.


- |    |                      |
|----|----------------------|
| 1. | Electrical box       |
| 2. | Control base         |
| 3. | Wall control command |

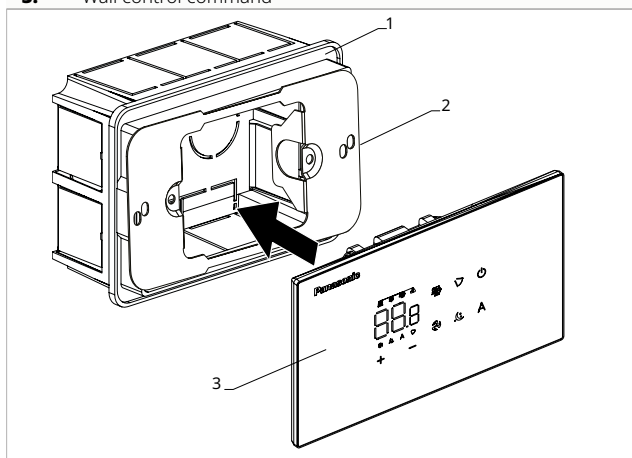

- close the control panel
- ⚠ Be careful not to crush the wires when closing the control.




### 4.3 Connection diagram

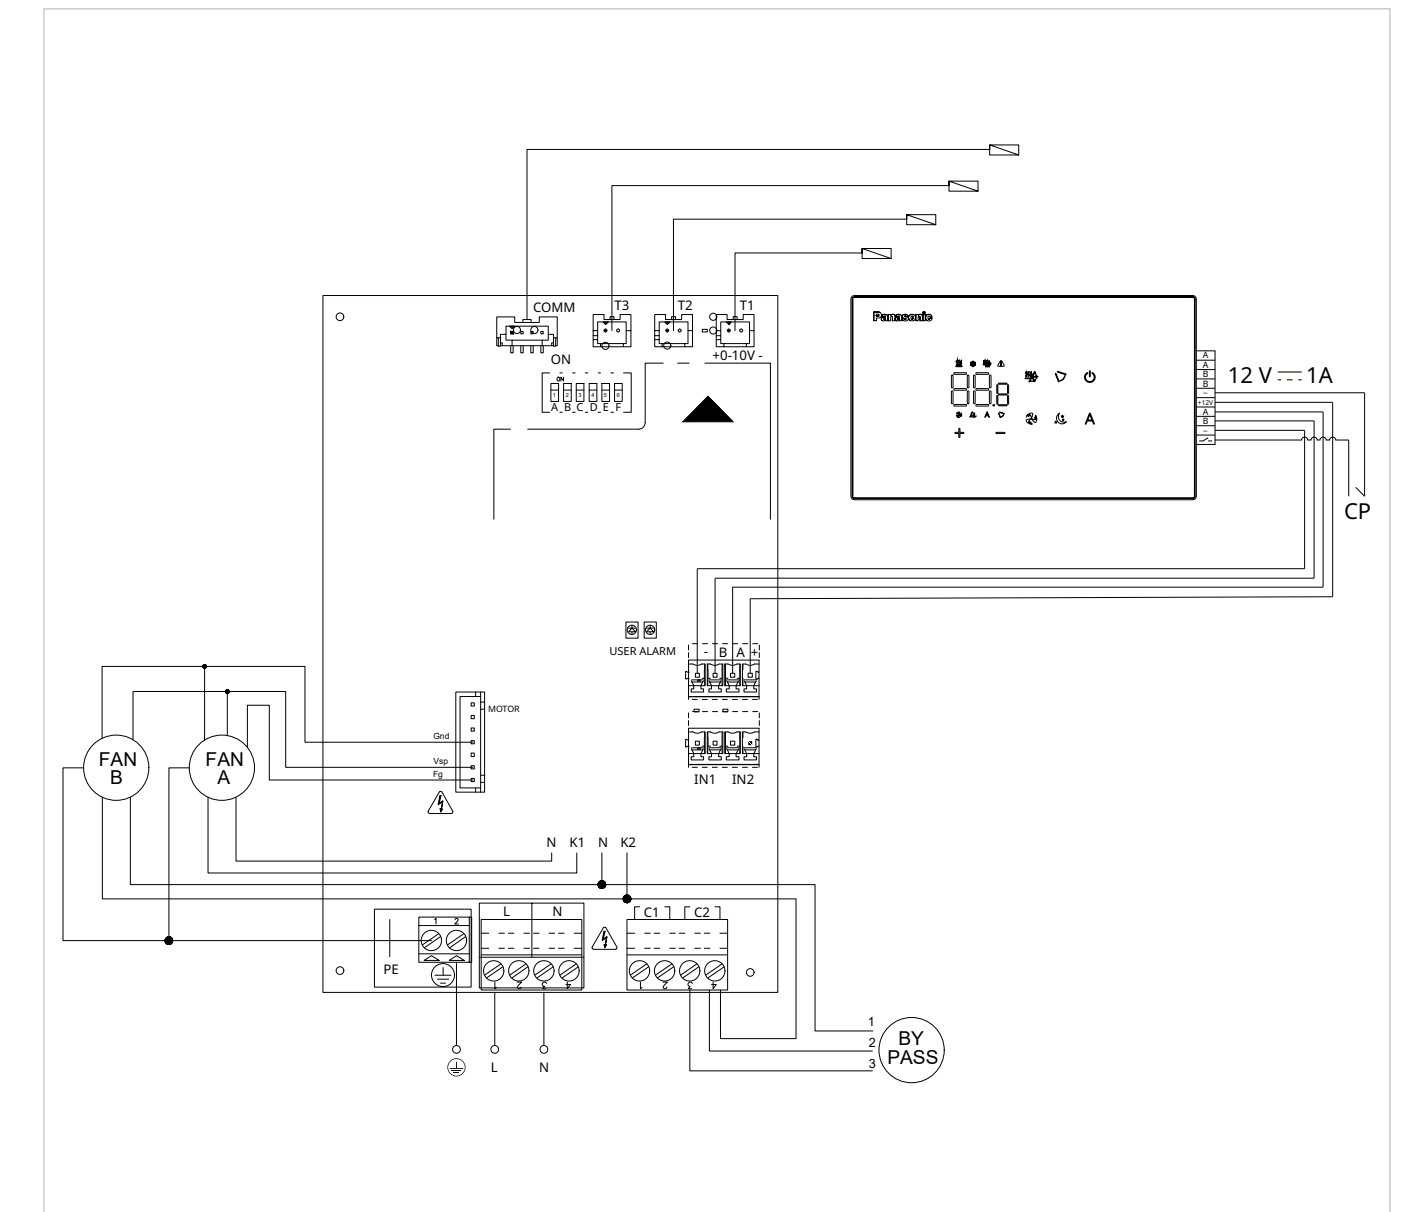

## 4.4 Connections


### Preliminary warnings

#### 1. Terminals

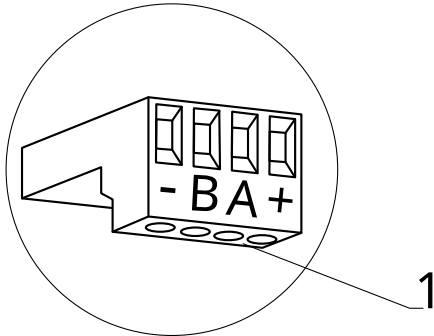

#### The terminals accept:

- rigid or flexible cables with a cross-section from 0.2 to 1 mm<sup>2</sup>
- rigid or flexible cables with a cross-section of 0.5 mm<sup>2</sup> if connecting two conductors in the same terminal
- rigid or flexible cables with a maximum cross-section of 0.75 mm<sup>2</sup> if equipped with a plastic collar ferrule

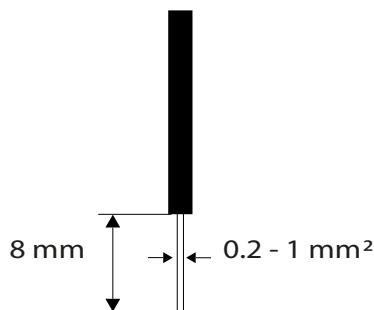

#### To connect the cables:


- ▶ strip 8 mm
- ▶ in the case of a rigid cable, insert it easily
- ▶ in the case of a flexible cable, use needle-nose pliers to assist
- ▶ push the cables in completely
- ▶ verify correct attachment by pulling them slightly

### Remote control


⚠ The wall control panel must be ordered separately.

#### Position of the terminal blocks:

#### 1. Terminal block (Panel rear view)

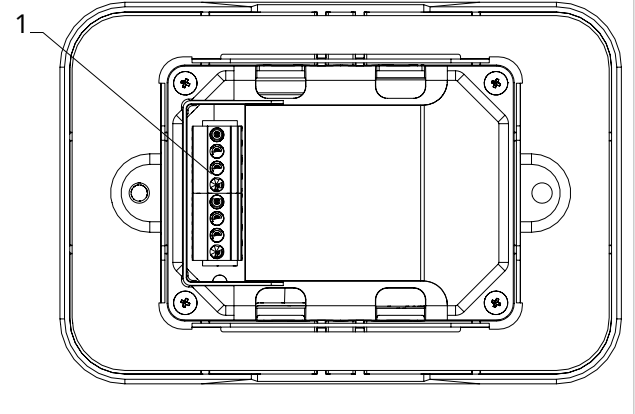

#### 1. Terminals

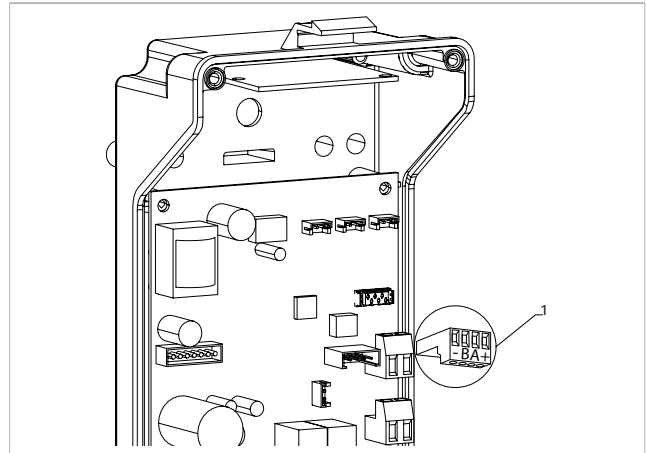

#### To make connections between the wall control panel and the board:

- ▶ connect the power cables to the + - terminals
- ▶ connect the ModBus serial connection cables to terminals A and B

### CP presence contact

Through this contact it is possible to connect an external device which inhibits the operation of the appliance, such as:

- window open contact
- remote on/off
- remote season change

#### Operation

*The contact is normally open. (NO)*

- ▶ when the CP contact, connected to a clean, non-live contact, is closed, the device goes into stand-by

*CP is displayed on the screen.*

- ▶ when a button is pressed, the symbol ⚠ flashes on the display

⚠ It is forbidden to connect the CP input in parallel with other electronic boards. Use separate contacts.

### RS485 serial connection

The wall remote control can be connected via an RS485 line.

The appliance must be equipped with an electronic board suitable for remote control.

For the connection:






- ▶ follow the connection diagram
- ▶ connect following the A and B indications

- ⚠ Use a shielded two-core cable suitable for serial RS485 connection with a minimum cross-section of 0.35 mm<sup>2</sup>.
- ⚠ Keep the bipolar cable at least 50 mm away from the power supply cables.
- ⚠ Route in such a way as to minimise the length of deviations.
- ⚠ Terminate the line with a 120 Ω resistor.
- ⊖ Star connections are prohibited.



## 4.5 Functions

### Basic menu


#### To access the basic menu

- ▶ From display off, hold the button  for 10 seconds  
*The device turns on and  appears*
- ▶ Hold until the indication  appears
- ▶ Release the button   
*The symbol  appears*


#### To navigate within the menu

- ▶ Use the icons  

#### To select menu items and confirm changes

- ▶ Press the icon   
*Confirming the change moves to the next item.*

#### To exit the menu

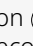- ▶ press the icon  for 10 seconds
- ▶ or wait 30 seconds for automatic shutdown

- ⚠ After a period of 30 seconds from the last action, the display turns off and the changes made are automatically saved.

### Menu items

**ot:** AIR sensor offset (air sensor adjustment)

**ur:** Value read by the U.R. sensor

**ut:** RH sensor offset

**uS:** Humidity setpoint

**uI:** Humidity hysteresis

**Aq:** IAQ enabling

**AI:** Value read by IAQ sensor

**AS:** IAQ setpoint

**Hi:** IAQ proportional band

**CF:** Scale






**ub:** Buzzer volume

**uu:** Not used

**uP:** Not used

### Set AIR sensor offset






#### To set the air sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.5.  
The setting range is from a minimum of -12.0 °C to a maximum of 12.0 °C.*

### Set RH sensor offset






- ⚠ Only change after finding actual deviations compared to a real measurement made with professional equipment.

#### To set the RH sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.  
The setting range goes from a minimum of -9 °C to a maximum of 9 °C.*






### Set humidity setpoint

#### To set the humidity setpoint

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to 50%.  
The setting range varies from 20.0% to 90.0%.*









### Set humidity hysteresis

#### To set the humidity hysteresis

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to 5.  
The setting range is from a minimum of 1 to a maximum of 30.*





## Enable and select IAQ

### To set the IAQ parameter detection mode

- ▶ select 
  - ▶ Press  to change settings
  - ▶ press  to navigate within the menu
  - ▶ Press  to confirm
- By default it is set to  select  to use the sensors built into the control panel to detect temperature, humidity, and IAQ.
- select  to use the remote sensor to detect temperature, humidity, and IAQ.
- select  to disable IAQ parameter reading; in this case, the T1 sensor on the electronic board is used as the room temperature reference.



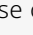

## Set the IAQ setpoint

### To set the IAQ setpoint

- ▶ select 
  - ▶ Press  to change settings
  - ▶ Increase or decrease the value with the icons 
  - ▶ Press  to confirm
- By default it is set to 3.0.
- The setting range goes from a minimum of 0.0 to a maximum of 5.0.




## Set the IAQ proportional band

### To set the IAQ proportional band

- ▶ select 
  - ▶ Press  to change settings
  - ▶ Increase or decrease the value with the icons 
  - ▶ Press  to confirm
- By default it is set to 1.0.
- The setting range goes from a minimum of 0.0 to a maximum of 5.0.



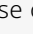

## Scale

### To change the temperature unit

- ▶ select 
  - ▶ Press  to change settings
  - ▶ Select °C or °F
  - ▶ Press  to confirm
- By default, the temperature unit is °C.

## Adjust volume

### To change the control volume


- ▶ select 
  - ▶ Press  to change settings
  - ▶ Increase or decrease the value with the icons 
  - ▶ Press  to confirm
- By default, the volume is set to 5.

⚠ The volume changes after confirming the modification.

## Error indication

The onboard card is equipped with LEDs which allow you to understand the operating status.

### 1. LED

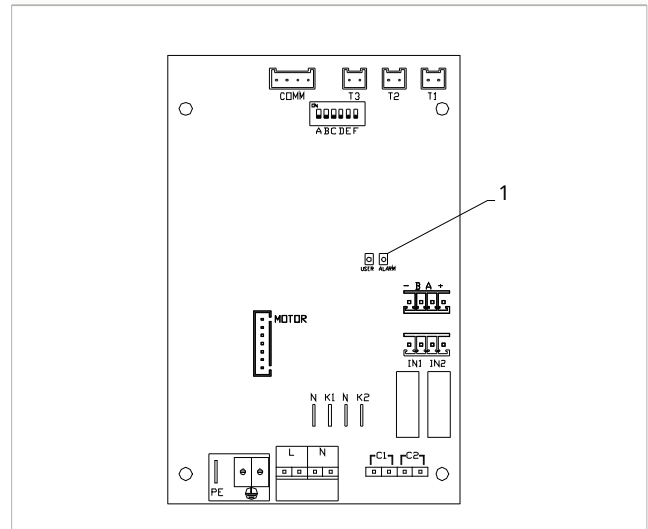

⚠ With the flashing LED, errors are indicated.


⚠ With the LED on, it indicates that there are no errors.

### LED indications

- ▶ Flashing LED  
Errors reported for display.
- ▶ LED off  
Wall controller off
- ▶ LED on  
Wall controller on and no alarms present.
- ▶ LED 2 flashes / pause  
Alarm: Internal fan motor failure or disconnected.
- ▶ LED 3 flashes / pause  
T2 temperature sensor alarm: water sensor disconnected or faulty.
- ▶ LED 6 flashes / pause  
Alarm: Communication error with wall control panel.


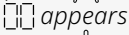

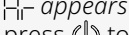

## Display alarms on the wall control panel

⚠ In case of an alarm, the appliance still maintains some active functions.

⚠ To indicate alarms on the control panel for wall control, the fixed symbol  is displayed.

⚠ To access the settings menu, you first need to access the basic menu. See paragraph "Basic menu" p. 31.

### To view errors on the wall control panel

- ▶ access the basic menu
  - ▶ press 
  - ▶  appears
  - ▶ press 
  - ▶  appears
  - ▶ press  to access the menu
- Subsequently, the number assigned to the fan coil appears and then the error is displayed.

### Displayed alarms


- ▶ E2 Internal fan motor fault or disconnected  
No device operation can be activated.
- ▶ E3 H2/T2 water temperature sensor disconnected or faulty  
No device operation can be activated.

- ▶ E6 Unsuitable water temperature with automatic season function setting  
*The fan coil performs heating and cooling functions incorrectly. No operation of the device is possible.*
- ▶ E8 Communication error  
*Communication error between the wall control panel and the fan coil.*
- ▶ h2o Unsuitable water temperature  
*In heating mode, the water temperature is below 30 °C.  
In cooling mode, the water temperature is above 20 °C.*

⚠ The E8 error is displayed without performing the error viewing procedure on the wall control panel.

## 5. WALL CONTROL COMMAND CODE PCZ-EFB749

### 5.1 Interface

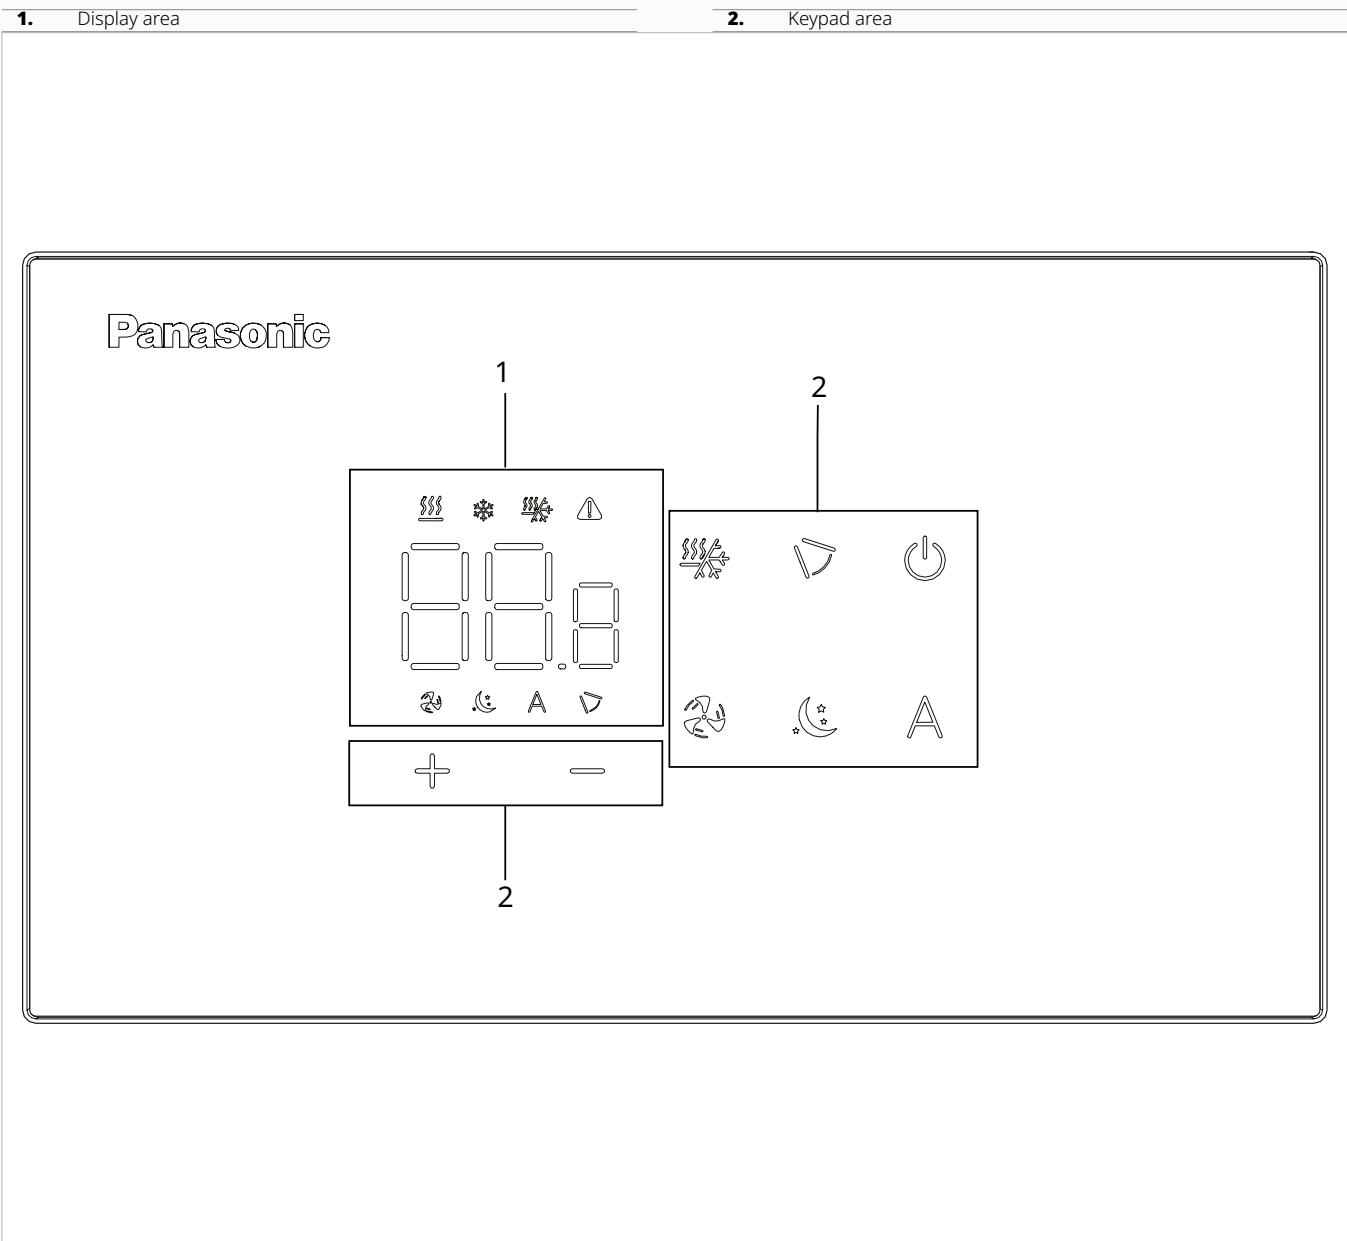

### 5.2 Installation


#### Description

The wall remote control is an electronic LED thermostat with a touch interface, capable of controlling multiple devices equipped with the same electronic board. It is equipped with a temperature and humidity sensor.

⚠ This control panel can be managed remotely through the Aquarea Home App.

## Mounting


- ⚠ The wall control panel must be installed inside an electrical box.
- ⚠ Before proceeding with the installation of the wall control command, the wall must be prepared to accommodate the electrical box.
- ⚠ Make sure that:
  - the wall supports the weight of the appliance
  - the section of wall does not contain pipes or electrical lines
  - the functionality of load-bearing elements is not compromised

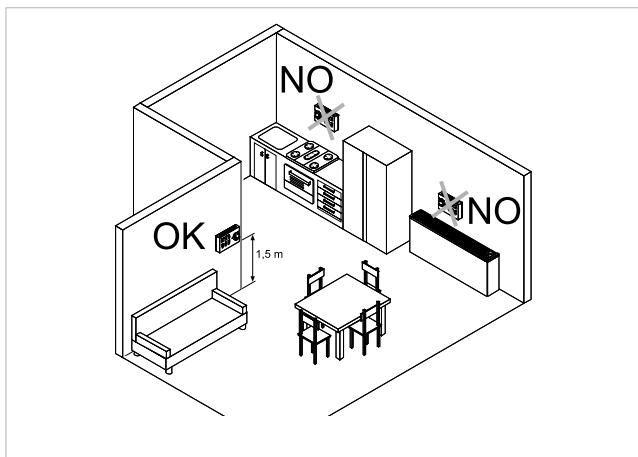

The wall control must be installed:

- on the outside walls
- at a height of approx. 1.5 m above the floor
- ⚠ If the control is located in an area used by people with reduced physical capabilities, refer to local regulations.
- away from doors and windows
- away from heat sources such as radiators, fan coils, cookers, direct sunlight
- ⚠ The wall control is supplied already assembled in the package.


- |    |                      |
|----|----------------------|
| 1. | Control base         |
| 2. | Wall control command |

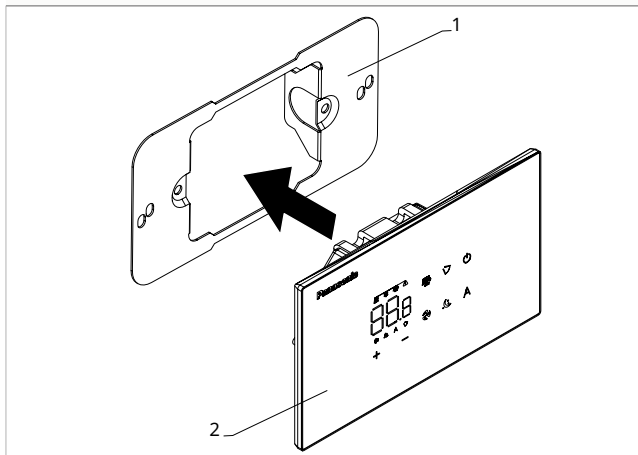

### Before mounting on the wall:

- Separate the control base from the control panel


- |    |  |
|----|--|
| 1. | Fixing screws                          |
| 2. | Control base                           |
| 3. | Holes for fixing to the electrical box |
| 4. | Electrical box                         |

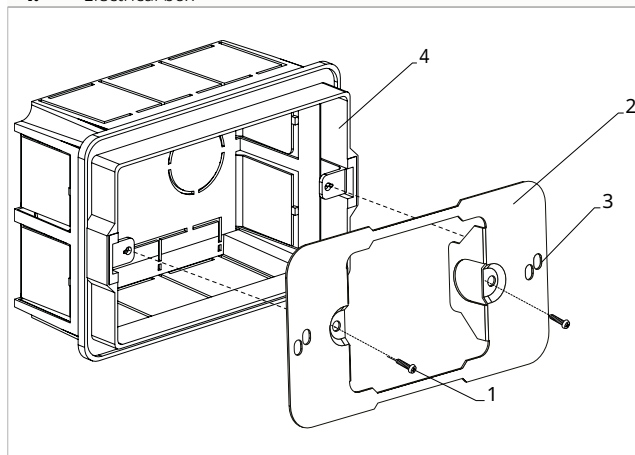

### For wall mounting of the control panel:


- secure the control base to the electrical box with screws
- Make the connections
- ⚠ Before making the connections, check that the terminal block of the command is on the right side.
- ⚠ Several holes are present on the base of the control. The holes used depend on the model of the electrical box.

- |    |                      |
|----|----------------------|
| 1. | Electrical box       |
| 2. | Control base         |
| 3. | Wall control command |

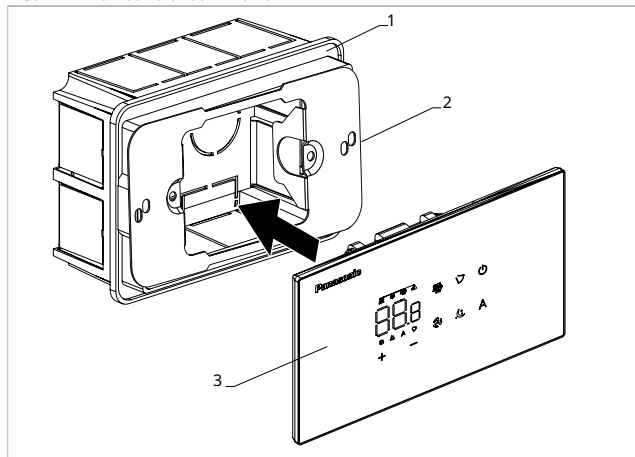

- close the control panel
- ⚠ Be careful not to crush the wires when closing the control.

### 5.3 Connection diagram

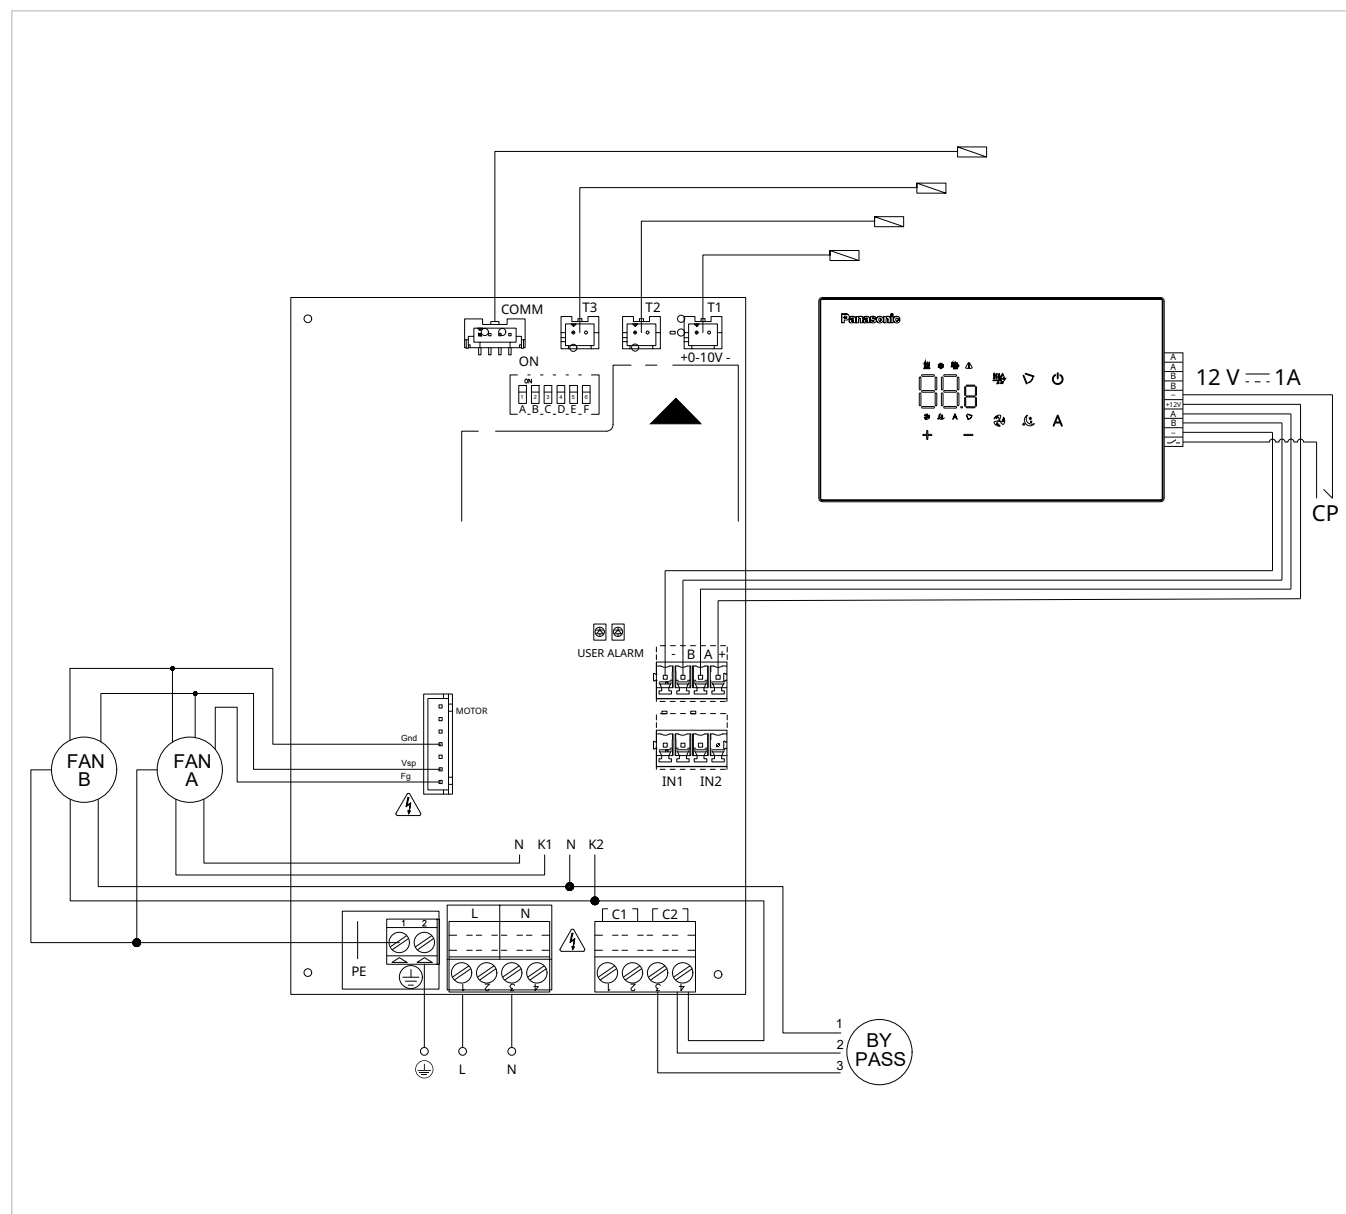




## 5.4 Connections


### Preliminary warnings

#### 1. Terminals

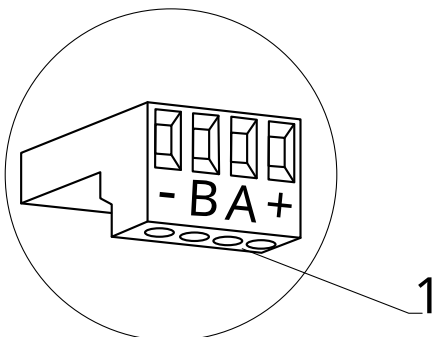

#### The terminals accept:

- rigid or flexible cables with a cross-section from 0.2 to 1 mm<sup>2</sup>
- rigid or flexible cables with a cross-section of 0.5 mm<sup>2</sup> if connecting two conductors in the same terminal
- rigid or flexible cables with a maximum cross-section of 0.75 mm<sup>2</sup> if equipped with a plastic collar ferrule

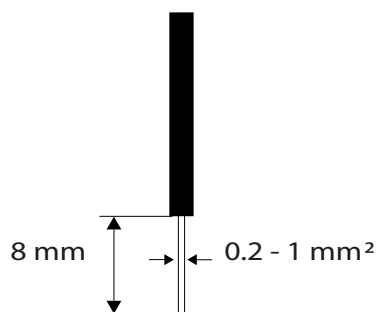

#### To connect the cables:


- ▶ strip 8 mm
- ▶ in the case of a rigid cable, insert it easily
- ▶ in the case of a flexible cable, use needle-nose pliers to assist
- ▶ push the cables in completely
- ▶ verify correct attachment by pulling them slightly

### Remote control


⚠ The wall control panel must be ordered separately.

#### Position of the terminal blocks:

#### 1. Terminal block (Panel rear view)

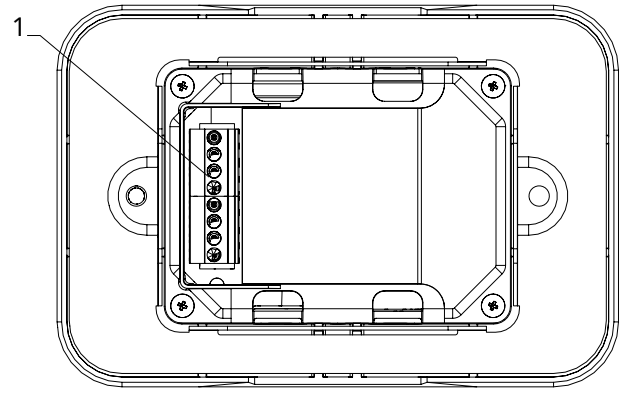

#### 1. Terminals

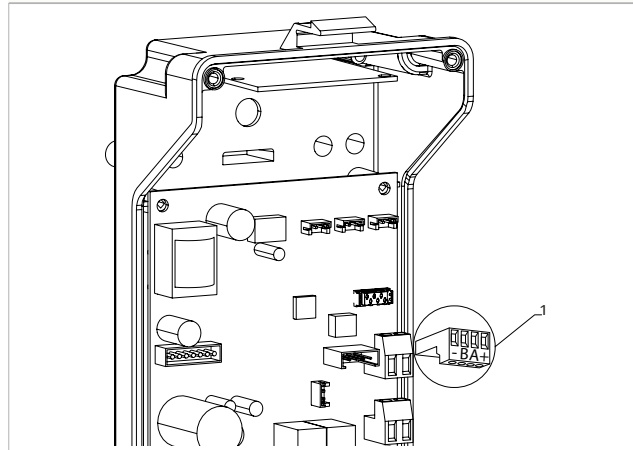

#### To make connections between the wall control panel and the board:

- ▶ connect the power cables to the + - terminals
- ▶ connect the ModBus serial connection cables to terminals A and B

### CP presence contact

Through this contact it is possible to connect an external device which inhibits the operation of the appliance, such as:

- window open contact
- remote on/off
- remote season change

#### Operation

*The contact is normally open. (NO)*

- ▶ when the CP contact, connected to a clean, non-live contact, is closed, the device goes into stand-by

*CP is displayed on the screen.*

- ▶ when a button is pressed, the symbol ⚠ flashes on the display

- ⊖ It is forbidden to connect the CP input in parallel with other electronic boards. Use separate contacts.

### RS485 serial connection

The wall remote control can be connected via an RS485 line.

The appliance must be equipped with an electronic board suitable for remote control.

For the connection:






- ▶ follow the connection diagram
- ▶ connect following the A and B indications

- ⚠ Use a shielded two-core cable suitable for serial RS485 connection with a minimum cross-section of 0.35 mm<sup>2</sup>.
- ⚠ Keep the bipolar cable at least 50 mm away from the power supply cables.
- ⚠ Route in such a way as to minimise the length of deviations.
- ⚠ Terminate the line with a 120 Ω resistor.
- ⊖ Star connections are prohibited.



## 5.5 Functions

### Basic menu


#### To access the basic menu

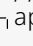- ▶ From display off, hold the button  for 10 seconds  
*The device turns on and  appears*
- ▶ Hold until the indication  appears
- ▶ Release the button   
*The symbol  appears*


#### To navigate within the menu

- ▶ Use the icons  

#### To select menu items and confirm changes

- ▶ Press the icon   
*Confirming the change moves to the next item.*

#### To exit the menu

- ▶ press the icon  for 10 seconds
- ▶ or wait 30 seconds for automatic shutdown

- ⚠ After a period of 30 seconds from the last action, the display turns off and the changes made are automatically saved.

### Menu items

**ot:** AIR sensor offset (air sensor adjustment)

**ur:** Value read by the U.R. sensor

**ut:** RH sensor offset

**uS:** Humidity setpoint

**uI:** Humidity hysteresis

**Aq:** IAQ enabling

**AI:** Value read by IAQ sensor

**AS:** IAQ setpoint

**Hi:** IAQ proportional band

**CF:** Scale






**ub:** Buzzer volume

**uu:** Reset Wi-Fi

**up:** Wi-Fi activation

### Set AIR sensor offset






#### To set the air sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.5.  
The setting range is from a minimum of -12.0 °C to a maximum of 12.0 °C.*

### Set RH sensor offset






- ⚠ Only change after finding actual deviations compared to a real measurement made with professional equipment.

#### To set the RH sensor adjustment

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
*By default it is set to -2.  
The setting range goes from a minimum of -9 °C to a maximum of 9 °C.*






## Set humidity setpoint

### To set the humidity setpoint

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
By default it is set to 50%.  
The setting range varies from 20.0% to 90.0%.



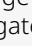

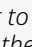



## Set humidity hysteresis

### To set the humidity hysteresis

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
By default it is set to 5.  
The setting range is from a minimum of 1 to a maximum of 30.






## Enable and select IAQ

### To set the IAQ parameter detection mode

- ▶ select 
- ▶ Press  to change settings
- ▶ press  to navigate within the menu
- ▶ Press  to confirm  
By default it is set to   
select  to use the sensors built into the control panel to detect temperature, humidity, and IAQ.  
select  to use the remote sensor to detect temperature, humidity, and IAQ.  
select  to disable IAQ parameter reading; in this case, the T1 sensor on the electronic board is used as the room temperature reference.






## Set the IAQ setpoint

### To set the IAQ setpoint

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
By default it is set to 3.0.  
The setting range goes from a minimum of 0.0 to a maximum of 5.0.




## Set the IAQ proportional band

### To set the IAQ proportional band

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
By default it is set to 1.0.  
The setting range goes from a minimum of 0.0 to a maximum of 5.0.






## Scale

### To change the temperature unit

- ▶ select 
- ▶ Press  to change settings
- ▶ Select °C or °F
- ▶ Press  to confirm  
By default, the temperature unit is °C.

## Adjust volume









### To change the control volume

- ▶ select 
- ▶ Press  to change settings
- ▶ Increase or decrease the value with the icons  
- ▶ Press  to confirm  
By default, the volume is set to 5.

⚠ The volume changes after confirming the modification.









## Reset Wi-Fi

### To reset Wi-Fi credentials and restore the device to its original configuration

- ▶ select 
- ▶ Press  to change settings
- ▶ use the icons  and  sequentially  
Appears 
- ▶ press   
 appears to reset Wi-Fi credentials.
- ▶ Press  to confirm  
The credentials have been reset.

## Activate Wi-Fi

### To activate Wi-Fi


- ▶ select 
- ▶ Press  to change settings
- ▶ use the icons  and  sequentially  
Appears 
- ▶ press   
 appears to enable Wi-Fi pairing.
- ▶ Press  to confirm

⚠ The device remains visible on the App for the first 15 minutes after turning on the appliance.

## Error indication

The onboard card is equipped with LEDs which allow you to understand the operating status.

### 1. LED

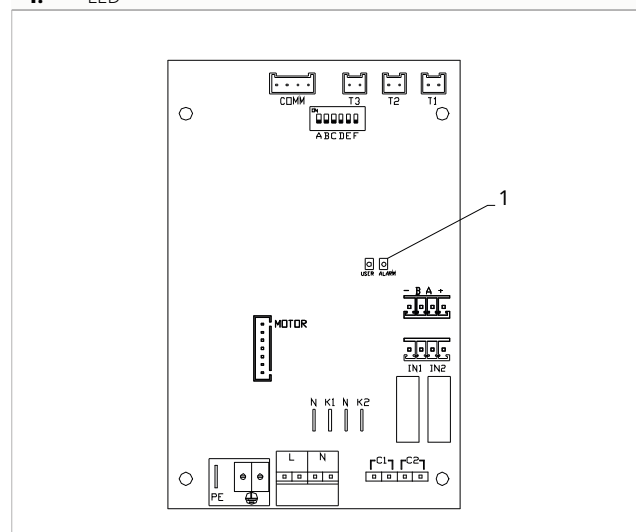


⚠ With the flashing LED, errors are indicated.

⚠ With the LED on, it indicates that there are no errors.






**LED indications**

- ▶ Flashing LED  
*Errors reported for display.*
- ▶ LED off  
*Wall controller off*
- ▶ LED on  
*Wall controller on and no alarms present.*
- ▶ LED 2 flashes / pause  
*Alarm: Internal fan motor failure or disconnected.*
- ▶ LED 3 flashes / pause  
*T2 temperature sensor alarm: water sensor disconnected or faulty.*
- ▶ LED 6 flashes / pause  
*Alarm: Communication error with wall control panel.*

**Display alarms on the wall control panel**

- ⚠ In case of an alarm, the appliance still maintains some active functions.
- ⚠ To indicate alarms on the control panel for wall control, the fixed symbol  is displayed.
- ⚠ **To access the settings menu, you first need to access the basic menu. See paragraph "Basic menu" p. 38.**

**To view errors on the wall control panel**

- ▶ access the basic menu
- ▶ press   
 appears
- ▶ press   
 appears
- ▶ press  to access the menu  
*Subsequently, the number assigned to the fan coil appears and then the error is displayed.*

**Displayed alarms**

- ▶ E2 Internal fan motor fault or disconnected  
*No device operation can be activated.*
  - ▶ E3 H2/T2 water temperature sensor disconnected or faulty  
*No device operation can be activated.*
  - ▶ E6 Unsuitable water temperature with automatic season function setting  
*The fan coil performs heating and cooling functions incorrectly. No operation of the device is possible.*
  - ▶ E8 Communication error  
*Communication error between the wall control panel and the fan coil.*
  - ▶ h2o Unsuitable water temperature  
*In heating mode, the water temperature is below 30 °C.  
In cooling mode, the water temperature is above 20 °C.*
- ⚠ The E8 error is displayed without performing the error viewing procedure on the wall control panel.

## 6. START-UP

### 6.1 Preliminary warnings

- ⚠ **This section is dedicated to the Authorised Service Centre. The specifications of the Authorised Service Centre are described in chapter "Recipients" p. 4.**
- ⚠ **Initial commissioning must be carried out by the Authorised Service Centre.**
- ⚠ **For detailed information on accessories, refer to the relevant instruction sheets.**

See chapter "Compatible accessories" p. 10

- ⚠ The customer must be present when the appliance is tested and informed of the contents of the manual and procedures. After commissioning, the manual and the warranty certificate must be handed over to the customer.
- ⚠ Before start-up, all works (electrical, hydraulic and air-flow connections) must have been completed.

### 6.2 First start-up

#### Preliminary Checks

Before commissioning, check that:

##### Operational checks

- all safety conditions have been met
- the unit has been properly secured to the supporting surface or wall
- the minimum technical spaces have been observed

##### Airflows

- the airflow connections have been made according to the instructions in the manual
- all airflow connections are correctly secured
- the ducting is correctly supported
- the ducting does not have any bottlenecks
- the ducting is thermally insulated

##### Electrical checks


- the cross-section of the power supply cables is adequate for the absorption of the appliance and the length of the connection made
- grounding is correctly performed
- the electrical connections have been established correctly
- all control wires are connected and that all electrical connections are secure

#### Settings

##### Microswitches

There are microswitches on the board for the various operating configurations of the unit. It is essential to set the microswitches correctly; the table shows the various operating modes.

- |    |               |
|----|---------------|
| 1. | Microswitch A |
| 2. | Microswitch B |
| 3. | Microswitch C |
| 4. | Microswitch D |
| 5. | Microswitch E |
| 6. | Microswitch F |

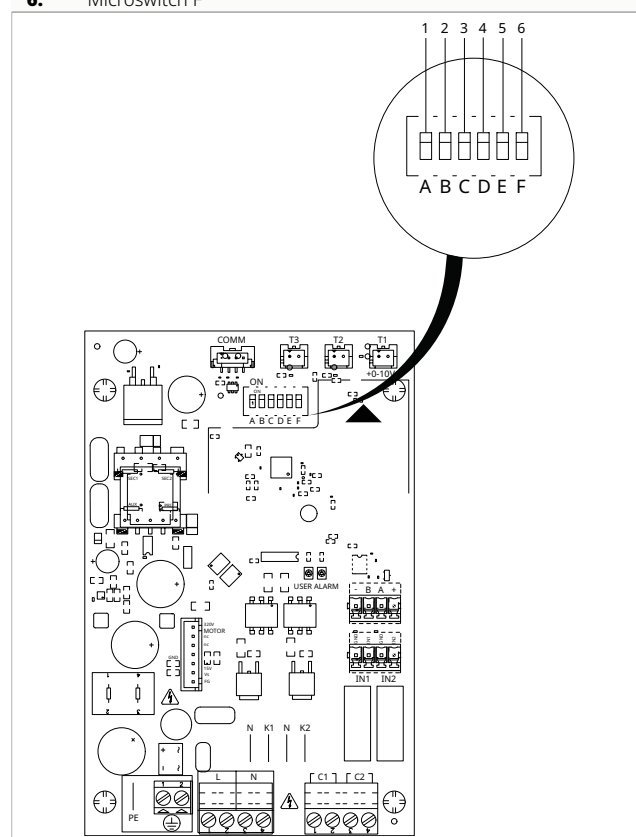

| MICROSWITCH FUNCTIONS |  |   |
|-----------------------|--|---|
| Microswitch A         | ON   | OFF   |
|                       | Preheating coil activation contact CHILLER   | Postheating coil activation contact CHILLER           |
| Microswitch B         | ON   | OFF   |
|                       | Enabling of unit with modulating coil control  | Disabling of unit with modulating coil control        |
| Microswitches C - D   | ON OFF   | OFF ON  |
|                       | Room humidity control  | Room air quality control                              |
|                       | ON ON  | OFF OFF   |
|                       | Humidity and room air quality control active. The maximum value of the two calculated values is used | Moisture and ambient air quality controls deactivated |
| Microswitch E         | ON   | OFF   |
|                       | Configuration B  | Configuration A (standard)                            |
| Microswitch F         | ON   | OFF   |
|                       | RTU  | ASCII (standard)                                      |

- ⚠ Microswitch A Management of pre-heating and post-heating batteries. Verify the connections.
- ⚠ Microswitch B The unit model is set to OFF by default. Do not change the setting to prevent the unit from malfunctioning.
- ⚠ Microswitches C - D The combination of these microswitches decides the operation of the humidity and air quality sensors.
- ⚠ Microswitch E The unit model is factory-set to OFF. If set to ON, please verify the connections and the application of label B.
- ⚠ Microswitch F The unit model is factory-set to OFF. If set to ON, the control panel will cease to respond.
- ❗ **In case of installation of the electric heating battery accessory, refer to the section "Accessories" p. 66 for the setting of the microswitches.**

### Start-up

After all checks have been carried out, the unit can be put into operation.

#### To activate the appliance:

- refer to the user manual

### Checks with the machine switched on

After starting up, check that

#### Operational checks:

- verify the different modes of operation
- verify that the appliance stops and then restarts

- switch the appliance off and on again and check that it restarts correctly
- the appliance operates within the recommended operating conditions (see technical specifications table)
- check that the air flow rates are correct
- verify that the unit's configuration complies with the site requirements

#### Hydraulic Checks

- check for proper condensate drainage

#### Electrical Checks

- the current absorbed is less than the maximum indicated in the technical data table
- the supply voltage value is within the set limits and does not fall below the nominal value -10 % during operation

### 6.3 Plant delivery

Once all the checks and controls on the correct operation of the plant have been completed, the installer must explain the following to the user:

- the basic functional characteristics of the appliance
- the instructions for use
- the routine maintenance

### 6.4 Switching off for extended periods

If the appliance is not used for a long period of time, the following steps must be taken:

► deactivating the device

► isolate the power supply

⚠ To restart the appliance after it has been out of use for a long period, call in the Authorised Service Centre.

## 7. MAINTENANCE

### 7.1 Routine maintenance

#### Annual operations

The once-a-year maintenance plan includes the following operations and checks and must be carried out by the Authorised Service Centre or by qualified personnel.

#### Electrical circuit

Check:

- electrical supply voltage
- the electrical absorption
- tightening connections
- that there is no damage or excessive wear to electrical cables
- that the gaskets and sealing materials have not deteriorated to such an extent that they are no longer suitable for the purpose of preventing the development of flammable atmospheres inside
- the correct fixing of cable glands
- safety devices

#### Mechanical checks

Check:

- tightening of the screws, fans and electrical box, of the unit's external panelling
- the state of the structure
- ⚠ Bad fixings result in abnormal noise and vibration.
- ⚠ If oxidised parts are present, treat them with suitable paints to eliminate or reduce oxidation.

#### Hydraulic controls

Check:

- the regular drainage of condensate
- cleaning the condensate collection trays
- cleaning the exhaust ducts

#### Airflow controls

Check:

- the regular flow of air
- cleaning of any intake grilles
- cleaning the ducting


#### Cleaning

- cleaning of aesthetic cover
- cleaning or filter replacement
- cleaning the heat exchanger

#### Cleaning or filter replacement


##### Horizontal installation

1. Filter
2. Filter access hatch

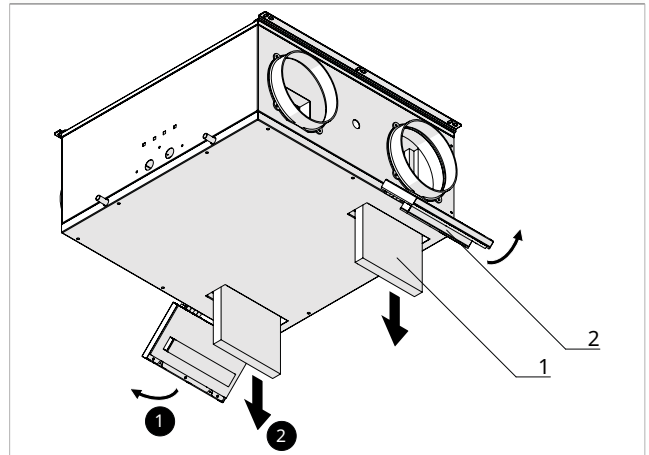

##### Vertical installation

1. Filter
2. Filter access hatch

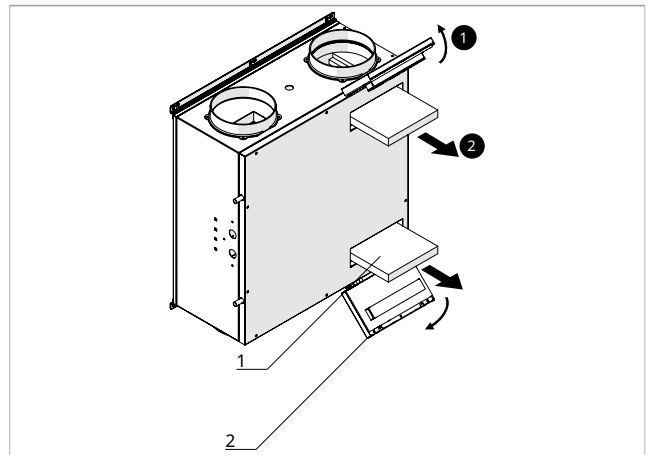

#### To remove:

- isolate the power supply to the unit
- open the filter access hatch
- take out the filter

⚠ Pay attention to sharp surfaces

ⓘ If the condition of the filters is acceptable, they can be cleaned using a vacuum cleaner or a low-pressure compressor.

ⓘ If it is impossible to clean them, the filters must be replaced.

#### To reposition:



- ▶ perform in reverse order


- ① To prevent dirt from entering the heat exchanger, clean in the opposite direction to the air flow.

## Cleaning the heat exchanger

### Cleaning the heat exchanger


#### Horizontal installation

1. Heat exchanger
2. Pack retainer
3. Lower panel

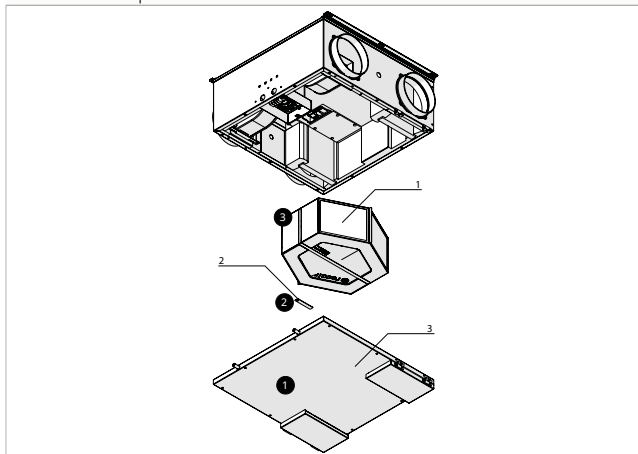

#### Vertical installation

1. Heat exchanger
2. Pack retainer
3. Lower panel

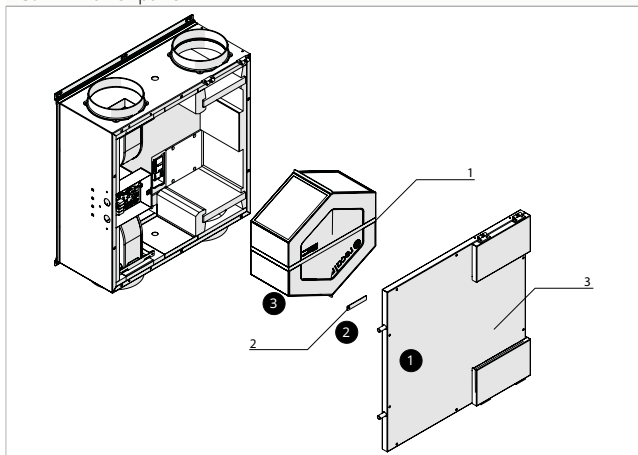

- ▶ isolate the power supply to the unit
- ▶ disconnect the condensate drain pipe
- ▶ remove the lower panel of the unit by releasing the fixing hooks and removing the screws
- ▶ extract the heat exchanger
- ▶ gently proceed with cleaning using a vacuum cleaner or a low-pressure compressor
- ▶ reposition the heat exchanger
- ▶ reposition the lower panel by locking it with the fixing hooks and inserting the screws
- ⚠ Never touch the fins of the heat exchanger, handle only the closed sides.
- ① **There is a special clamp/green strap for removing the heat exchanger.**

## 8. FAULTS AND REMEDIES

### 8.1 Preliminary warnings

If one of the following faults is found:

- ventilation does not activate
- the appliance makes excessive noise
- there is dew formation on the front panel

Follow the instructions below:

- ▶ immediately isolate the power supply
- ▶ contact an Authorised Service Centre or professionally qualified personnel
- ⚠ The intervention must be carried out by a qualified installer or an Authorised Service Centre.
- ⊘ Personal intervention is prohibited.

### 8.2 Troubleshooting table

| DESCRIPTION OF FAULT                   | CAUSE   | REMEDY   |
|--|---|--|
| The fans are not active                | The power supply is not switched on           | Check the fan power supply   |
|  | The fan speed regulation device does not work | Check fan speed regulation device  |
|  | Incorrect electrical connections              | Check electrical connections.  |
|  | Fans in thermal protection                    | Check that the fan has not overheated and switched to thermal protection |
| Insufficient air flow or pressure      | Clogged filters                               | Clean filters  |
|  | Insufficient rotation speed                   | Increase rotation speed  |
|  | Ducting or exchanger clogged                  | Clean ducting or heat exchanger  |
| Insufficient heat exchanger efficiency | Exchanger fins clogged                        | Clean exchanger surfaces   |
| Excessive vibration and noise          | Incorrect installation of the unit            | Check unit brackets and fastenings                                       |
|  | Incorrect ducting installation                | Check brackets and duct fixings  |
|  | Fan impeller imbalance                        | Check fan impeller condition   |
| Water leaks from unit                  | Clogged condensate drain                      | Clean condensate drain   |
|  | Siphon not installed correctly                | Check the correct installation of the siphon                             |
| Difficult start-up                     | Supply voltage too low                        | Check that the supply voltage is not below 10% of the rated voltage      |

### 8.3 Alarm table and card flashes

| DESCRIPTION OF ALARM                             | CAUSE   | REMEDY   | CARD FLASHES              |
|--|---|--|---------------------------|
| Recovery ambient probe / External air alarm - T1 | Sensor breakage or failure to read                                  | Check probe connection or replace sensor   | 1 flash - off 3 seconds   |
| Fan alarm  | Fan connector faulty or feedback signal absent                      | Check the connection of the fan connector to the board<br>Replace fan control cable<br>Filters alarm counter reached<br>Replace filters and reset  | 2 flashes - off 3 seconds |
| Filters alarm                                    | counter reached   | Replace filters and reset  |                           |
| Expulsion / intake probe alarm - T2              | Sensor breakage or failure to read                                  | Check probe connection or replace sensor   | 3 flashes - off 3 seconds |
| Outdoor air / extracted air probe alarm - T3     | Sensor breakage or failure to read                                  | Check probe connection or replace sensor   | 5 flashes - off 3 seconds |
| Remote display connection alarm                  | Remote display connection error                                     | Check electrical connections.<br>Check that A and B are not reversed<br>Check the correct insertion of the display connection board on the main board  | LED off                   |
| Remote display communication alarm               | No communication between display and board for at least 300 seconds | Check the filter status and press and hold the On - Off button to reset the signalling<br>Check that A and B are not reversed<br>Check the correct insertion of the display connection board on the main board | 6 flashes - off 3 seconds |

## 9. TECHNICAL INFORMATION

### 9.1 Technical data

| Models   | u.m.        | 15Z   | 20Z       | 30Z       |
|--|-------------|---|-----------|-----------|
| VMC airflow performance  |             |   |           |           |
| Air flow (nominal/maximum)   | m³/h        | 91 / 130  | 140 / 200 | 224 / 320 |
| Static pressure (nominal/max-<br>imum)   | Pa          | 50 / 100  | 50 / 100  | 50 / 100  |
| Heat recovery performance (A 7; A 20) (1)  |             |   |           |           |
| Sensible recovery efficiency   | %           | 87,0  | 87,0      | 85,0      |
| Room side fan  |             |   |           |           |
| Type   |             | Centrifugal - directly coupled electronic motor |           |           |
| Number   | No.         | 1   | 1         | 1         |
| Outdoor side fan   |             |   |           |           |
| Type   |             | Centrifugal - directly coupled electronic motor |           |           |
| Number   | No.         | 1   | 1         | 1         |
| Heat exchanger   |             |   |           |           |
| Type   |             | Polypropylene countercurrent plates             |           |           |
| Number   | No.         | 1   | 1         | 1         |
| Fresh air filter   |             |   |           |           |
| Type   |             | Pleated flat filter                             |           |           |
| Number   | No.         | 1   | 1         | 1         |
| Efficiency   |             | ePM1 80%  |           |           |
| Extract air filter   |             |   |           |           |
| Type   |             | Pleated flat filter                             |           |           |
| Number   | No.         | 1   | 1         | 1         |
| Efficiency   |             | ePM1 80%  |           |           |
| Room side sound levels (UNI EN 3741; 3744) (2)   |             |   |           |           |
| Sound power transmitted to the<br>Lw structure   | dB (A)      | 48,0  | 48,0      | 52,0      |
| Sound power radiated in the Lw<br>channel  | dB (A)      | 55,0  | 55,0      | 60,0      |
| Average sound pressure at 1<br>m Lp  | dB(A)       | 41,0  | 41,0      | 45,0      |
| Average sound pressure at 3<br>m Lp  | dB(A)       | 34,0  | 34,0      | 38,0      |
| Electrical characteristics   |             |   |           |           |
| Power supply   | V / ph / Hz | 230 / 1 / 50                                    |           |           |
| Maximum total absorbed power   | W           | 80,00   | 120,00    | 180,00    |
| Maximum total absorbed<br>current  | A           | 1,20  | 2,20      | 2,20      |
| Protection rating  | IP          | X2  |           |           |
| 1. Efficiency according to UNI EN 13141-7 Outdoor temperature 7 °C - Outdoor humidity 72 % - Indoor temperature 20 °C - Indoor humidity 28 %.<br>2. Data refers to the UNI EN 3741 and UNI EN 3744 standards |             |   |           |           |

| Models   |  | u.m. | 15Z     | 20Z     | 30Z     |
|--|--|------|---------|---------|---------|
| <b>Product dimensions</b>  |  |      |         |         |         |
| Width  |  | mm   | 580     | 580     | 580     |
| Length   |  | mm   | 580     | 580     | 580     |
| Height   |  | mm   | 276     | 315     | 315     |
| Weight   |  | kg   | 19,0    | 21,0    | 21,0    |
| <b>Connections</b>   |  |      |         |         |         |
| Condensate drain connection  |  | mm   | 12 / 20 | 12 / 20 | 12 / 20 |
| Room side air connection   |  | mm   | 160     | 160     | 160     |
| Outdoor side air connection  |  | mm   | 160     | 160     | 160     |
| 1. Efficiency according to UNI EN 13141-7 Outdoor temperature 7 °C - Outdoor humidity 72 % - Indoor temperature 20 °C - Indoor humidity 28 %.<br>2. Data refers to the UNI EN 3741 and UNI EN 3744 standards |  |      |         |         |         |


9.2 Performance curves

Size 15

Sensible version

|    |                           |
|----|---------------------------|
| A  | Available pressure        |
| B  | Air flow                  |
| 1. | Minimum ventilation speed |
| 2. | Rated ventilation speed   |


|      |                             |
|------|-----------------------------|
| 3.   | Maximum ventilation speed   |
| PIN: | Power input W               |
| SPI: | Specific power input W/m³/h |

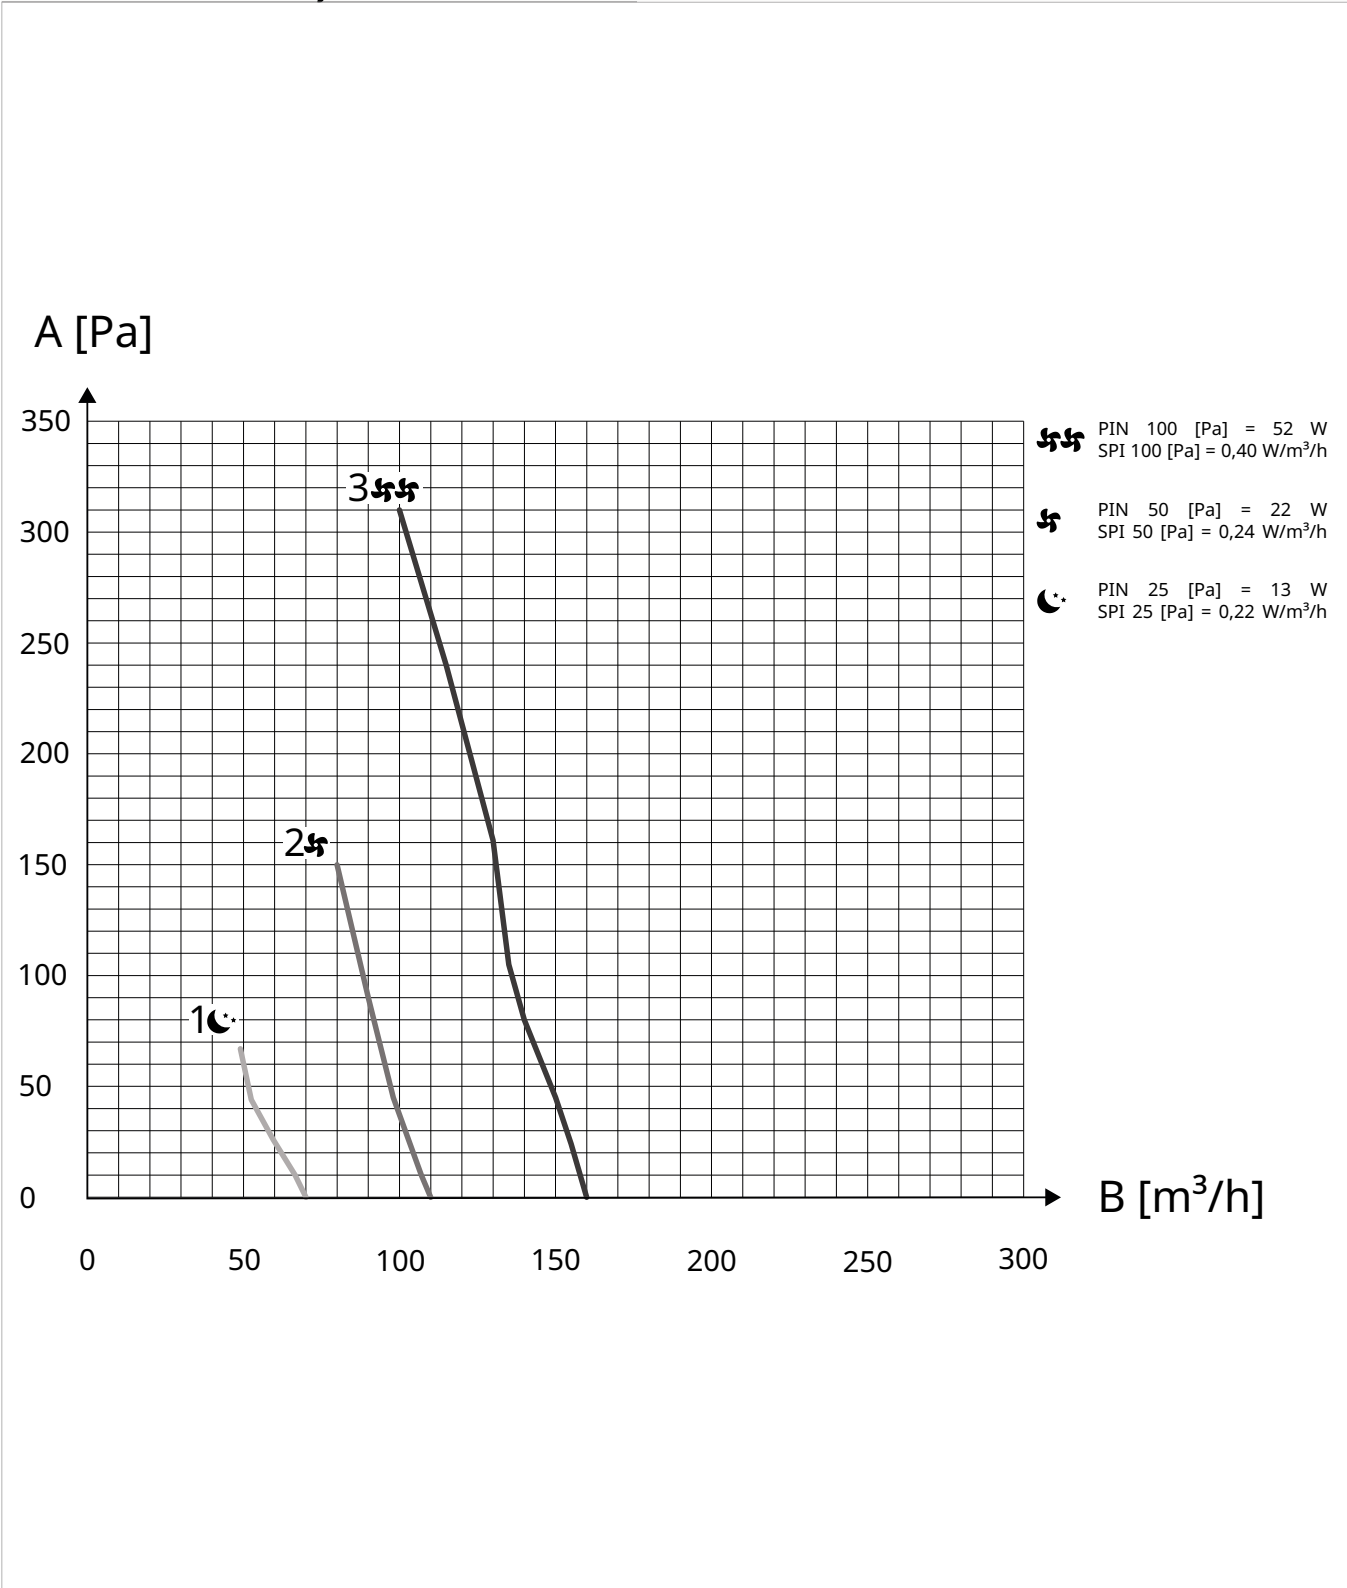

Size 20

Sensible version


|           |                           |    |             |                           |        |
|-----------|---------------------------|----|-------------|---------------------------|--------|
| <b>A</b>  | Available pressure        |    | <b>3.</b>   | Maximum ventilation speed | 三三     |
| <b>B</b>  | Air flow                  |    | <b>PIN:</b> | Power input               | W      |
| <b>1.</b> | Minimum ventilation speed | 一  | <b>SPI:</b> | Specific power input      | W/m³/h |
| <b>2.</b> | Rated ventilation speed   | 二三 |             |                           |        |

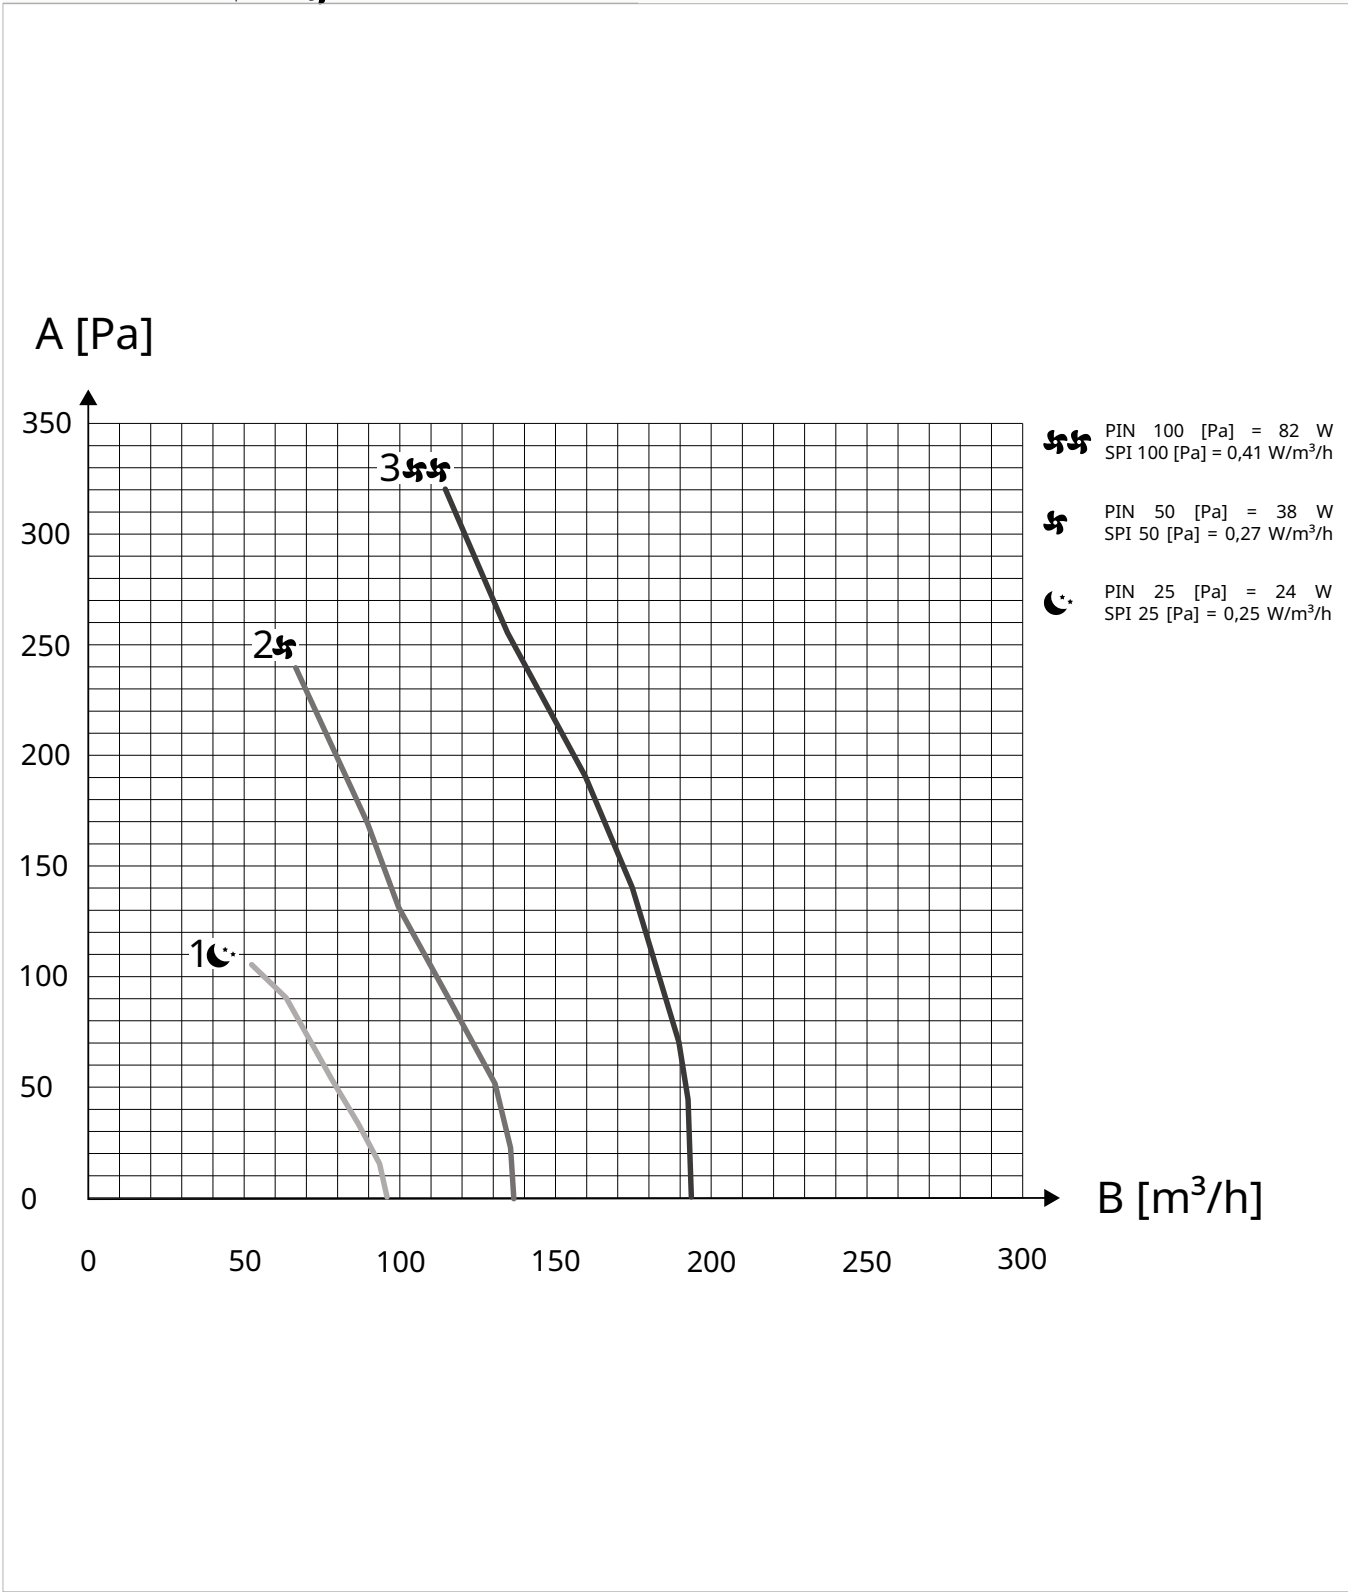

Size 30

Sensible version

|           |                           |   |             |                           |        |
|-----------|---------------------------|---|-------------|---------------------------|--------|
| <b>A</b>  | Available pressure        |   | <b>3.</b>   | Maximum ventilation speed | ☼☼     |
| <b>B</b>  | Air flow                  |   | <b>PIN:</b> | Power input               | W      |
| <b>1.</b> | Minimum ventilation speed | ☾ | <b>SPI:</b> | Specific power input      | W/m³/h |
| <b>2.</b> | Rated ventilation speed   | ☼ |             |                           |        |

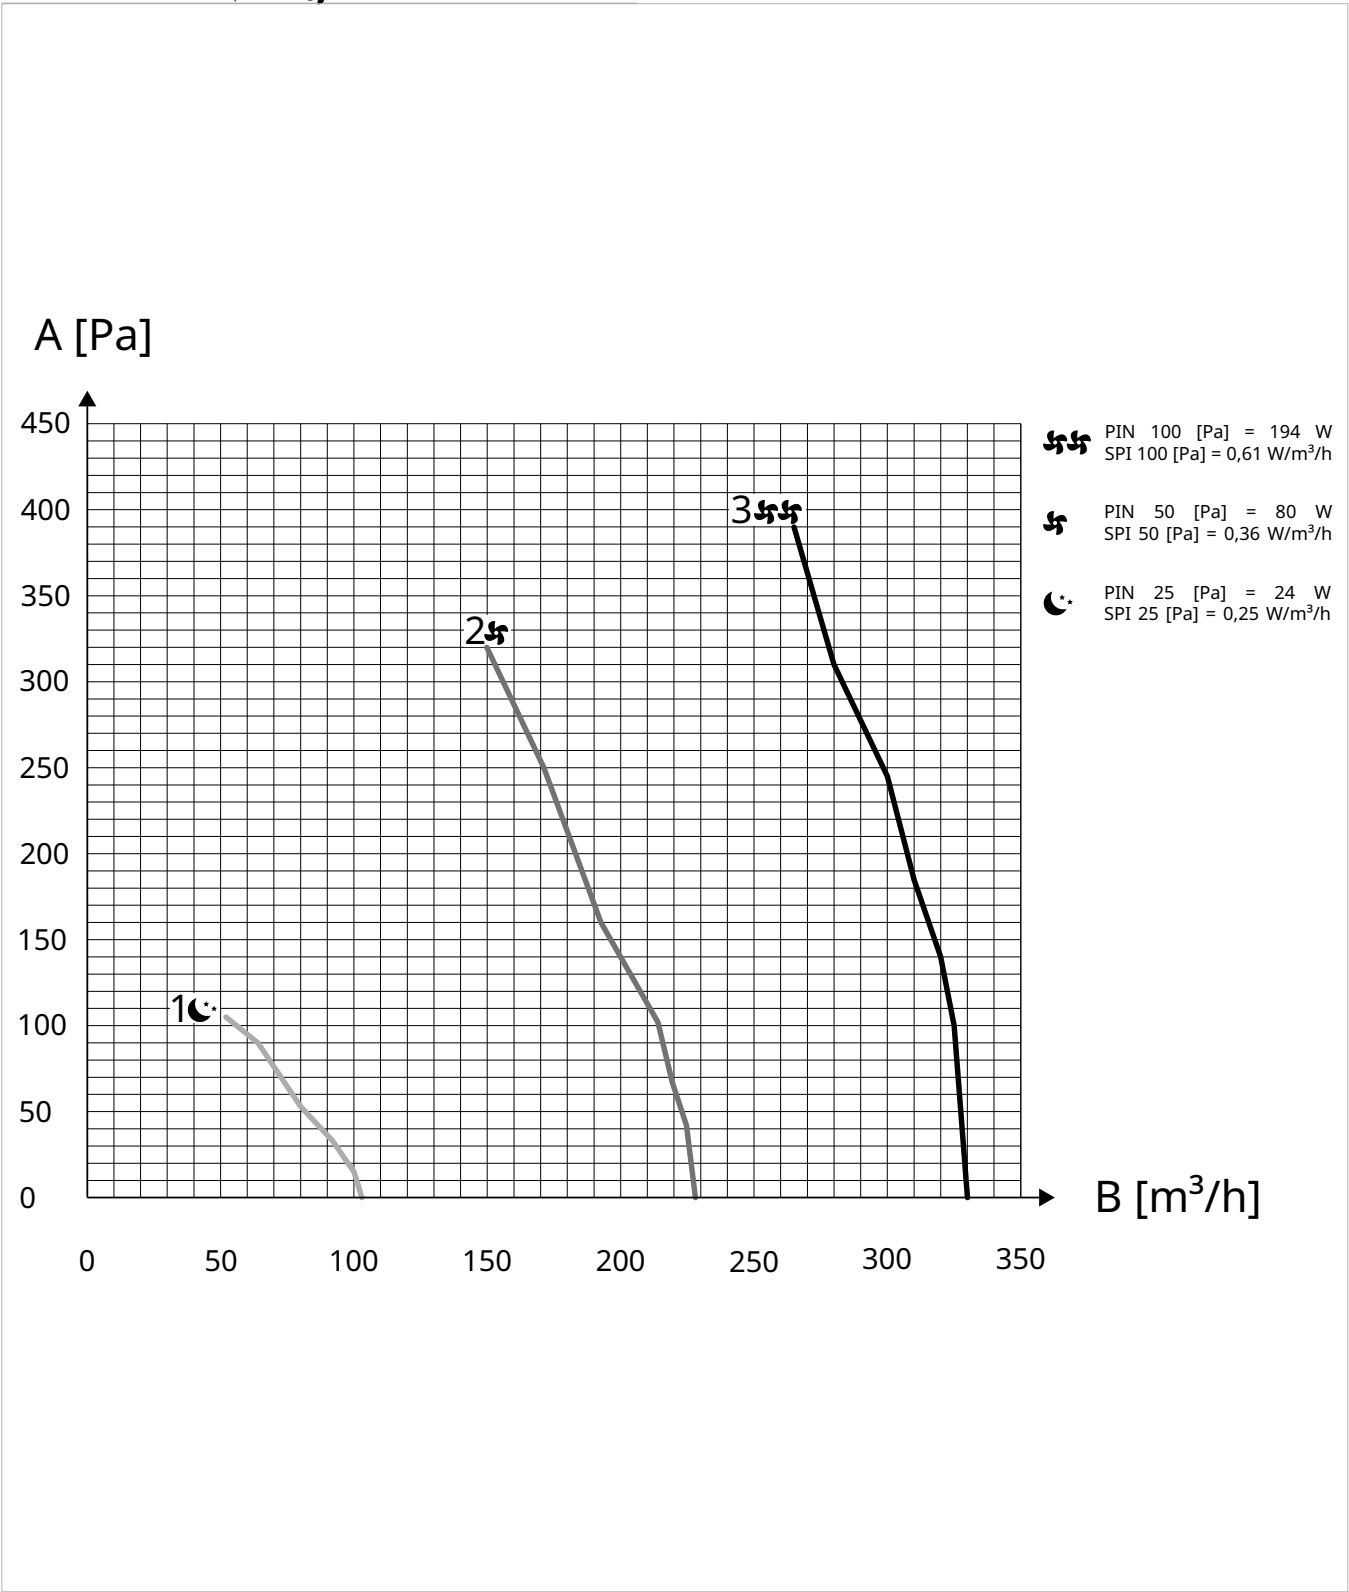




9.3 Heat recovery

Size 15


Sensible version winter heat recovery

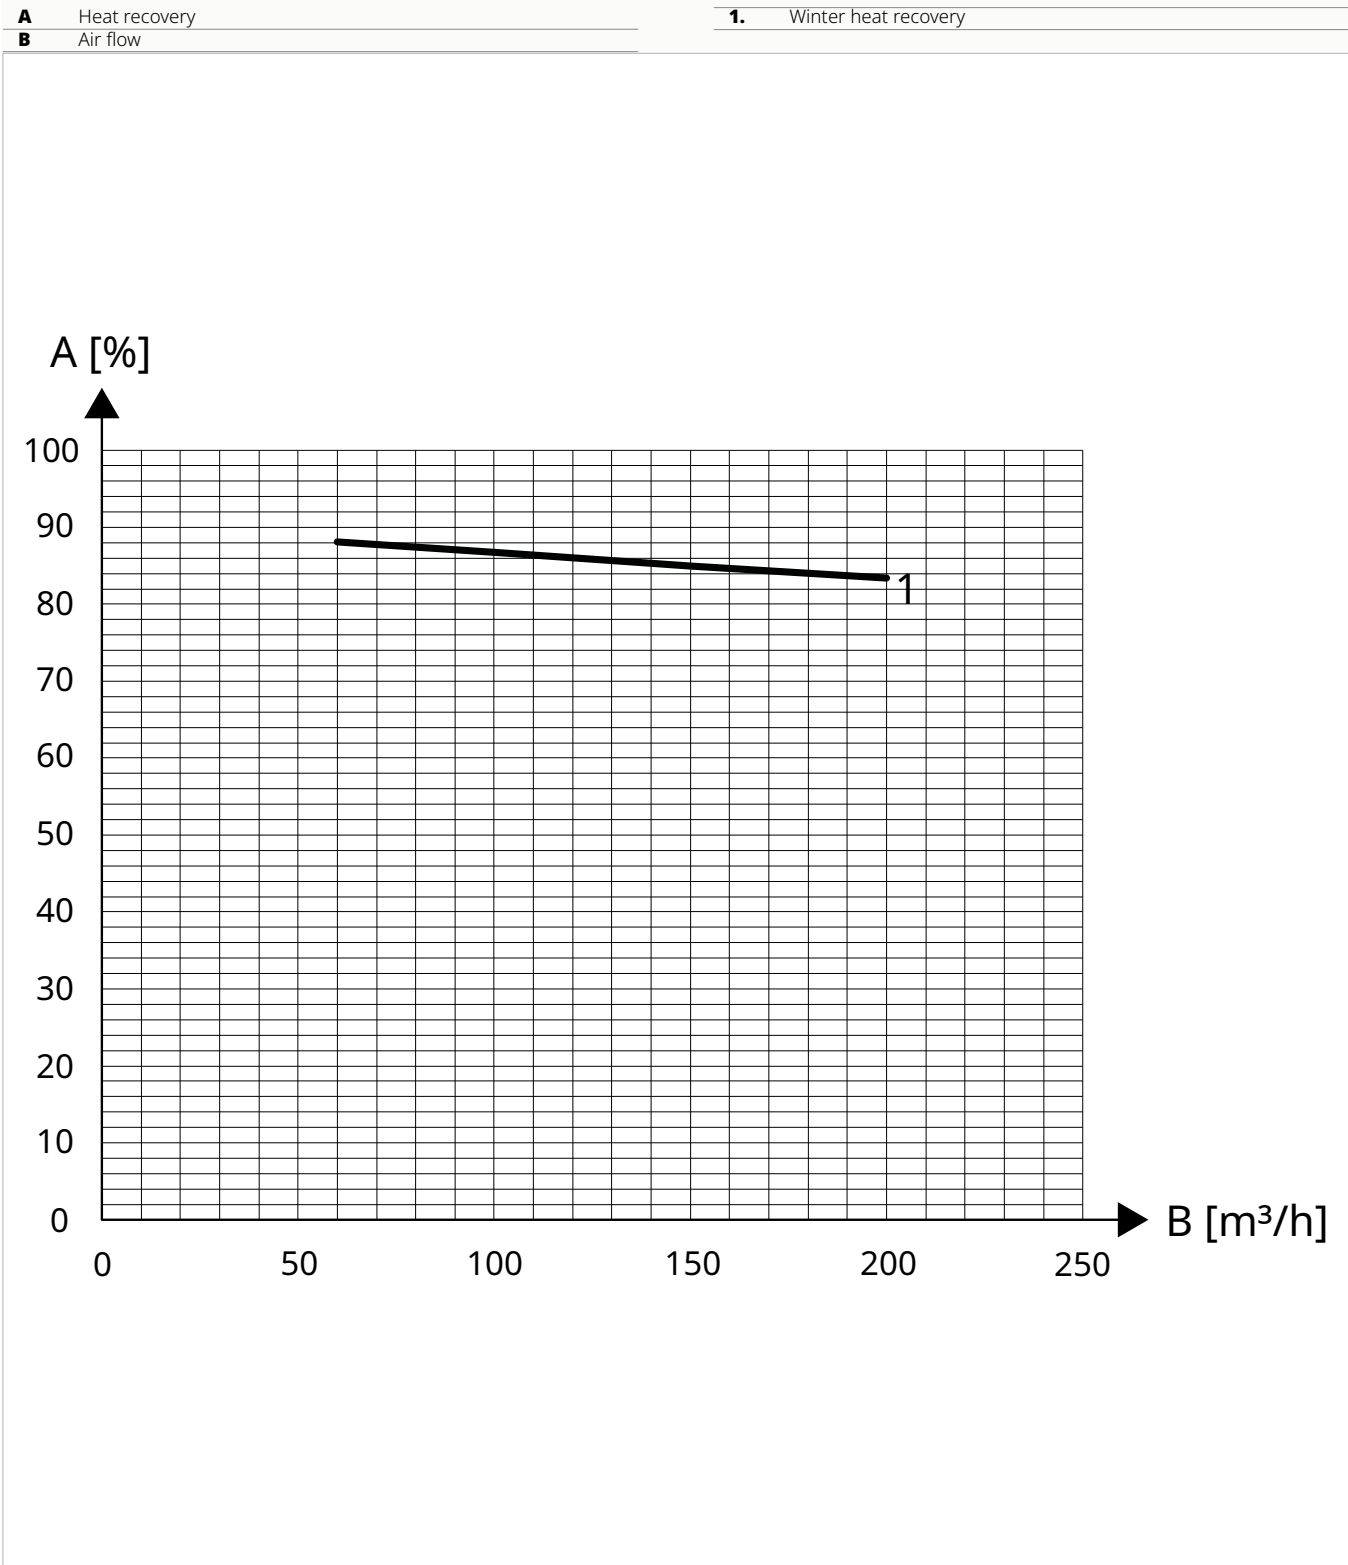

**Sensible version summer heat recovery**


**A** Heat recovery  
**B** Air flow

**1.** Summer heat recovery

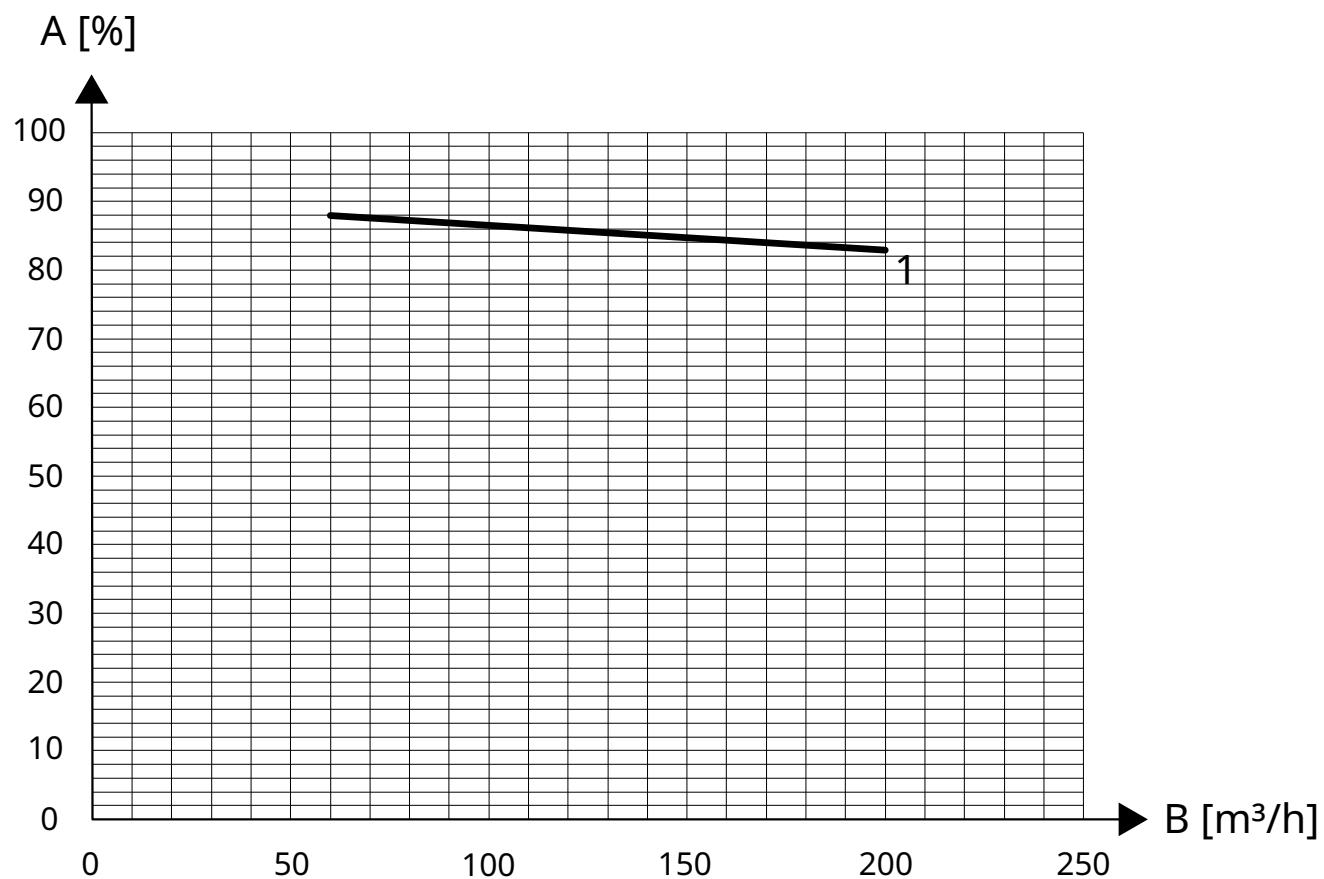

**Size 20**


**Winter heat recovery**

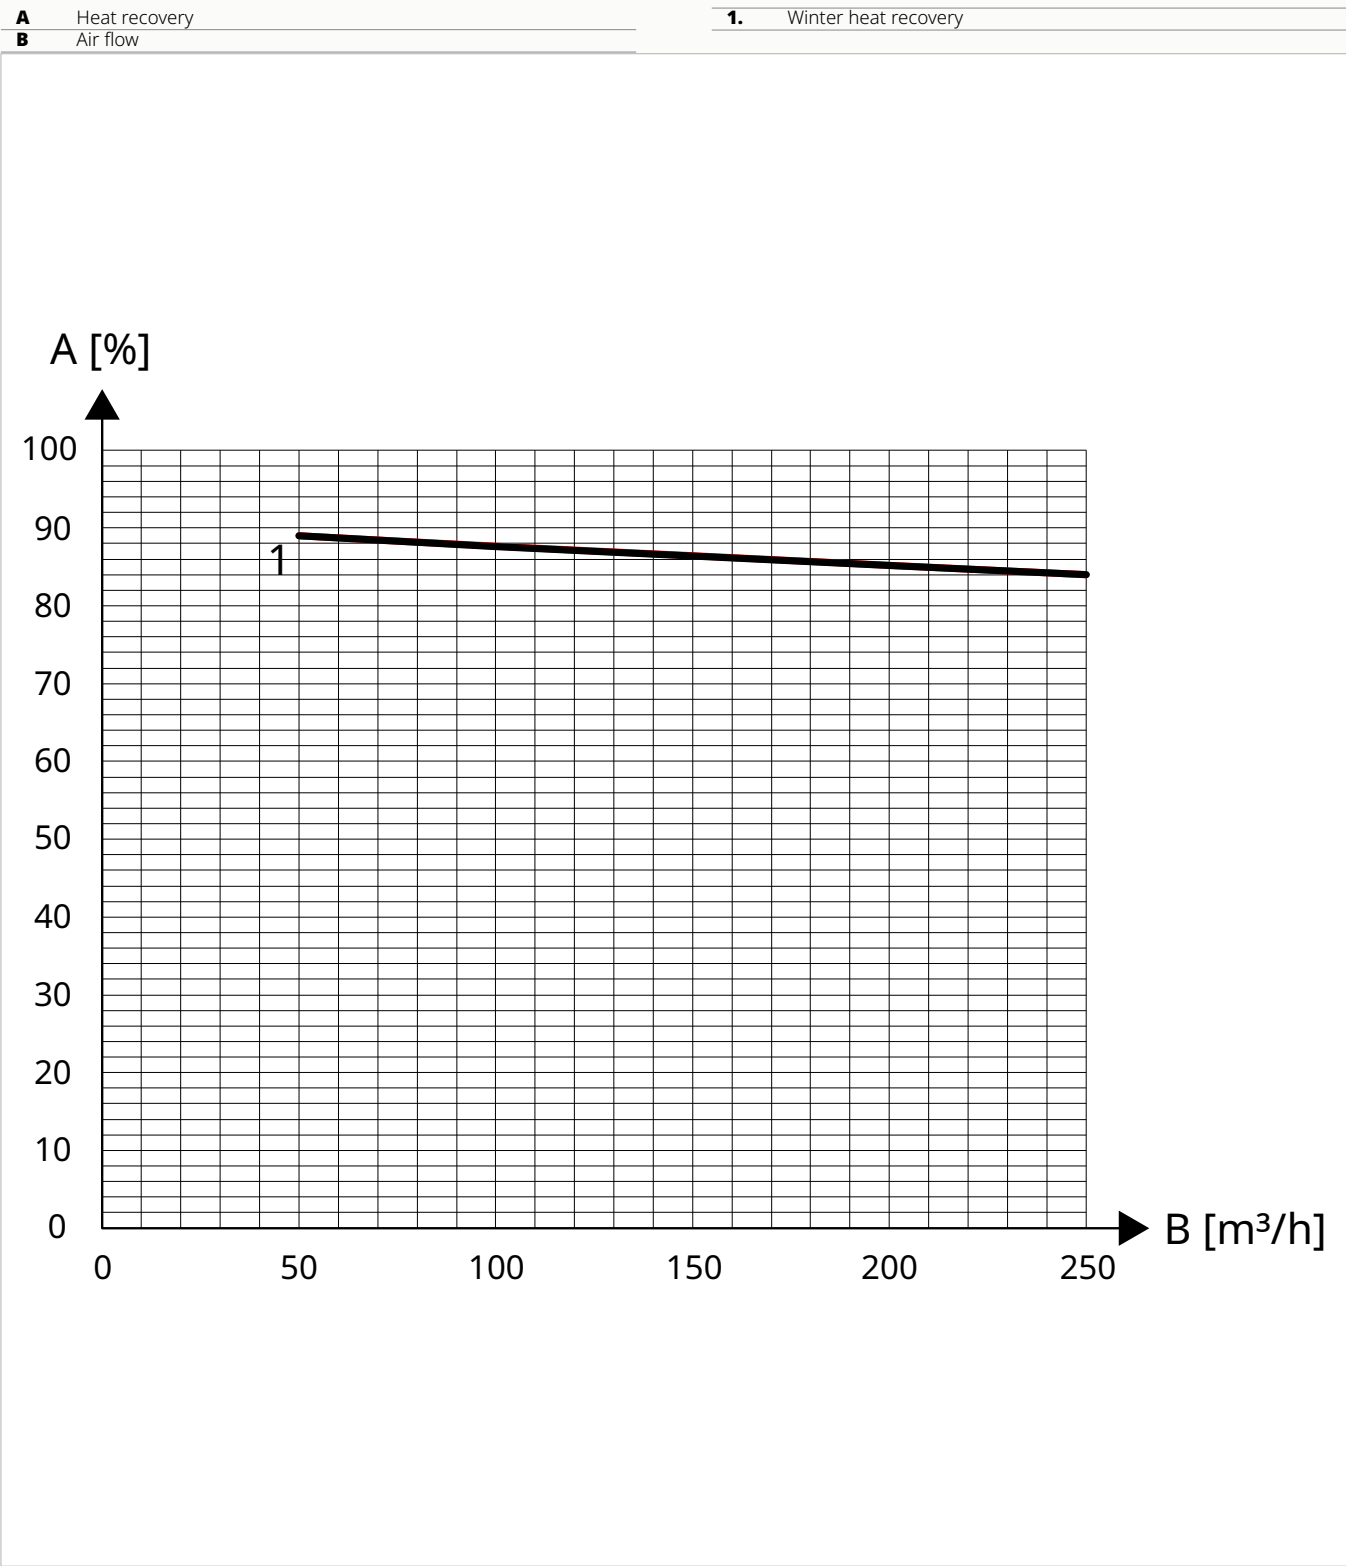

**Summer heat recovery**


**A** Heat recovery  
**B** Air flow

**1.** Summer heat recovery

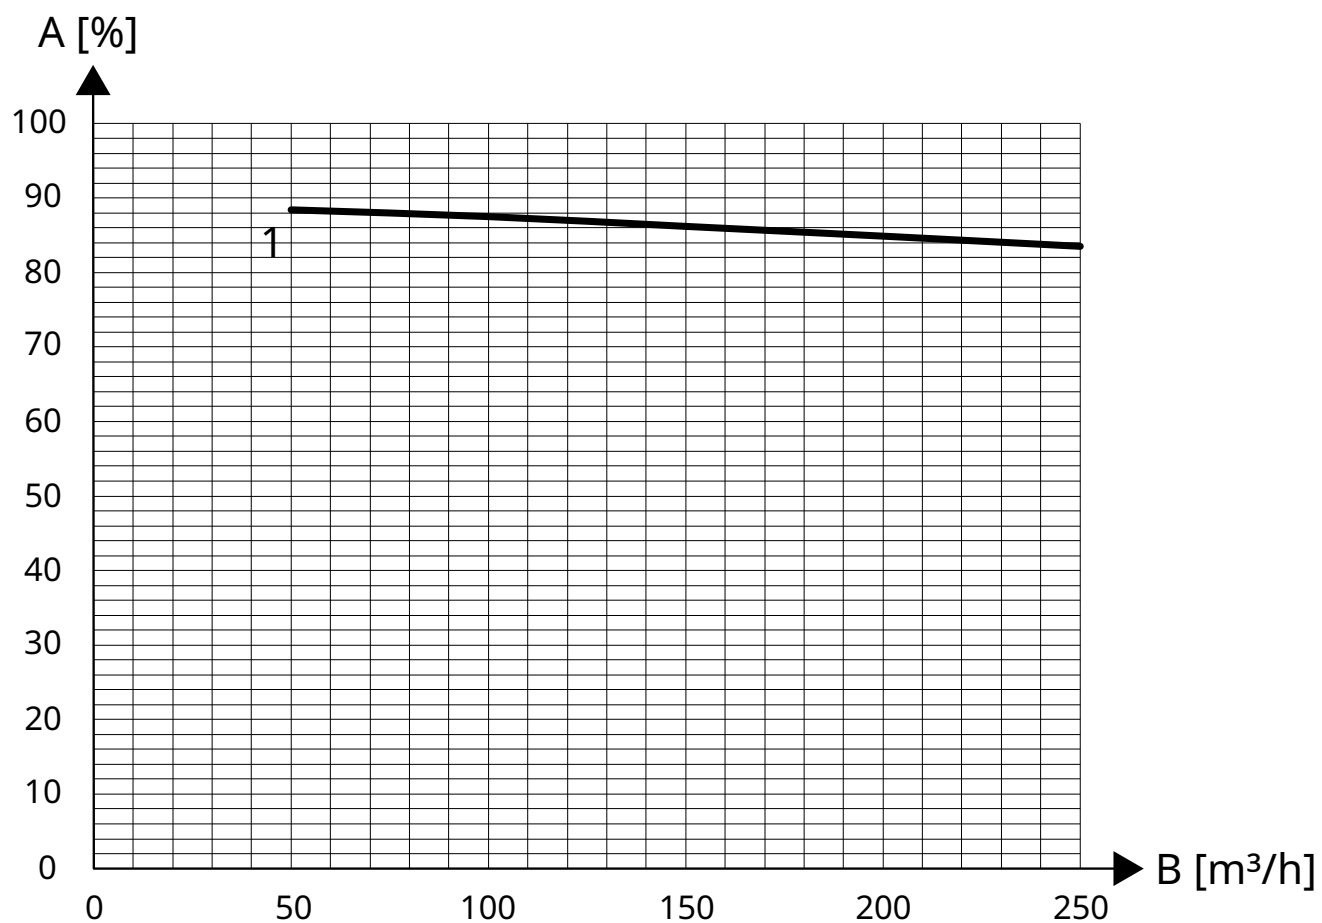


**Size 30**

**Winter heat recovery**

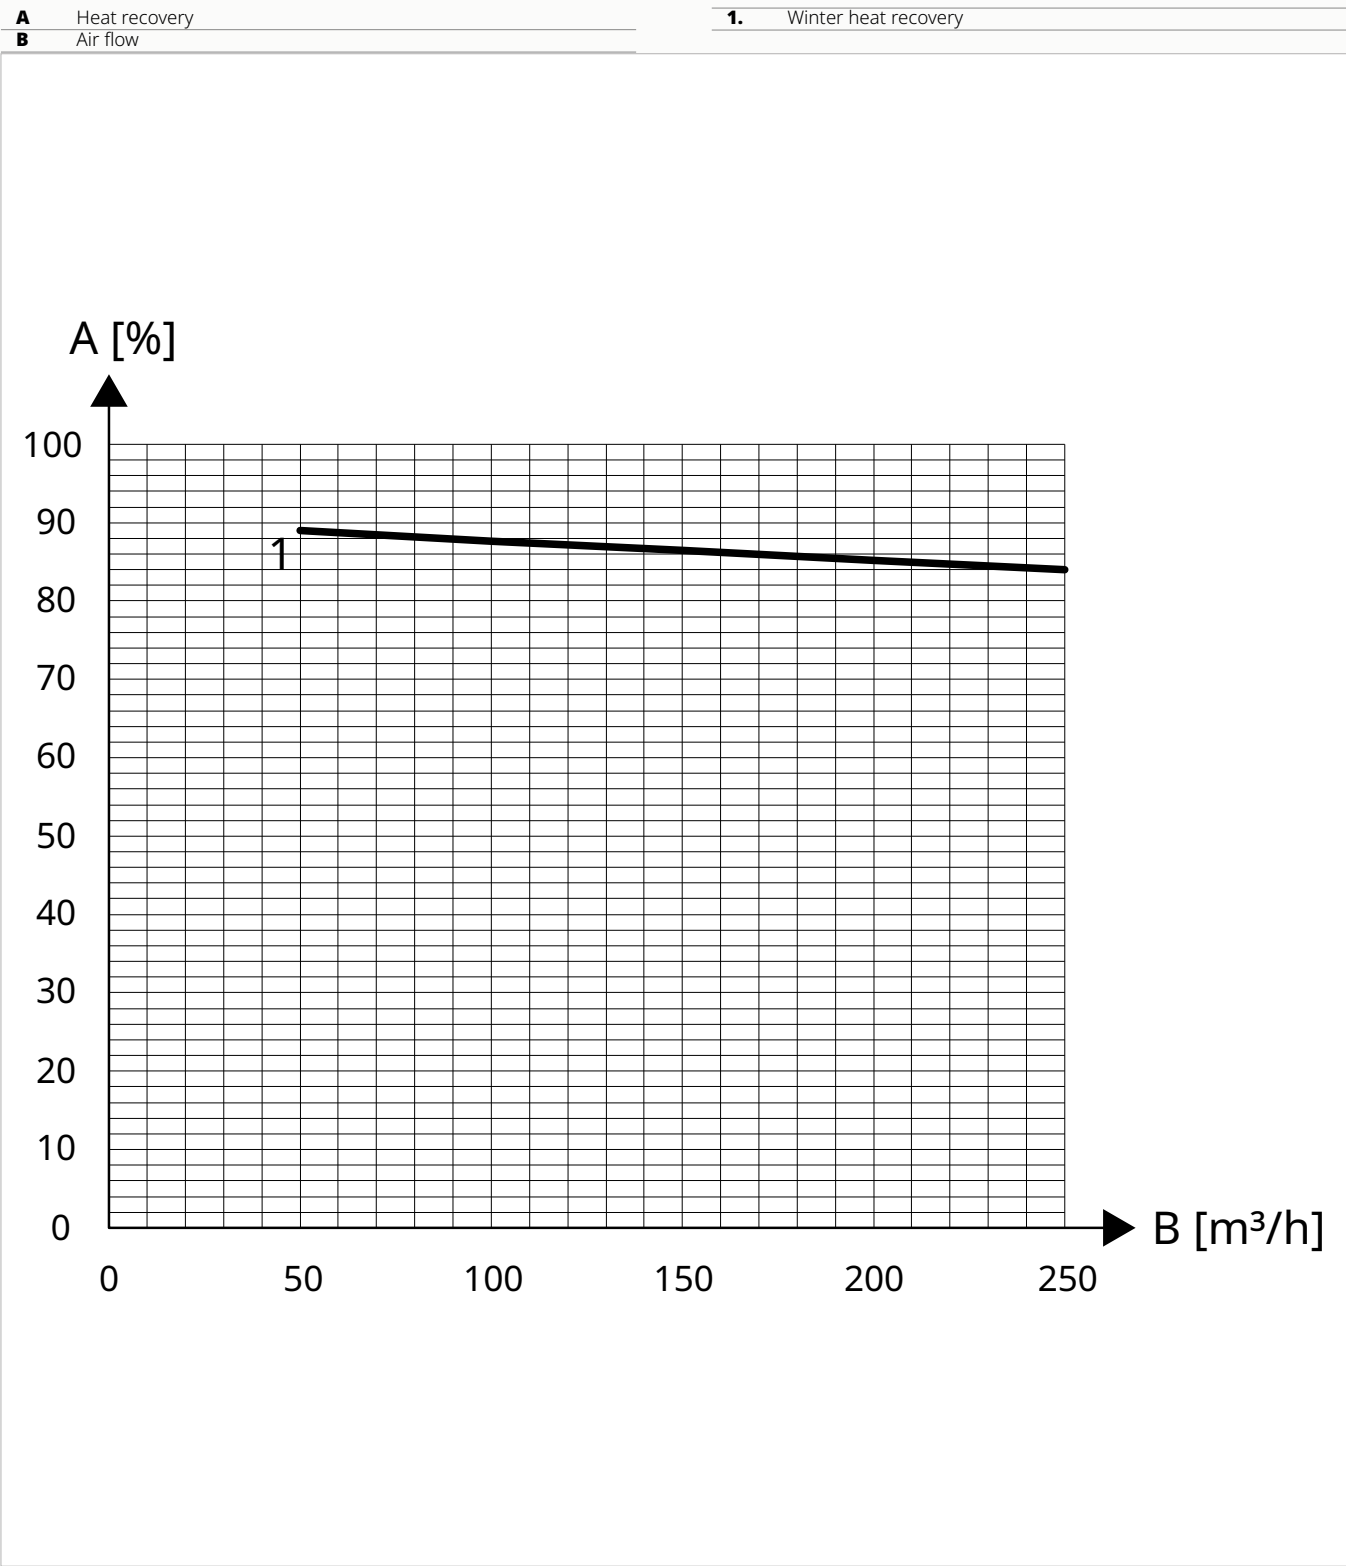


Summer heat recovery

|          |               |           |                      |
|----------|---------------|-----------|----------------------|
| <b>A</b> | Heat recovery | <b>1.</b> | Summer heat recovery |
| <b>B</b> | Air flow      |           |                      |

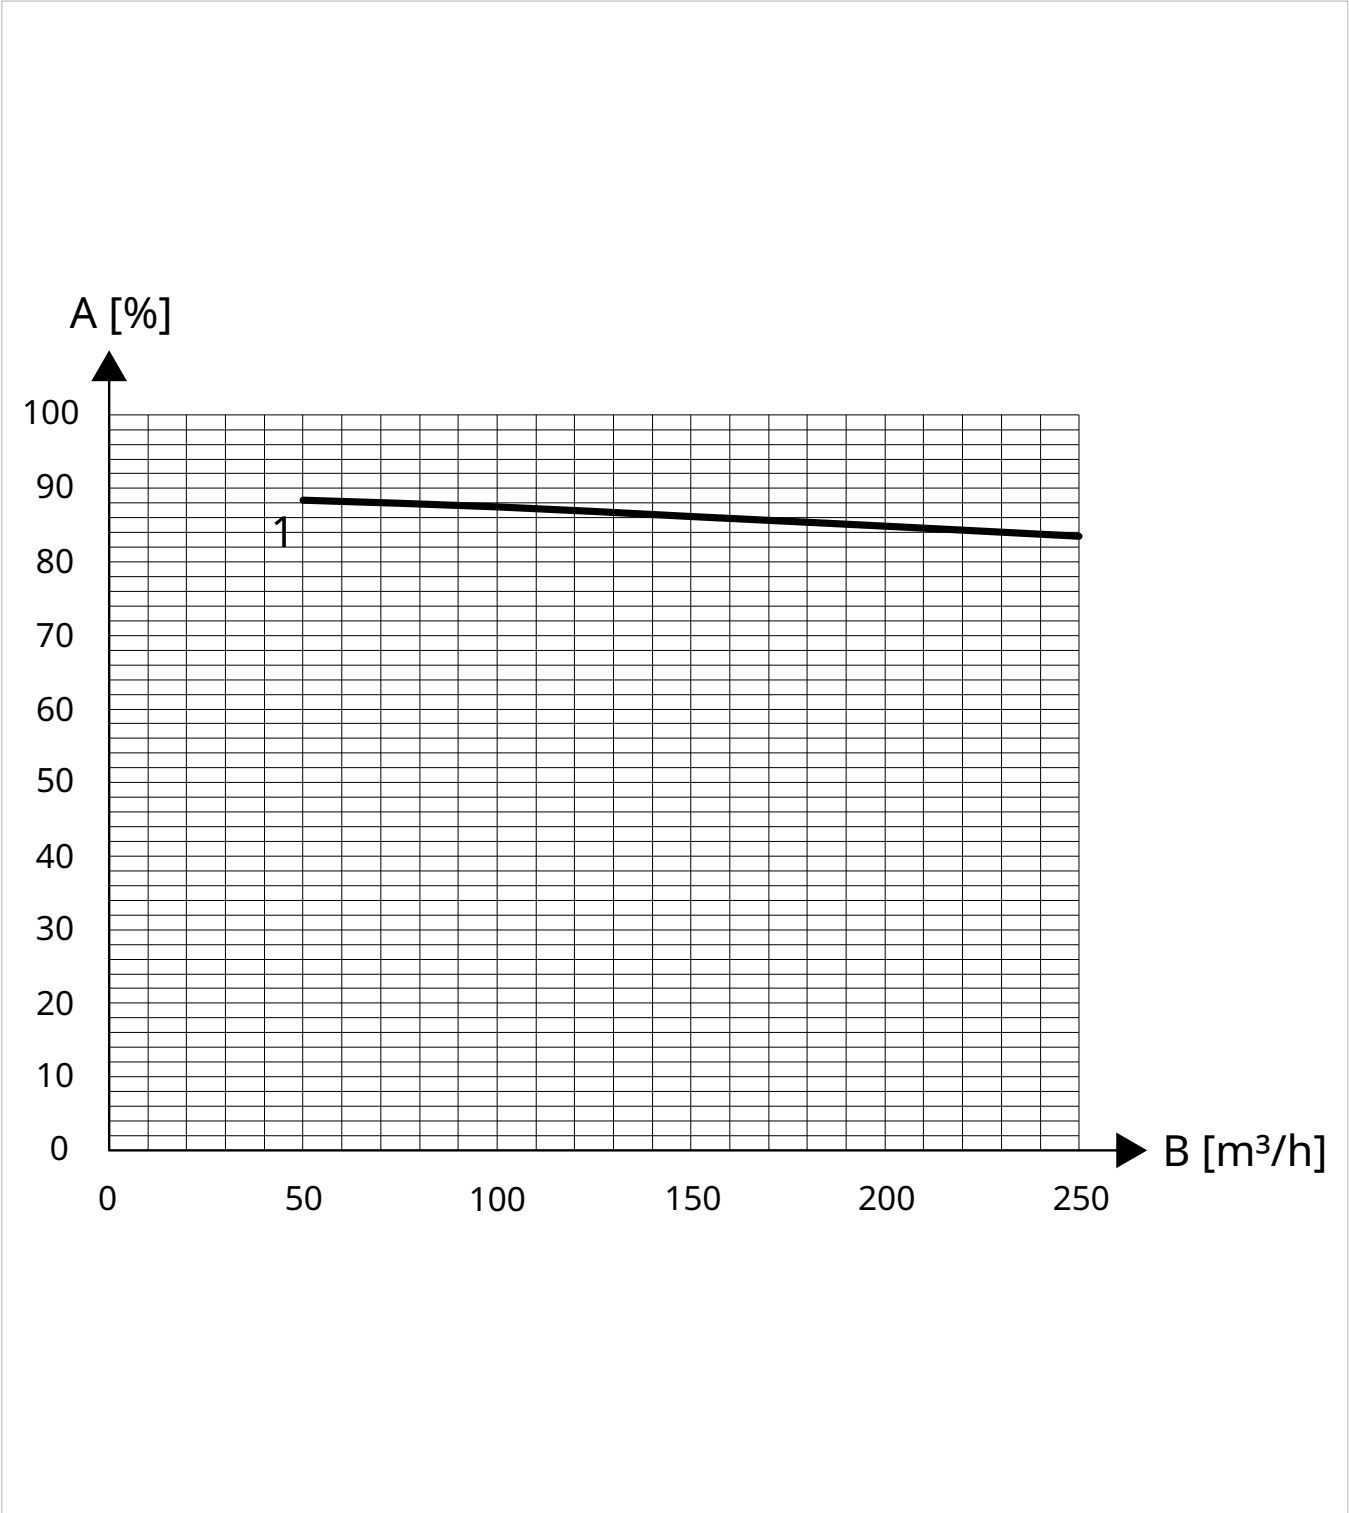


9.4 Operating limits


Sensible version winter operating limits

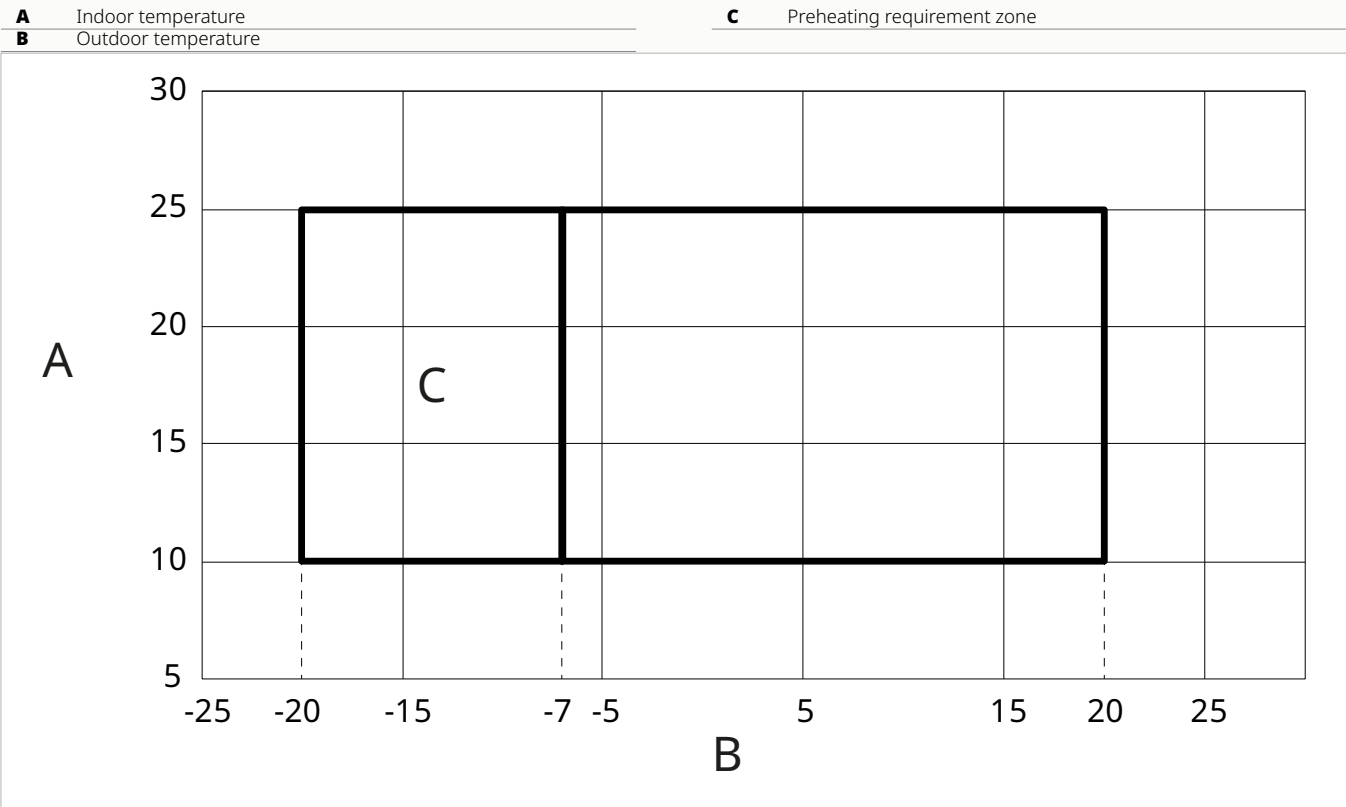


Sensible version summer operating limits

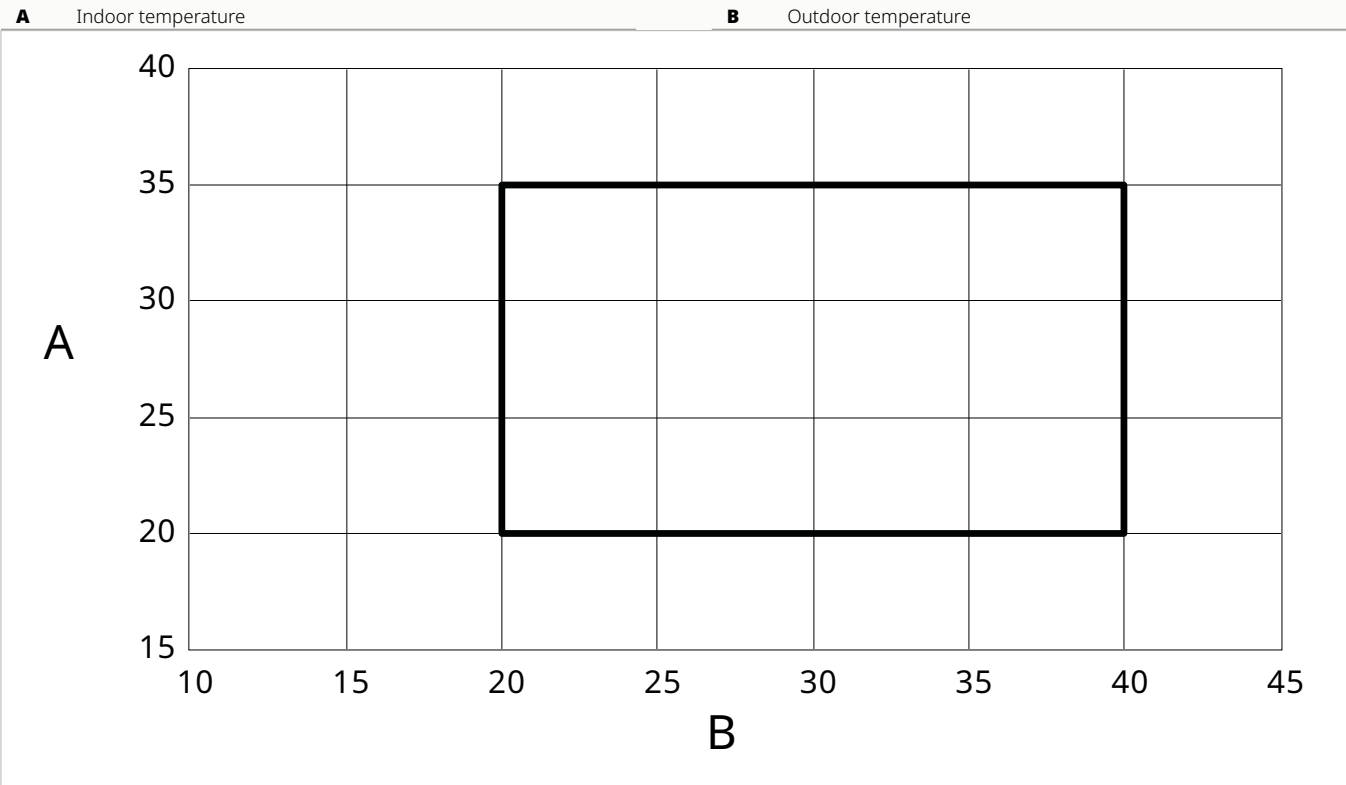

Enthalpy version winter operating limits

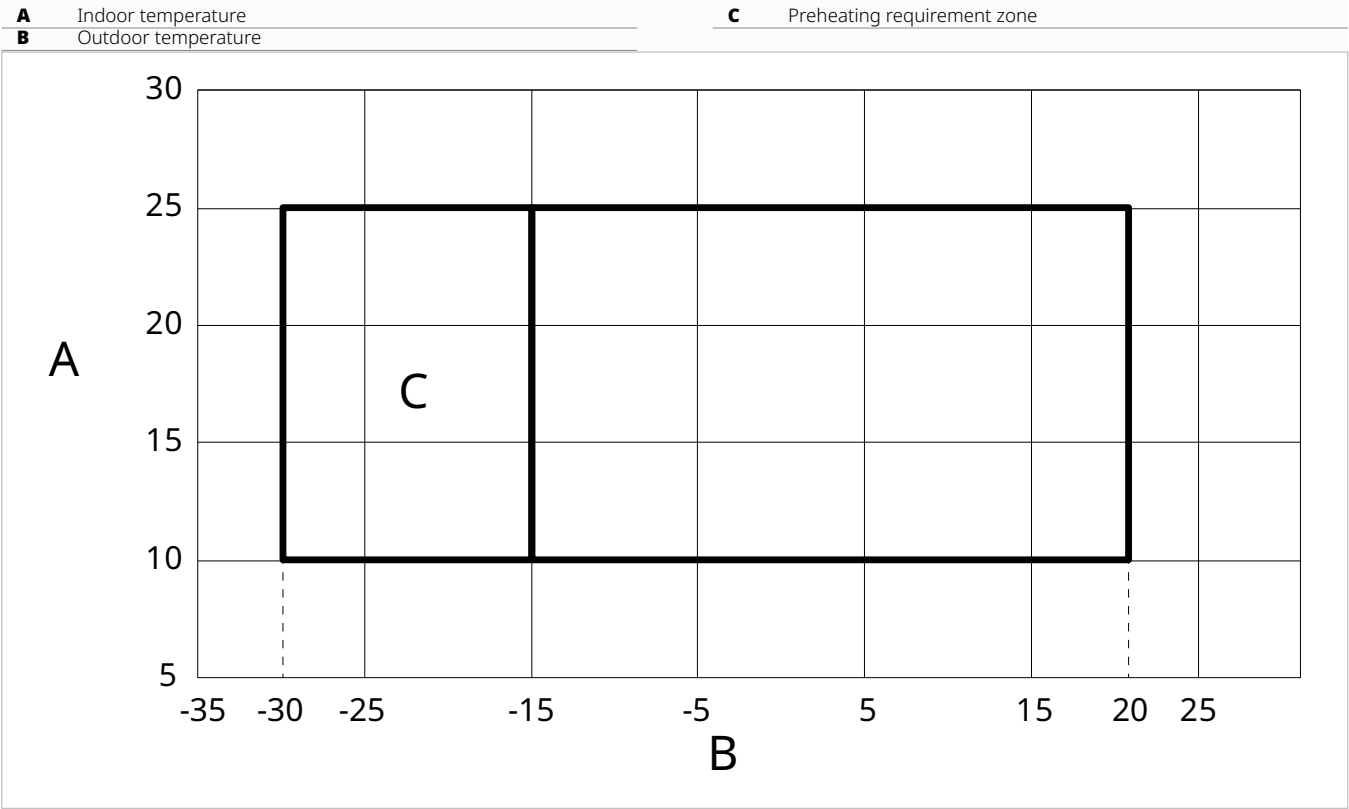

Enthalpy version summer operating limits

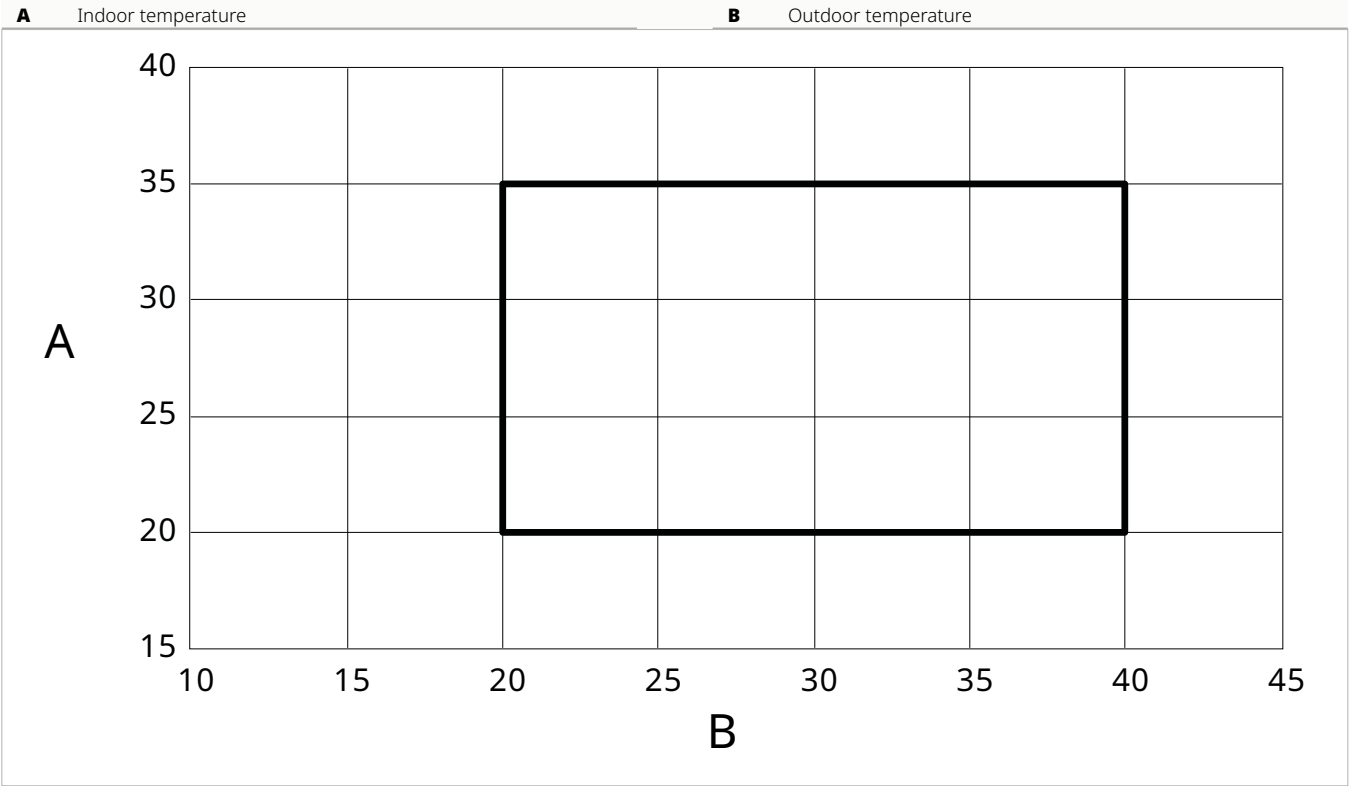









## 9.5 Dimensions

### Size 15

**A** Electrical panel  
**B** Condensate drain  
**C** Power supply







**D** Filter port  
**E** Circular couplings Ø 160 female  
**F** Installation bracket

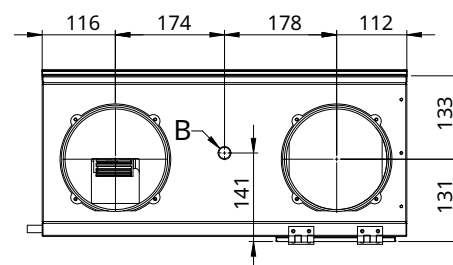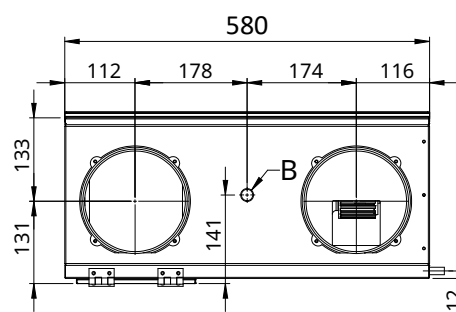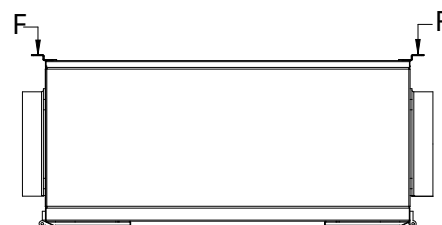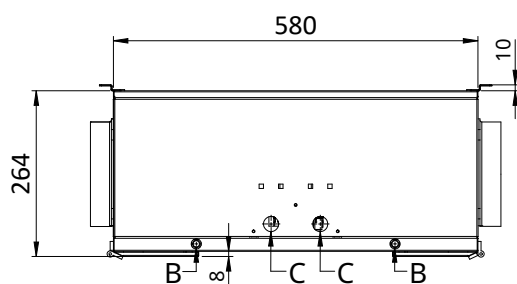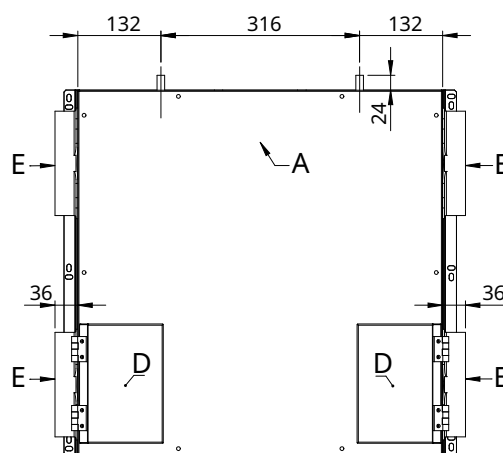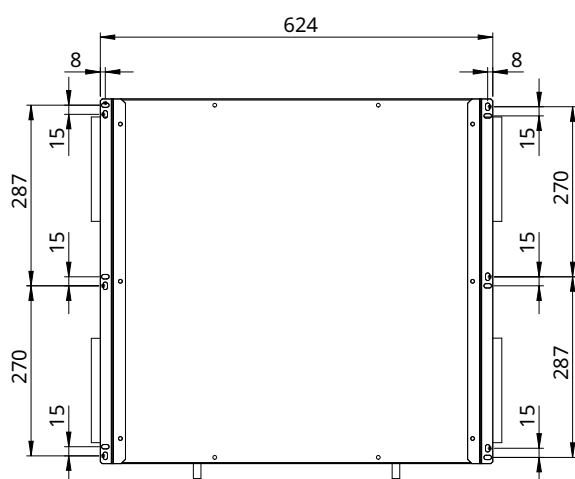

**Size 20 - 30**

**A** Electrical panel  
**B** Condensate drain  
**C** Power supply

**D** Filter port  
**E** Circular couplings Ø 160 female  
**F** Installation bracket

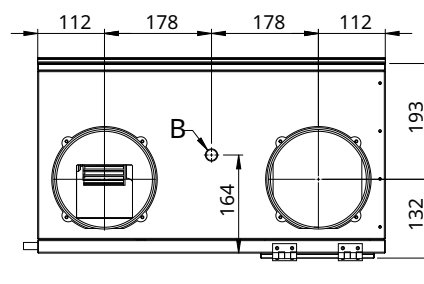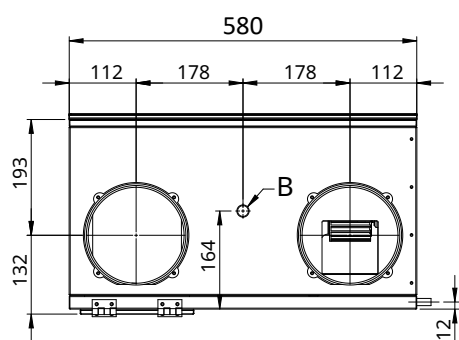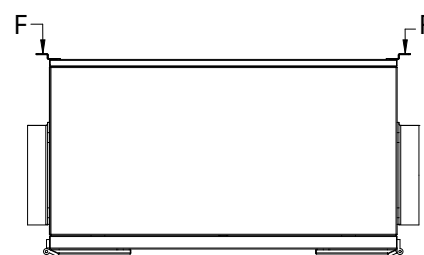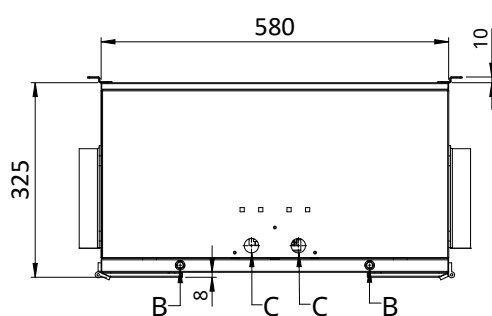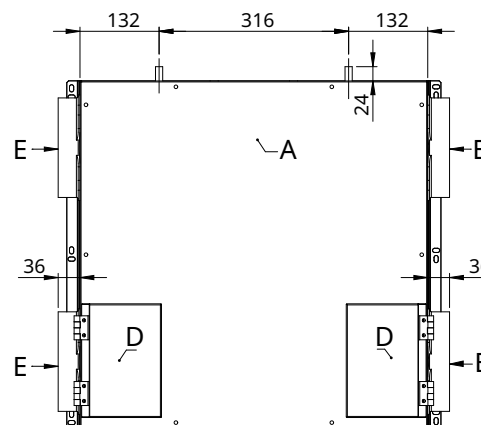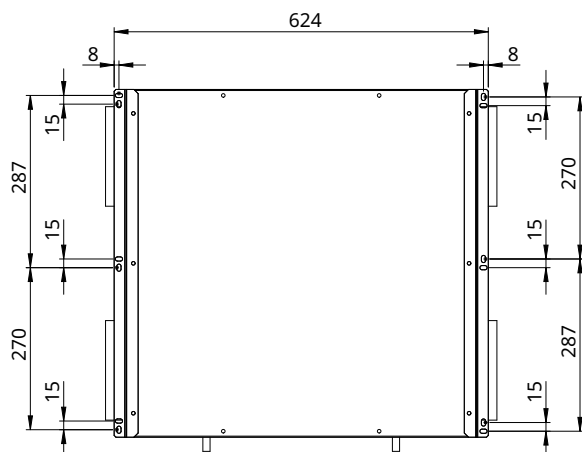

## 9.6 Ecodesign classification

| Models   | u.m.                        | 15Z  |
|--|-----------------------------|--|
| <b>ECODESIGN ErP data (1)</b>                            |                             |  |
| Supplier's name  |                             | PANASONIC  |
| Model identifier   |                             | Aquarea Vent 15Z   |
| Cold specific energy consumption SEC                     | kWh/<br>(m <sup>2</sup> Da) | -77,71   |
| Average specific energy consumption SEC                  | kWh/<br>(m <sup>2</sup> Da) | -39,57   |
| Warm specific energy consumption SEC                     | kWh/<br>(m <sup>2</sup> Da) | -15,10   |
| SEC class  |                             | A  |
| Declared typology  |                             | RVU - Bidirectional  |
| Type of drive  |                             | Variable speed   |
| Type of heat recovery                                    |                             | Recuperative   |
| Thermal efficiency                                       | %                           | 87,1   |
| Maximum flow rate  | m <sup>3</sup> /h           | 130  |
| Power input  | W                           | 80   |
| LWA sound power level                                    | dB(A)                       | 48   |
| Reference flow rate                                      | m <sup>3</sup> /s           | 0,0253   |
| Reference pressure                                       | Pa                          | 50   |
| SPI Specific power input                                 | W/m <sup>3</sup> /h         | 0,242  |
| CTRL control factor                                      |                             | 0,85   |
| Internal maximum leakage                                 | %                           | 1,9  |
| External maximum leakage                                 | %                           | 1,6  |
| Position and description of visual filter warning        |                             | Sybolized message on unit display and control panel and the instruction manual |
| Internet address for disassembly instructions            |                             | <a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>           |
| Cold annual electricity consumption AEC                  | kWh/year                    | 800,81   |
| Average annual electricity consumption AEC               | kWh/year                    | 263,81   |
| Warm annual electricity consumption AEC                  | kWh/year                    | 218,81   |
| Cold annual heating saved AHS                            | kWh/year                    | 8900,63  |
| Average annual heating saved AHS                         | kWh/year                    | 4549,81  |
| Warm annual heating saved AHS                            | kWh/year                    | 2057,36  |
| 1. Product fiche for RVU per EU Regulation No. 1254/2014 |                             |  |

| Models   | u.m.                        | 20Z  |
|--|-----------------------------|--|
| <b>ECODESIGN ErP data (1)</b>                            |                             |  |
| Supplier's name  |                             | PANASONIC  |
| Model identifier   |                             | Aquarea Vent 20Z   |
| Cold specific energy consumption SEC                     | kWh/<br>(m <sup>2</sup> Da) | -76,80   |
| Average specific energy consumption SEC                  | kWh/<br>(m <sup>2</sup> Da) | -38,78   |
| Warm specific energy consumption SEC                     | kWh/<br>(m <sup>2</sup> Da) | -14,37   |
| SEC class  |                             | A  |
| Declared typology  |                             | RVU - Bidirectional  |
| Type of drive  |                             | Variable speed   |
| Type of heat recovery                                    |                             | Recuperative   |
| Thermal efficiency                                       | %                           | 86,6   |
| Maximum flow rate  | m <sup>3</sup> /h           | 200  |
| Power input  | W                           | 120  |
| LWA sound power level                                    | dB(A)                       | 48   |
| Reference flow rate                                      | m <sup>3</sup> /s           | 0,0389   |
| Reference pressure                                       | Pa                          | 50   |
| SPI Specific power input                                 | W/m <sup>3</sup> /h         | 0,271  |
| CTRL control factor                                      |                             | 0,85   |
| Internal maximum leakage                                 | %                           | 1,8  |
| External maximum leakage                                 | %                           | 1,6  |
| Position and description of visual filter warning        |                             | Sybolized message on unit display and control panel and the instruction manual |
| Internet address for disassembly instructions            |                             | <a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>           |
| Cold annual electricity consumption AEC                  | kWh/year                    | 827,66   |
| Average annual electricity consumption AEC               | kWh/year                    | 290,66   |
| Warm annual electricity consumption AEC                  | kWh/year                    | 245,66   |
| Cold annual heating saved AHS                            | kWh/year                    | 8876,80  |
| Average annual heating saved AHS                         | kWh/year                    | 4537,63  |
| Warm annual heating saved AHS                            | kWh/year                    | 2051,86  |
| 1. Product fiche for RVU per EU Regulation No. 1254/2014 |                             |  |

| Models   | u.m.                        | 30Z  |
|--|-----------------------------|--|
| <b>ECODESIGN ErP data (1)</b>                            |                             |  |
| Supplier's name  |                             | PANASONIC  |
| Model identifier   |                             | Aquarea Vent 30Z   |
| Cold specific energy consumption SEC                     | kWh/<br>(m <sup>2</sup> Da) | -74,86   |
| Average specific energy consumption SEC                  | kWh/<br>(m <sup>2</sup> Da) | -36,84   |
| Warm specific energy consumption SEC                     | kWh/<br>(m <sup>2</sup> Da) | -12,43   |
| SEC class  |                             | A  |
| Declared typology  |                             | RVU - Bidirectional  |
| Type of drive  |                             | Variable speed   |
| Type of heat recovery                                    |                             | Recuperative   |
| Thermal efficiency                                       | %                           | 86,6   |
| Maximum flow rate  | m <sup>3</sup> /h           | 320  |
| Power input  | W                           | 250  |
| LWA sound power level                                    | dB(A)                       | 48   |
| Reference flow rate                                      | m <sup>3</sup> /s           | 0,0622   |
| Reference pressure                                       | Pa                          | 50   |
| SPI Specific power input                                 | W/m <sup>3</sup> /h         | 0,357  |
| CTRL control factor                                      |                             | 0,85   |
| Internal maximum leakage                                 | %                           | 1,8  |
| External maximum leakage                                 | %                           | 1,6  |
| Position and description of visual filter warning        |                             | Sybolized message on unit display and control panel and the instruction manual |
| Internet address for disassembly instructions            |                             | <a href="http://www.aircon.panasonic.eu">www.aircon.panasonic.eu</a>           |
| Cold annual electricity consumption AEC                  | kWh/year                    | 905,24   |
| Average annual electricity consumption AEC               | kWh/year                    | 368,24   |
| Warm annual electricity consumption AEC                  | kWh/year                    | 323,24   |
| Cold annual heating saved AHS                            | kWh/year                    | 8876,80  |
| Average annual heating saved AHS                         | kWh/year                    | 4537,63  |
| Warm annual heating saved AHS                            | kWh/year                    | 2051,86  |
| 1. Product fiche for RVU per EU Regulation No. 1254/2014 |                             |  |

## 10. ACCESSORIES

### 10.1 Electrical resistance


#### Description


The electric air heater accessory heats the air in the ventilation ducts. It can be installed for pre-heating the unit in

cold climates and for post-heating to increase the outlet air temperature and heat the rooms. It is a flexible solution to improve thermal comfort in ventilation systems. It is available in two capacities: 0.5 kW and 1.0 kW.

#### Dimensions


##### Electrical duct heater 0.5 kW, DN 160 mm

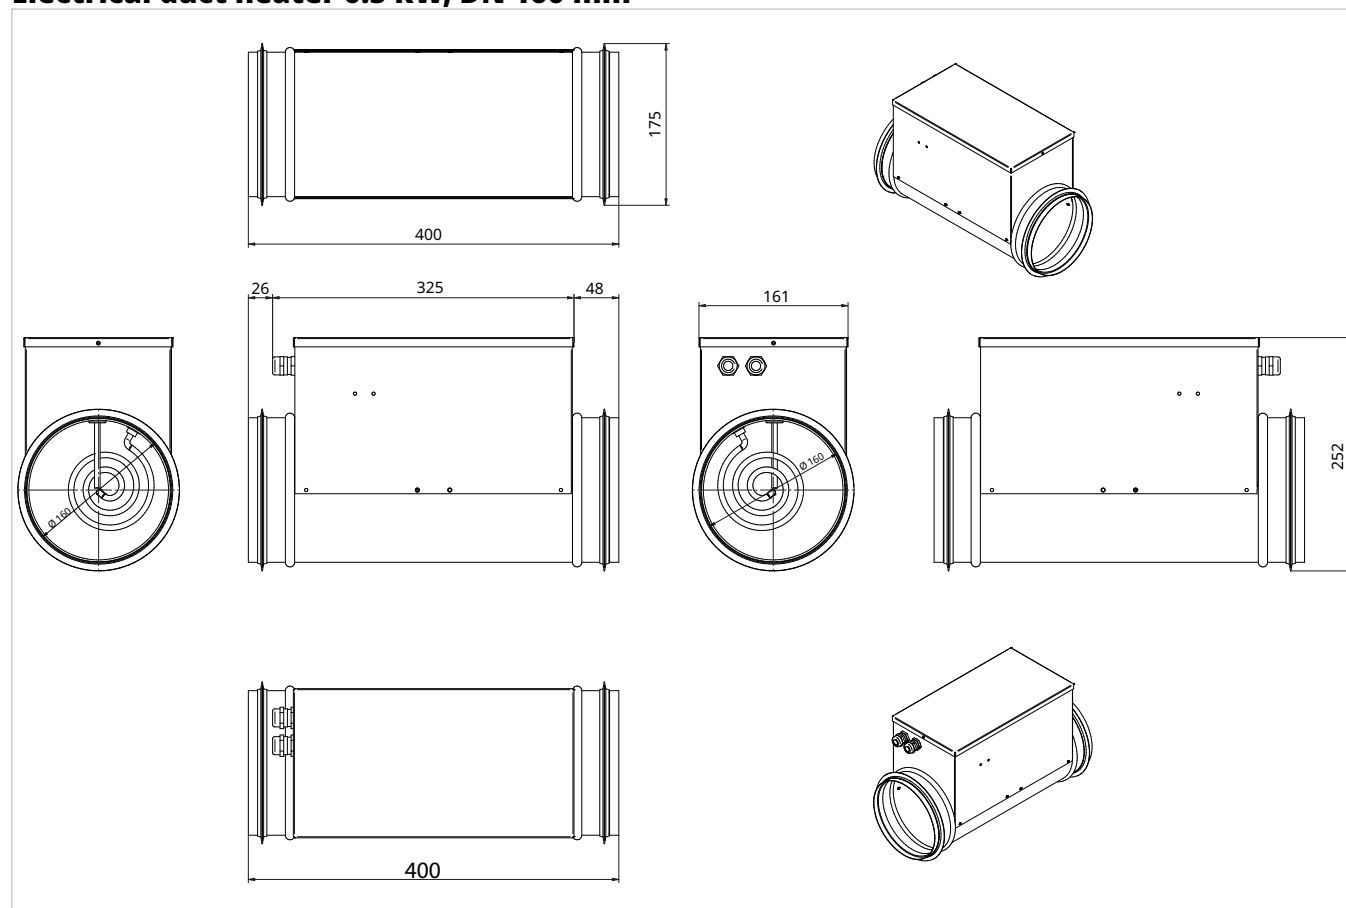

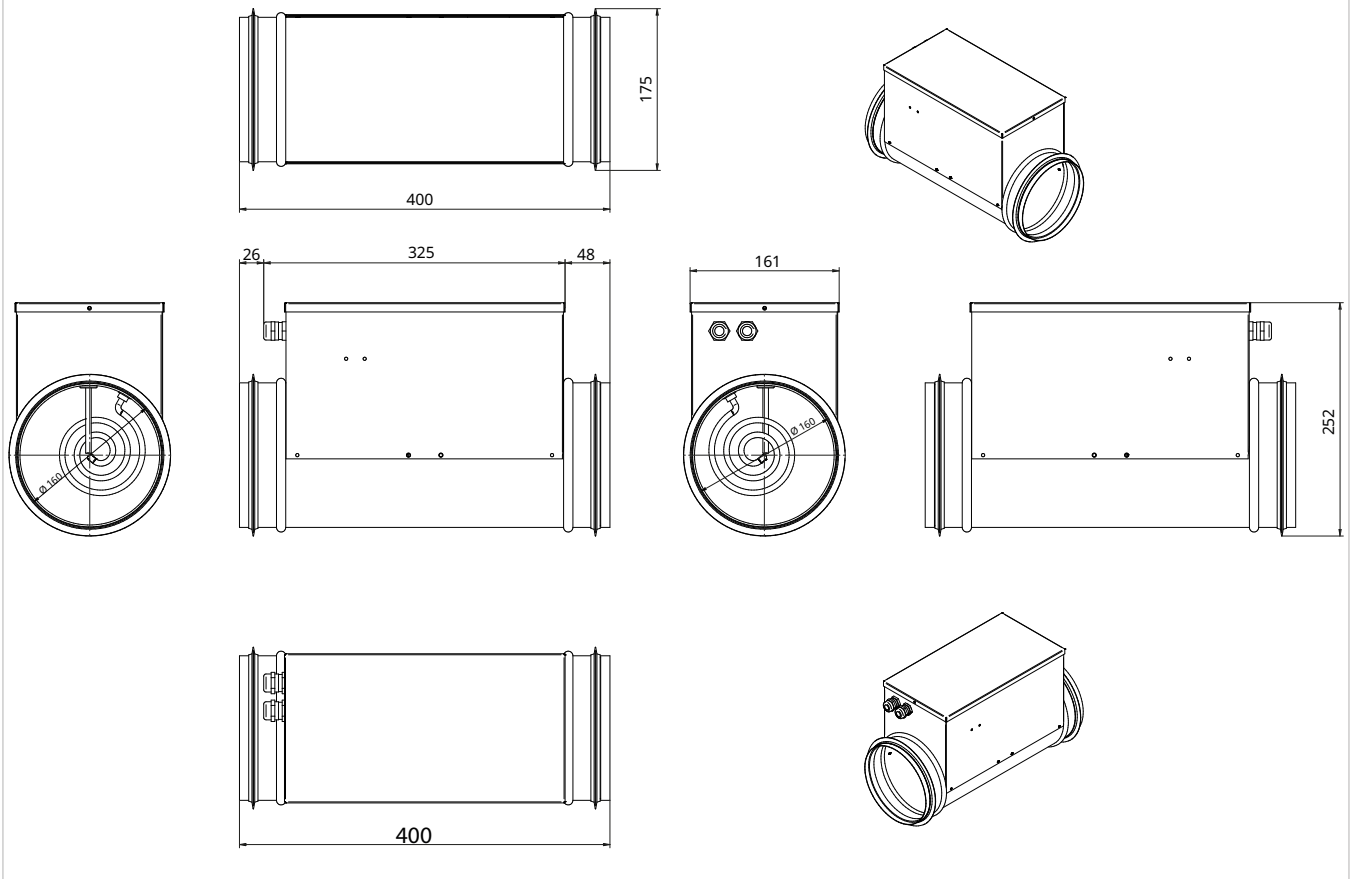
**Electrical duct heater 1.0 kW, DN 160 mm**

Wiring diagram

Wiring diagram

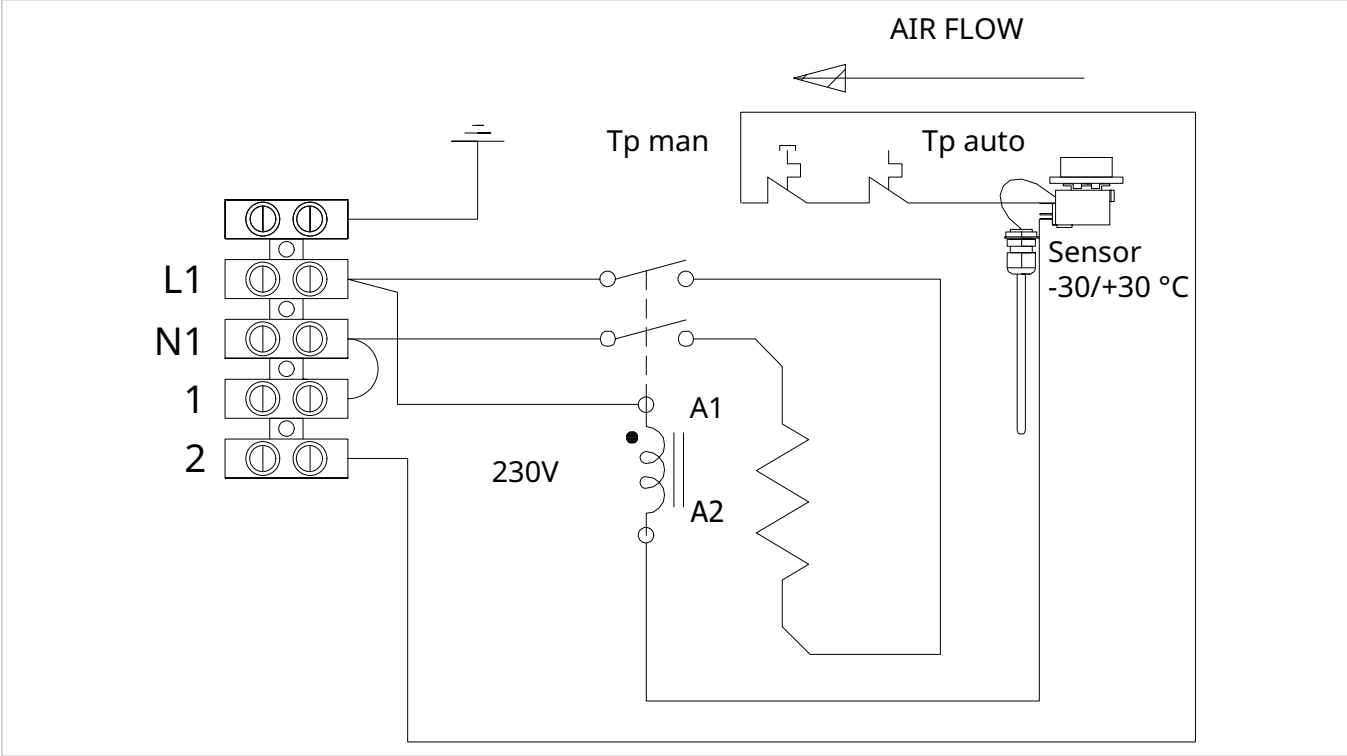


| Connections to be made by the customer |                             |   |
|--|-----------------------------|---|
| L - N -PE                              | Unit power supply           | 230 / 1 / 50  |
| 1 - 2                                  | Resistance On - Off contact | Voltage contact<br>Contact closed (active resistance) |

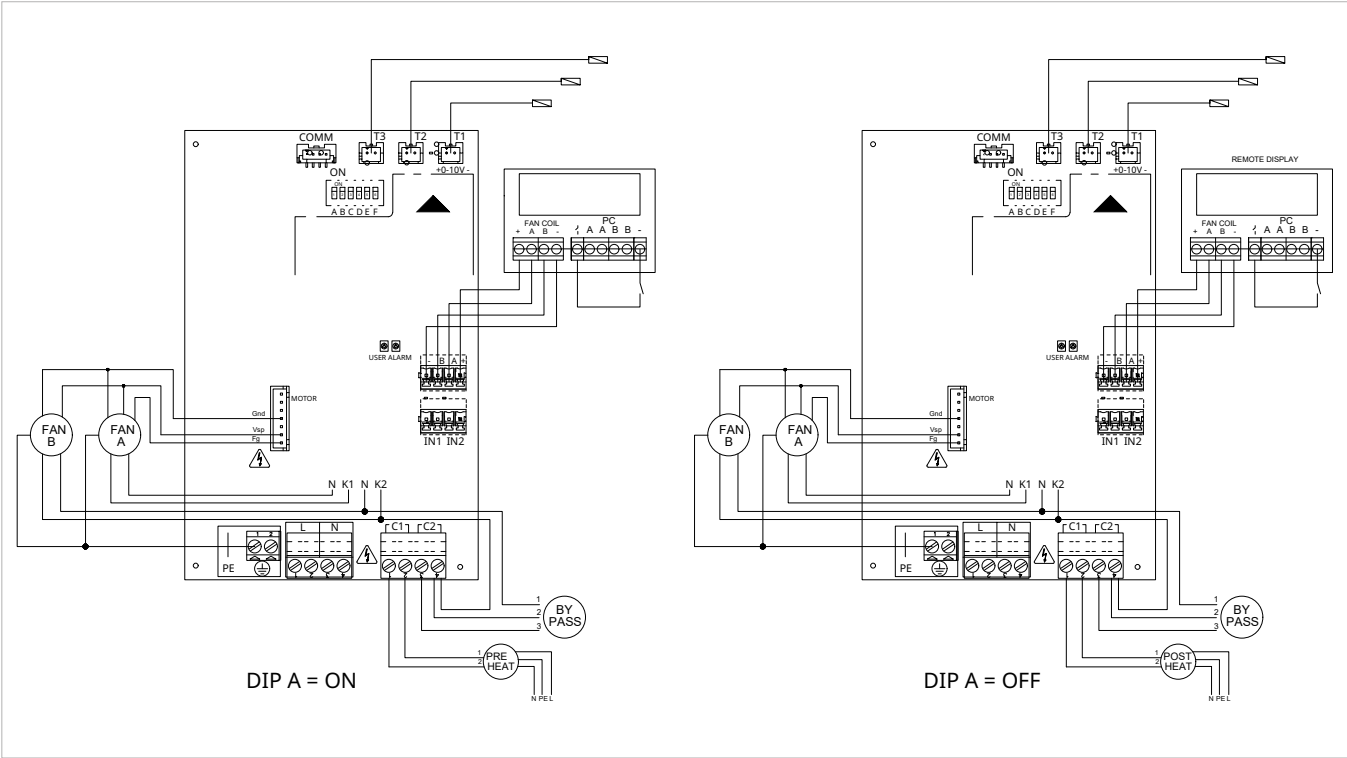



## Wiring diagram

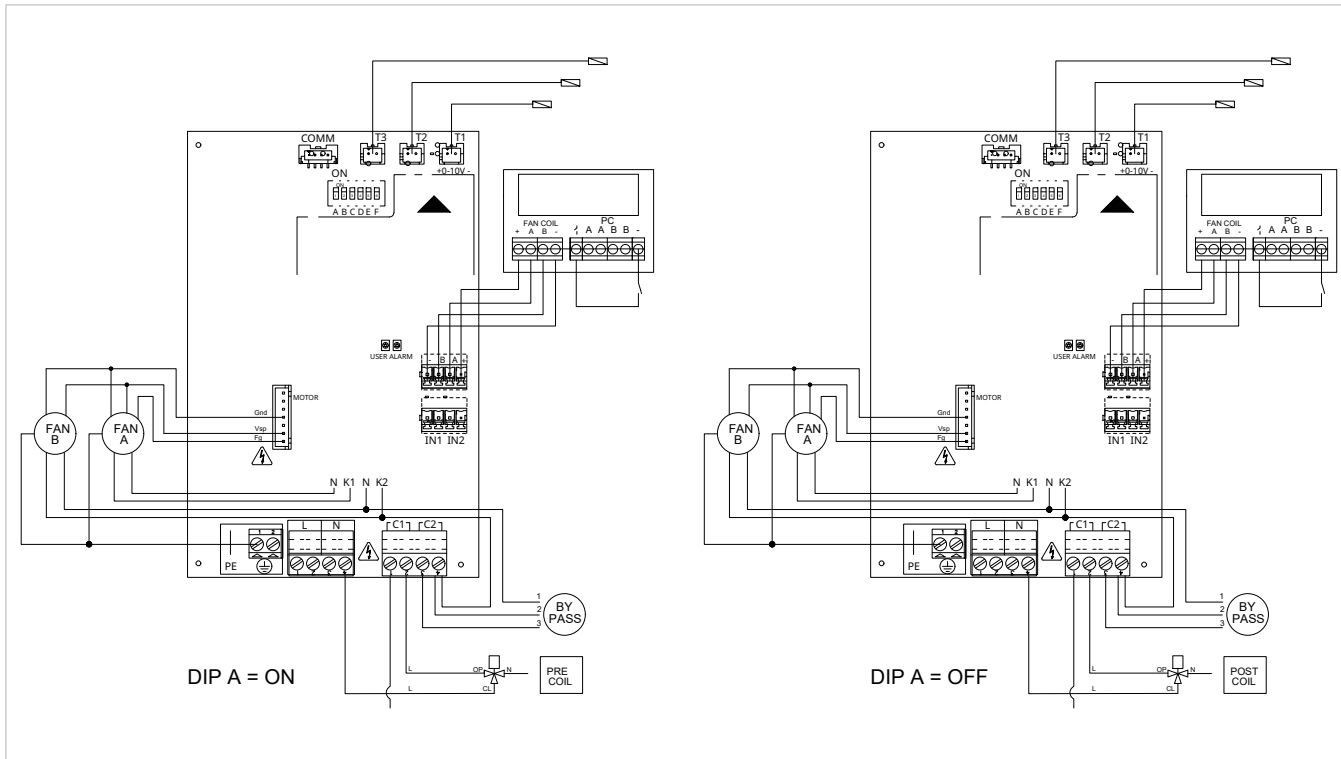





# Panasonic®

Panasonic Corporation  
1006 Kadoma, Kadoma City, Osaka, Japan